

XDi

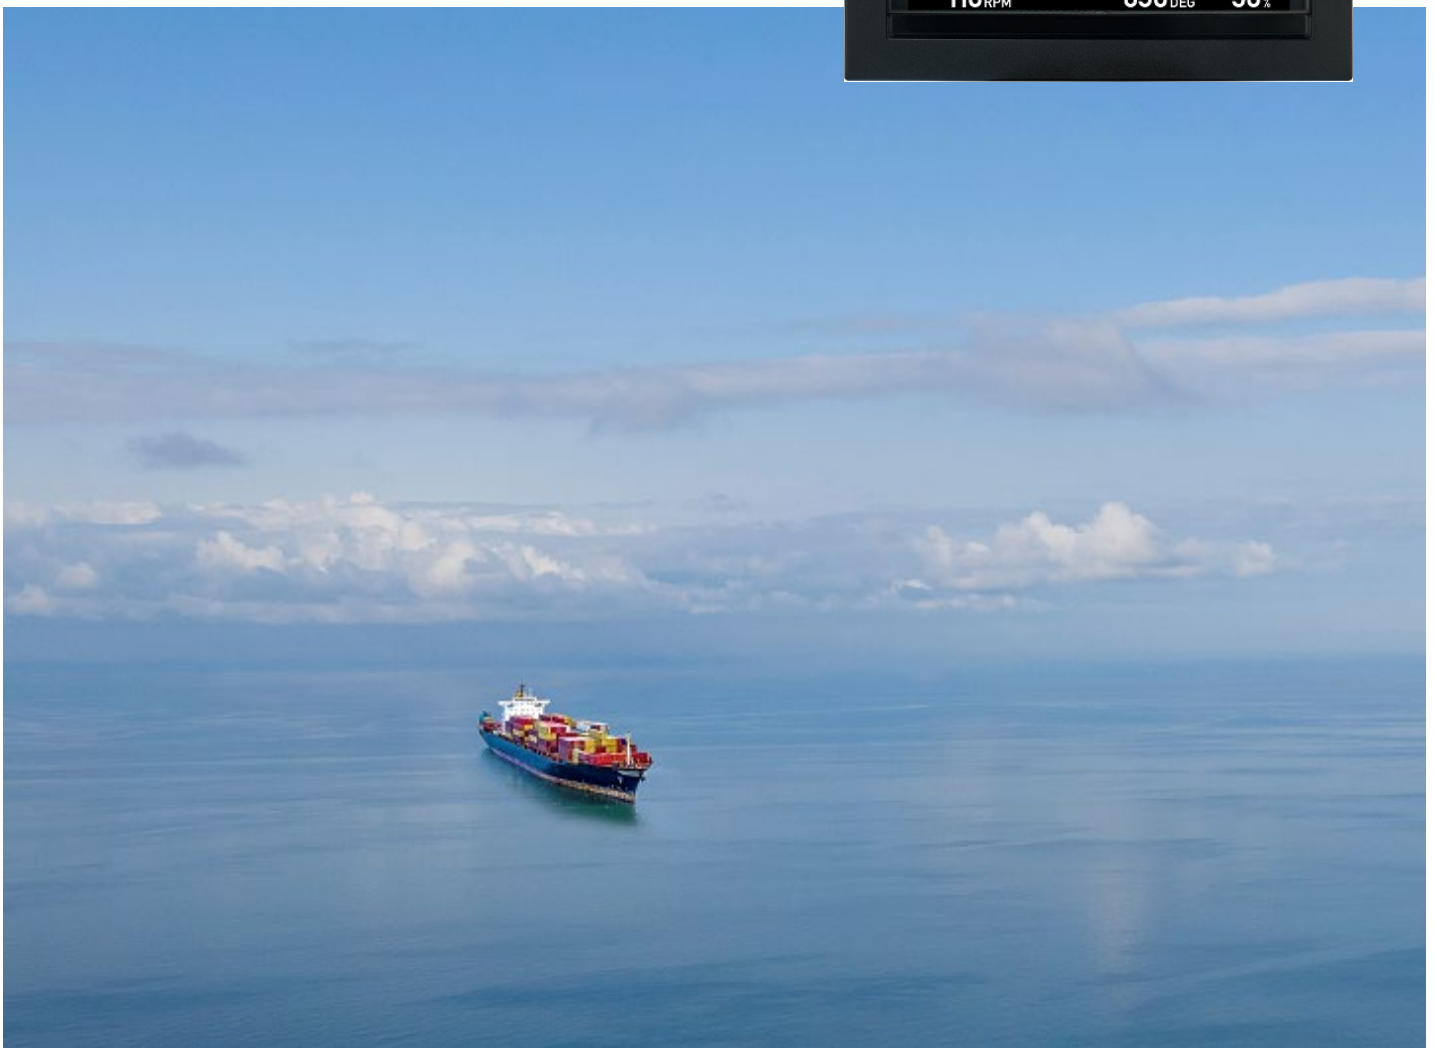
Flexible display indicator

XDi Standard virtual indicator library

4189350067-E



Marine
Instruments



1	Introduction.....	3
2	Standard library overview	3
2.1	Library owner 1: DEIF standard propulsion indicator libraries.....	3
2.2	Library owner 2: DEIF standard Wind/Weather indicator libraries.....	4
2.3	Library owner 3: DEIF standard Navigation indicator libraries.....	5
3	XDi library structure	6
3.1	Lib. owner 1: Standard product profiles (PP) for Propulsion indicators.....	7
3.2	Lib. owner 2: Standard Product Profiles (PP) for Wind/Weather indicators.....	7
3.2.1	Lib. owner 3: Standard Product Profiles (PP) for Navigation indicators	10
3.3	More information about dimming.....	11
4	Standard input types (VS)	12
4.1	Standard input types supported in standard XDi libraries.....	12
5	Library identification.....	13
6	Standard or customised library	14
7	XDi library change / upgrade /documentation.....	14
8	Relevant XDi documentation.....	16
9	Appendix 1– CANopen protocol	17
9.1	Input data.....	17
9.2	Dimmer data.....	20
9.3	Node IDs related to the used TPDOs	20
9.3.1	Actual data.....	21
9.3.2	Commanded (set point data)	21
9.3.3	Dimmer data	21
9.4	TPDO and XDi-net input switching	21

1. Introduction

The DEIF standard XDi libraries offer a collection of virtual indicators (VI) for selected applications, used by the XDi display. All relevant indicators are designed and approved according to the Marine Equipment Directive (MED) and are therefore wheel-marked.

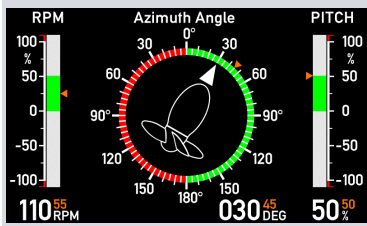
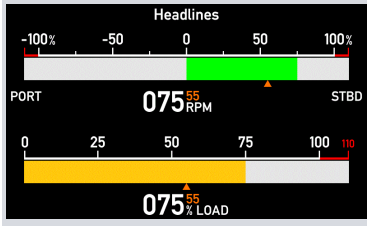
2. Standard library overview

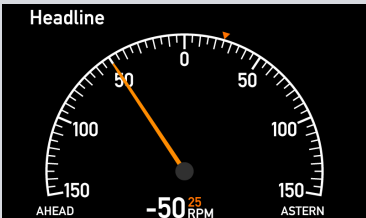
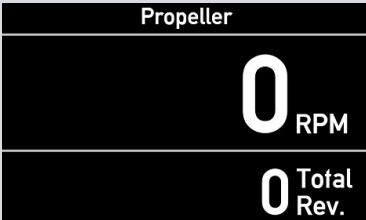
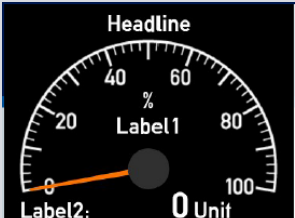
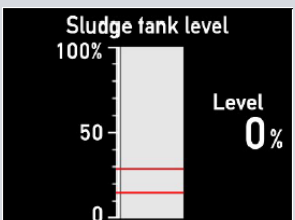
The following libraries are available for XDi 96, XDi 144 and XDi 192 and grouped under a library owner.

Please note that new standard libraries for other types of applications will be added over time.

2.1 Library owner 1: DEIF standard propulsion indicator libraries

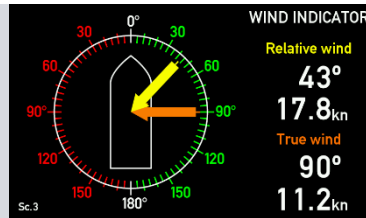
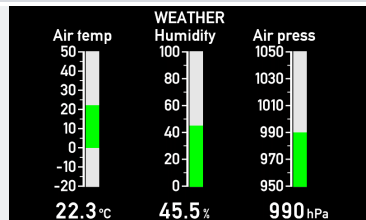
Single screen indicators with MED (Wheel-mark) approval when appropriate.

Indicator type	Data inputs	Library product class	Library number	Example
Azimuth	1-2	Dual (D)	001	
	3 or more	Multi (M)	001	
Tunnel thruster	1-2	Dual (D)	011	
	3 or more	Multi (M)	011	
Main propulsion	1-2	Dual (D)	021	
	3 or more	Multi (M)	021	
Rudder angle	1-2	Dual (D)	031	
	3 or more	Not applicable	-	
Waterjet	1-2	Dual (D)	032	
	3 or more	Not applicable	-	
RPM (-X..0..X, 0..X)	1-2	Dual (D)	041, 042	

	3 or more	Not applicable	-	
Revolution counter	1-2	Dual (D)	043	
	3 or more	Not applicable	-	
Universal large digital (XDi 96 only)	1-2	Dual (D)	051	
	3 or more	Not applicable	-	
Universal large with scale (XDi 96 only)	1-2	Dual (D)	052	
	3 or more	Not applicable	-	
Tank level (XDi 96 only)	1-2	Dual (D)	053	
	3 or more	Not applicable	-	

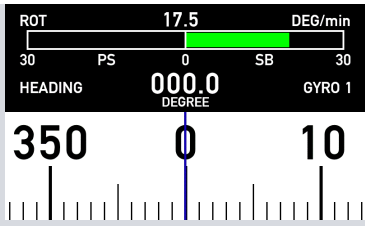
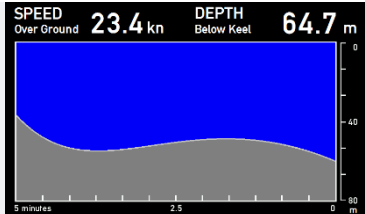
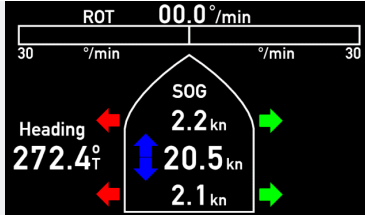
2.2 Library owner 2: DEIF standard Wind/Weather indicator libraries.

XDi-N Virtual indicators with up to 4 screens.

Indicator type	Data inputs	Library product class	Library number	Example
Wind	3 or more	Navigation	001	
Weather	3 or more	Navigation	011	

2.3 Library owner 3: DEIF standard Navigation indicator libraries.

XDi-N Virtual indicators with up to 4 screens. MED (Wheel-marked) when appropriate.

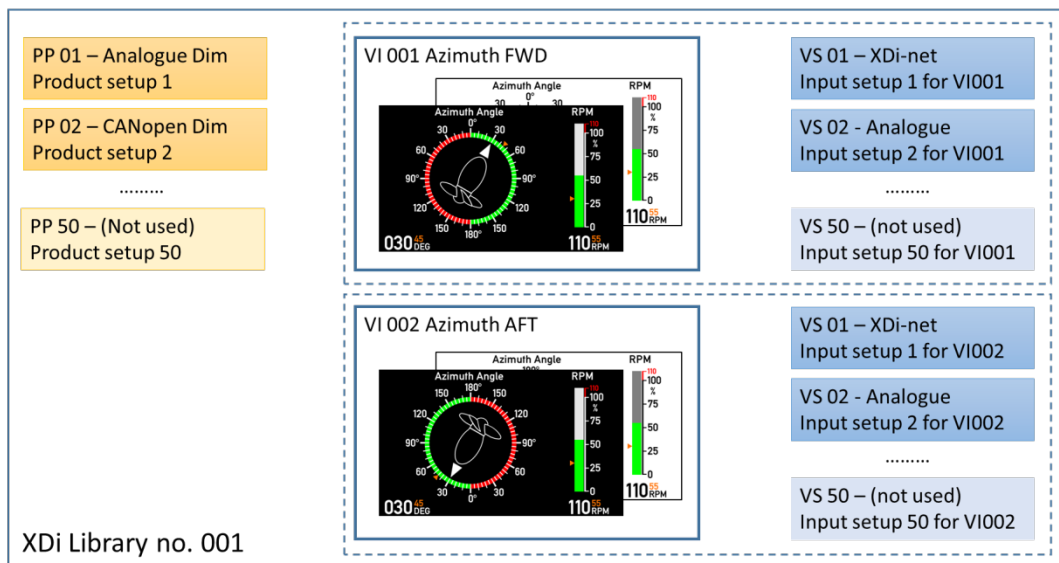
Indicator type	Data inputs	Library product class	Library number	Example
Heading	3 or more	Navigation	001	
Speed and Depth (XDi 144 and 192 only)	3 or more	Navigation	011	
ROT	1-2	Dual	002	
Docking displays (XDi 144 and 192 only)	3 or more	Navigation	021	
GPS & info displays (XDi 144 and 192 only)	3 or more	Navigation	022	

3. XDi library structure

The DEIF standard libraries contain a selection of application-specific virtual indicators (VI), each with a selection of input setup profiles (VS) and product profiles (PP). The profiles contain the default input setup parameters for different input types (for example CANopen, XDi-net, analogue, digital RPM or NMEA).

The first time you power up the XDi, a wizard will automatically guide you through the selection:

Select a Product Profile (PP) → Select a Virtual Indicator (VI) → Select a input profile (VS) for the VI



A library may contain up to 50 PPs and 100 VIs, each with up to 50 VS profiles.

3.1 Lib. owner 1: Standard product profiles (PP) for Propulsion indicators

DEIF standard propulsion libraries contain the same collection of product profiles (PPs), where the two CAN buses are pre-configured to support XDi-net, and where different dimmer input configurations are made available for easy selection.

Product profile Number (PP number)	Name	Dimmer group	Dimmer source	Day/night colour	Colour selection source
PP 01	XDi-net dimmer	Dimmer group 1	XDi-net and front panel control*	Automatic day/night shift at 70%	None
PP 02	Analogue dimmer 1	Dimmer group 1	Analogue potentiometer 0 to V_{ref} (maximum 30 V)** Slot 1, dimmer input Shared on XDi-net	Automatic day/night shift at 70 %	None
PP 03	CANopen dimmer	Dimmer group 1	TPDO COB-ID: 0x1A0, byte 0 See chapter <i>CANopen TPDOs</i>	Automatic day/night shift at 70 %	None
PP 04	Digital dimmer	Dimmer group 1	Digital dimmer input, up/down*** Slot 1, DI1, and DI2 Shared on XDi-net	Push S1I1 and S1I2 twice	DX digital I/O
PP 05	Local analogue	Local	Analogue potentiometer, 0 to V_{ref} (maximum 30 V)* Slot 1, dimmer input	Automatic day/night shift at 70 %	None
PP 06	ECR fixed dimmer	Local	Fixed dimmer level: 75 %	Automatic day/night shift at 20 %	None
Can be changed from the XDi menu	-	Number and name cannot be changed	You can switch between the specified source and XDi-net. You can change the dimmer-source parameters.	You can change the settings, including the preset dimmer parameters.	Do not change this setting.

* 4 button option and XDi library must be version 2000 or higher (Platform 2).

** AX1 extension module is required.

*** DX1 extension module is required.

3.2 Lib. owner 2: Standard Product Profiles (PP) for Wind/Weather indicators

DEIF standard wind and weather libraries contain a collection of product profiles (PPs), where the two CAN buses are pre-configured to support XDi-net, and where different dimmer input configurations are made available for easy selection. The product profile also contains support for the NMEA0183 sentences that is needed for all the indicators in this library.

Product profile Number (PP number)	Name	Dimmer group	Dimmer source	Day/night colour	Colour selection source
PP 01	Front panel dimmer	Dimmer group 1	Front panel buttons or XDi-net	Automatic day/night shift at 70 %	None
PP 02	XDi-net	Dimmer group 1	XDi-net	Automatic day/night shift at 70%	None
PP 03	Front panel dimmer	Local	Front panel buttons	Automatic day/night shift at 70 %	None
PP 04	Analogue	Dimmer group 1	Analogue dimmer potentiometer • Positive: Terminal 3 • Negative: Terminal 1 • Wiper: Terminal 2	Automatic day/night shift at 70 %	None
PP 05	NMEA	Dimmer group 1	NMEA or XDi-net	Automatic day/night shift at 70 %	None
PP 06	Front panel dimmer (Auto NMEA setup, multiple sources)	Dimmer group 1	Front panel buttons or XDi-net	Automatic day/night shift at 70 %	None
PP 07	Front panel dimmer (Auto NMEA setup, single source)	Dimmer group 1	Front panel buttons or XDi-net	Automatic day/night shift at 70 %	None
Can be changed from the XDi menu	-	You can changed the number and name.	You can switch between the specified source and XDi-net. You can change the dimmer source parameters.	You can change the settings, including the preset dimmer	Do not change this setting.

Product profile Number (PP number)	Name	Dimmer group	Dimmer source	Day/night colour	Colour selection source
				level parameters.	

NMEA0183 Support for all PP's in the Wind library

Dimmer and Day/Night shift (Gr.1-6): **DDC** (in PP's with NMEA dimming)

Wind: **MWV, MWD**

Speed: **VHW, VBW, VTG, RMC**

Heading: **HMR, THS, HTD, VHW, HDT, HDG**

MagVar; **HMR, RMC, HDG**

XDi shares selected NMEA data on XDi-net

NMEA0183 Support in all PP's in the Weather library

Dimmer and Day/Night shift (Gr.1-6): **DDC** (in PP's with NMEA dimming)

Wind: **MWV, MWD**

Speed: **VHW, VBW, VTG, RMC**

Heading: **HMR, THS, HTD, VHW, HDT, HDG**

MagVar; **HMR, RMC, HDG**

Weather: **XDR**

XDi shares selected NMEA data on XDi-net.

NOTE The number of supported NMEA sentences may be increased if new virtual indicators require new data types to be received via NMEA. See the updated list of supported NMEA sentences in the [XDi supported NMEA sentences](#) document.

3.2.1 Lib. owner 3: Standard Product Profiles (PP) for Navigation indicators

DEIF standard wind and weather libraries contain a collection of product profiles (PPs), where the two CAN buses are pre-configured to support XDi-net, and where different dimmer input configurations are made available for easy selection. The product profile also contains support for the NMEA0183 sentences that is needed for all the indicators in this library.

Product profile Number (PP number)	Name	Dimmer group	Dimmer source	Day/night colour	Colour selection source
PP 01	Front panel dimmer	Dimmer group 1	Front panel buttons or XDi-net	Automatic day/night shift at 70%	None
PP 02	Analogue	Dimmer group 1	Potentiometer connections: • V_{ref}: Terminal 3 • 0 V: Terminal 1 • Wiper: Terminal 2	Automatic day/night shift at 70 %	None
PP 03	NMEA group 1	Dimmer group 1	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Automatic day/night shift at 70 %	None
PP 04	NMEA group 2	Dimmer group 2	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Automatic day/night shift at 70 %	None
PP 05	NMEA group 3	Dimmer group 3	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Automatic day/night shift at 70 %	None
PP 06	NMEA group 4	Dimmer group 4 to 6	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Automatic day/night shift at 70 %	None
PP 07	NMEA group 1 DC	Dimmer group 1	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Separate day/night control	NMEA or XDi-net
PP 08	NMEA group 2 DC	Dimmer group 2	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Separate day/night control	NMEA or XDi-net
PP 09	NMEA	Dimmer group	You need an NX2 module for NMEA	Separate	NMEA or

Product profile Number (PP number)	Name	Dimmer group	Dimmer source	Day/night colour	Colour selection source
	group 3 DC	3	dimming. Without an NX2 module, XDi-net controls dimming.	day/night control	XDi-net
PP 10	NMEA group 4 DC	Dimmer groups 4 to 6	You need an NX2 module for NMEA dimming. Without an NX2 module, XDi-net controls dimming.	Separate day/night control	Separate day/night control
Can be changed from the XDi menu	You can change the name. For NMEA profiles, <i>DC</i> stands for <i>Dimming and colour</i> .	You can change the number and name.	You can switch between the specified source and XDi-net. You can change the dimmer source parameters.	You can change the settings, including the preset dimmer level parameters.	Do not change this setting.

NMEA0183 Support in all PP's in the Heading library

Dimmer and Day/Night colour: **DDC** (in PP's with NMEA dimming)

Heading: **HDG, HMR, VHW, HTD, HMR, VHW, HTD, THS, HDT**

MagVar; **HMR, RMC, HDG**

Rate of turn: **ROT**

Default: COM1 or 3 at 4.8 kbps

XDi shares selected NMEA data on XDi-net.

NMEA0183 Support in all PP's in the Speed & Depth library

Dimmer and Day/Night colour: **DDC** (in PP's with NMEA dimming)

STW: **VHW, VBW**

SOG: **VTG, VBW, RMC**

Depth: **DBT, DPT**

Default: COM1 or 3 at 4.8 kbps

XDi shares selected NMEA data on XDi-net.

NOTE The number of supported NMEA sentences may be increased if new virtual indicators require new data types to be received via NMEA. See the updated list of supported NMEA sentences in the [XDi supported NMEA sentences](#) document.

3.3 More information about dimming

Description of how to use the different product profiles to select different dimmer inputs and to perform system dimmer control is found in the XDi designer's handbook 4189350049.

You will also find some system application examples in the handbook.

4. Standard input types (VS)

The VS profile contains a full set of default input configurations for the virtual indicator it belongs to. The most commonly used input configurations for a given indicator type are made available in the standard XDi libraries, and new profiles will be added over time.

4.1 Standard input types supported in standard XDi libraries

Type	Mode	Description
CANopen *	XDi-net	DEIF plug & play protocol for easy system integration is active in DEIF standard libraries. Data can be broadcast using XDi-net format, even if a TPDO or RPDO is defined for the input.
	TPDO/RPDO	Default TPDOs are defined in the detailed standard library specification document. (Can be changed from the XDi installation menu).
	DAM-MPDO	Each data type is sent directly addressed to each XDi indicator on the CAN bus, making system setup complicated, and the same data may be sent several times, which requires more band width. (Default OFF).
Analogue (AX1 required)	CURRENT	Default 4 to 20 mA, can be adjusted in the range ± 20 mA or changed to voltage from the XDi menu.
	VOLTAGE	Voltage input type can be selected from the XDi menu and can be adjusted in the range ± 30 V.
	SIN/COS	Use both inputs (1 and 2) on the AX1 extension module. Nominal ± 10 V (the XDi auto-adjusts within ± 5 to 15 V). Only used for Azimuth in the standard libraries. In XDi libraries using software platform 2 (version 2000 or higher) this input can also be configured to 4-20 mA SIN/COS input. (Input zero-offset of 12000 μ A must be inserted)
Digital (DX1 required)	RPM	One RPM pickup input used to calculate RPM (single direction). Default: 0 to 24 V pulses. Parameters can be adjusted from the XDi menu.
	RPM $\pm$	Two RPM pickup inputs used to calculate bidirectional RPM (direction forward (+)/reverse (-)). Default: 0 to 24 V pulses. Parameters can be adjusted from the XDi menu.
NMEA (NX2 required)	NMEA0183**	Supported NMEA sentences are defined in the selected PP. NMEA data should be available during installation to allow XDi to make a scanning of all NMEA inputs. Unique input sources will be automatically selected. If the scanning detects more than one input source for a given data type, the correct source must be manually selected.

* See appendix 1 for information about the CAN TPDOs and object indexes used in the standard libraries.

** NMEA0183 serial data support class approved according to IEC61162-1 and IEC61162-2

Description of how to use the standard virtual indicators and their setup profiles in different system applications is found in the XDi designer's handbook 4189350049.

5. Library identification

The XDi libraries are identified by a unique name, for example:

XDi 144 M 000001 011 r2458 v0001

Where:	XDi 144	is the product size
M		is the performance class (M = Multi, D = Dual or N = Navigation)
000001		is the library owner ID, in this case "DEIF standard"
011		is the library number
r2458		is a revision number only relevant for draft libraries
v0001		is the library version number

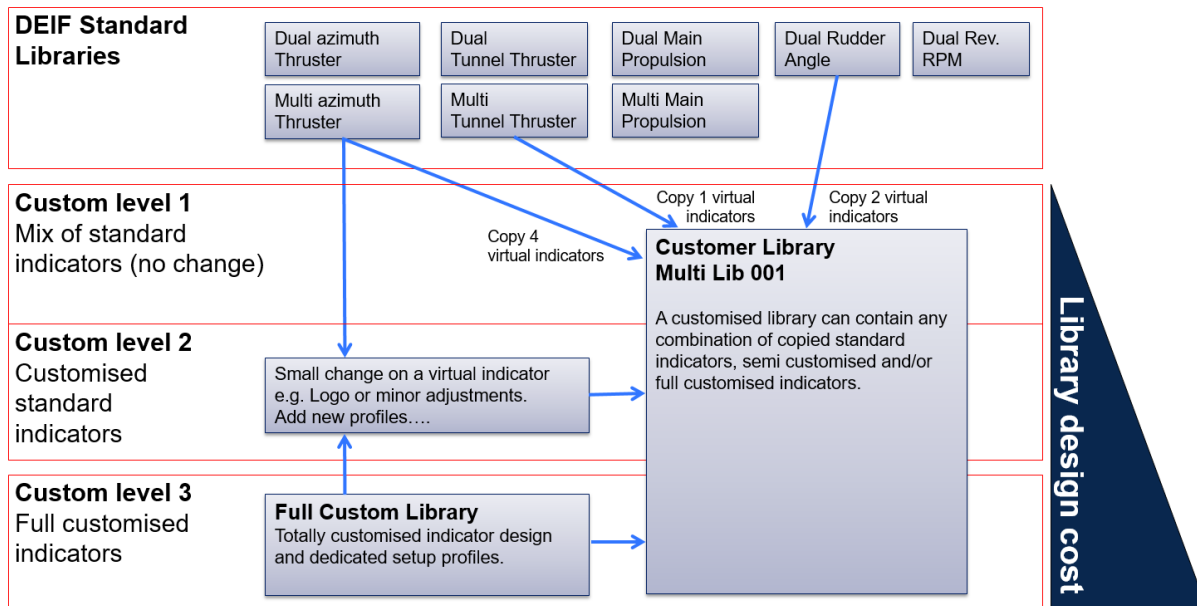
The version number is increased by one every time a new library version is released.

Libraries for XDi 144 will also automatically be made available for XDi 192 and the other way around. The XDi 96 requires a separate library due to a different display format.

To order an XDi with a preinstalled library, please state the following: XDi size, performance class, library owner ID and library number. The revision and version will always be the latest released version.

6. Standard or customised library

All XDi standard libraries are free of charge, and you can always get a new XDi library package to install on your XDi. You can even have different standard libraries stored on your laptop and install the right one that contains the virtual indicators which fits the actual installation.



Custom level 1: If you often use the same combination of standard indicators, for instance from the azimuth, tunnel thruster and rudder libraries, it may well prove beneficial for you to have your own customised library created which contains your preferred indicators (copied from standard libraries). DEIF offers to compile and pre-install such a custom library in your indicators for a small one-off fee.

Custom level 2: To match your system needs and reduce setup time during installation, it may be cost-effective for you to have some of the standard indicators or default setup parameters slightly changed. The fee is slightly higher than for customisation level 1.

Custom level 3: Full customisation is for those requiring unique designs in line with their company profile. DEIF's knowledge and experience in this field secures optimised graphical designs and system integration for the entire custom library. Please contact DEIF for a quotation based on your requirements.

In general, customised libraries make installation easy and limits or eliminates parameter adjustment via the XDi menu.

7. XDi library change / upgrade /documentation

XDi is equipped with a USB (mini) service port on the top of the device, that allows easy library and software upgrade from a PC or laptop. Just download the XDi upgrade tool and follow the instructions.



NOTE: The USB cable is a standard cable, not supplied by DEIF.

Using the upgrade tool you can change or update the functions of an XDi, by simply uploading a new library.

To get the library, you need to go to XDi Standard libraries, which can be found on the XDi homepage

www.deifmarineinstruments.com/libraries/xdi-standard-libraries/. From here, you can download all the standard XDi library packages, so you can easily change the function of your XDi indicator to function in another application than what it was purchased for.

On the top model, XDi-Nav, you can install either a Dual, Multi or Navigation library. This makes it a very flexible service unit.

In the XDi-Multi you can install a Dual or a Multi library. Where the XDi-Dual only accepts a dual type library.

IMPORTANT: When you install the library on XDi you must use the latest version of the XDi upgrade tool. If you don't have that version already please download it from: www.deif.com/software/xdi-upgrade-tool (instruction of installation and use is included).
It is important that both XDi and PC have a stable power supply, and the XDi is running before connecting the PC to the XDi USB service connector.

The full content of each standard library is documented in a separate pdf report that will automatically be updated every time a new XDi library is released.

This document contains: description of available Product Profiles (PP), picture and description of all Virtual Indicators (VI) and their respective setup profiles (VS).

The XDi standard libraries will continually expand with the addition of new indicators and setup profiles.

If the indicator is not already there, we might be working on implementing it or we may offer to add it free of charge, if there is a general demand for it.



8. Relevant XDi documentation

To be able to utilise the XDi series to the most, consult the following documents available on the XDi product pages on www.deifmarineinstruments.com:

- [XDi Data sheet](#)
- [XDi Designer's handbook](#)
- [XDi-net CANopen reference manual](#)
- [Wind sensor Application notes with XDi-N](#)
- [Application notes, heading indicator systems using XDi-N indicators](#)

On the same page you will also find all relevant XDi approval certificates.

To get the latest documentation you can access [deifmarineinstruments.com](http://www.deifmarineinstruments.com) via the following links:

Propulsion: www.deifmarineinstruments.com/product-overview/products/xdi-flexible-display-bridge-indicator/

Wind and weather: <https://www.deifmarineinstruments.com/product-overview/products/wind-indicator-xdi-n/>

Navigation: www.deifmarineinstruments.com/product-overview/products/navigation-indicator-xdi-n/

9. Appendix 1 – CANopen protocol

This appendix defines the CANopen TPDOs and XDi-net indexes used in the CAN communication between data sources and the XDi units on the CAN bus.

The below table shows the default CANopen TPDOs used in the relevant product and VI-setup profiles in the DEIF standard libraries.

The default COBID of each TPDO and the input scaling parameters can be changed from the XDi installation menu to fit your application.

When data sharing on XDi-net is active, data are broadcasted directly to the object indexes listed below, without the need for a TPDO. See the XDi-net/CANopen reference manual for details.

XDi-net is a full plug and play concept and does not need any advanced setup or data mapping.

9.1 Input data

Data type	COBID (TPDOs)	Mapped into byte	Data type	Data value and resolution	XDi-net object index-sub. index	PDO converter	Note
Azimuth angle actual (relative)	0x181	0 1	l16	±32 767 relative	0x3001-02	0x2501	The TPDO input range represents ±180.0° and is converted to ±1800 in XDi-net object index.
Rudder angle actual (relative)	0x181	0 1	l16	±32 767 relative	0x3001-02	0x2501	The TPDO input range represents ±180.0° and is converted to ±1800 in XDi-net object index.
Rudder/Azimuth output (Absolute)	0x18A	0 1	l16	±1800 Res. 0.1°	0x3001-02	Output	Used to convert TPDO form encoder to absolute output angle for XL sCAN.
Rudder/Azimuth 2 output	0x18B	0 1	l16	±1800 Res. 0.1°	0x3002-02	Output	
Azimuth commanded	0x1A1	0 1	l16	±1800 Res. 0.1°	0x3001-07	0x2511	
Rudder angle comm.	0x1A1	0 1	l16	±1800 Res. 0.1°	0x3001-07	0x2511	
Pitch angle actual (relative)	0x182	0 1	l16	±32 767 relative	0x3021-02	0x2521	The TPDO input range represents ±180.0° and is converted to ±1800 in XDi-net object index.
Pitch angle actual (absolute)	0x182	0 1	l16	±1800 Res. 0.1°	0x3021-02	0x2521	
Pitch % actual	0x182 Calc.	0 1	l16	±1000 Res. 0.1%	0x3031-02	0x2521	Calculated based on pitch angle (if no angle then actual is set equal to % value, f. ex. actual 1000 (100.0°) and 1000 (100.0 %)
Pitch angle comm.	0x3A1	0 1	l16	±1800 Res. 0.1°	0x3021-07	0x2531	Reserved for later use
Pitch %	0x3A1	0 1	l16	±1000 Res.	0x3031-	0x2531	Calculated based on pitch

Data type	COBID (TPDOs)	Mapped into byte	Data type	Data value and resolution	XDi-net object index-sub. index	PDO converter	Note
commanded	Calc.			0.1 %	07		angle (if no angle then actual is set equal to % value, for ex. actual 1000 (100.0°) and 1000 (100.0 %))
(Reserved pitch % commanded)	(0x3A1)	(2 3)	l16	±1000 Res. 0.1 %	0x3031-07	(TBD)	Only used if % pitch comm. is sent separately
Prop. RPM actual	0x183	0 1	l16	±32767 Res. 0.1 RPM	0x3081-02	0x2581	
Prop. RPM % actual	0x183 Calc.	0 1	l16	±1000 Res. 0.1 %	0x3091-02	0x2581	Calculated based on RPM (if no RPM then actual is set equal to % value, for ex. actual 1000 (100.0 RPM) and % 1000 (100.0 %))
Prop. RPM% actual	0x188	0 1	l16	±1000 Res. 0.1%	0x3091-02	Output	Sent from XDi or received directly as RPM% in a TPDO
Prop. Revolution Count output	0x283	0 1	l32	2,147,483,647 Res. 1 rev	0x3121-02	Output	Is used for transmitting revolution count value from XDi to another device.
Prop. thrust % actual	0x184	4 5	l16	±1000 Res. 0.1 %	0x30A1-02	0x25A1	Reserved for later use
Prop. power % actual	0x185	6 7	l16	±1000 Res. 0.1 %	0x30B1-02	0x25C1	Reserved for later use
Prop. power % actual	0x18C Calc.	-	l16	±1000 Res. 0.1 %	0x30B1-02	-	Calculated based on Prop. PWR in kW or MW and use 0x18C as input and scale to %.
Prop. power kW or MW	0x18C	01	l16	±32765	0x30E1-02 0x30D1-02	0x25C1	kW (30E1) or MW (30D1) depends on destination index in the VS profile.
Prop. RPM comm.	0x2A1	0 1	l16	±32767 Res. 0.1 RPM	0x3081-07	0x2591	
Prop. RPM % comm.	0x2A1 Calc.	0 1	l16	±1000 Res. 0.1 %	0x3091-07	0x2591	Calculated based on RPM (if no RPM then actual is set equal to % value, for ex. actual 1000 (100.0 RPM) and % 1000 (100.0 %))
(Reserved Prop. RPM % comm.)	(0x2A1)	(2 3)	l16			(TBD)	Only used if % RPM comm. is sent separately
Prop. thrust % comm.	0x2A1	4 5	l16	±1000 Res. 0.1 %	0x30A1-07	0x25B1	Reserved for later use
Prop. power % comm.	0x2A1	6 7	l16	±1000 Res. 0.1 %	0x30B1-07	0x25D1	Reserved for later use

Data type	COBID (TPDOs)	Mapped into byte	Data type	Data value and resolution	XDi-net object index-sub. index	PDO converter	Note
Prop. load % actual	0x186	0 1	l16	±1000 Res. 0.1 %	0x30C1-02	0x25E1	
Prop. load % comm.	0x3A1	4 5	l16	±1000 Res. 0.1 %	0x30C1-07	0x25F1	
Engine RPM actual	0x187	0 1	l16	±32767 Res. 0.1 RPM	0x3201-02	0x2701	
Engine RPM % actual	0x187 Calc.	0 1	l16	±1000 Res. 0.1 %	0x3211-02	0x2701	Calculated based on RPM (if no RPM then Actual is set equal to % value for ex. actual 1000 (100.0 RPM) and % 1000 (100.0%)
Engine RPM comm.	0x4A1	0 1	l16	±32767 Res. 0.1 RPM	0x3201-07	0x2711	
Engine RPM % comm.	0x4A1 Calc.	0 1	l16	±1000 Res. 0.1 %	0x3211-07	0x2711	Calculated based on RPM (if no RPM then Actual is set equal to % value for ex. actual 1000 (100.0 RPM) and % 1000 (100.0%)
(Reserved Engine RPM % comm.)	(0x4A1)	(2 3)	l16	±1000 Res 0.1 %		(TBD)	Only used if % RPM comm. is sent separately
Waterjet Bucket	0x189	0 1	l16	±1000 Res 0.1 %	0x3701-02	0x2B01	Universal par. gr.0 instance 1 is used
ROT	0x18D	0 1	l16	±3000 Res 0.1 °/min	0x3AE1-02	0x2B01	
Ships Roll	0x18E	0 1	l16	±1800	0x3B21-02	0x2B02	
Ships Pitch	0x28E	0 1	l16	±1800 res.0.1	0x3B29-02	0x2B03	
Ships Heave	0x38E	0 1	l16	±32750 res.0.1	0x3B31-02	0x2B04	

9.2 Dimmer data

Data type	COBID (TPDOs)	Mapped into byte	Data type	Data value and resolution	XDi –net object index-sub. index	PDO converter	Note
Dimmer level gr. 1	0x1A0	0	U8 (I8)	0 to 100 1 %	0x3501-02	0x2CE1	
Dimmer level gr. 2	0x1A0	1	U8 (I8)	0 to 100 1 %	0x3502-02	0x2CE2	
Dimmer level gr. 3	0x1A0	2	U8 (I8)	0 to 100 1 %	0x3503-02	0x2CE3	
Dimmer level gr. 4	0x1A0	3	U8 (I8)	0 to 100 1 %	0x3504-02	0x2CE4	
Dimmer level gr. 5	0x1A0	4	U8 (I8)	0 to 100 1 %	0x3505-02	0x2CE5	
Dimmer level gr. 6	0x1A0	5	U8 (I8)	0 to 100 1 %	0x3506-02	0x2CE6	
Dimmer level gr. 7	0x1A0	6	U8 (I8)	0 to 100 1 %	0x3507-02	0x2CE7	
Dimmer level gr. 8	0x1A0	7	U8 (I8)	0 to 100 1 %	0x3508-02	0x2CE8	
Dimmer level gr. 9	0x2A0	0	U8 (I8)	0 to 100 1 %	0x3509-02	0x2CE9	

Auto colour select is used in the released XDi standard libraries, the following are reserved.

Colour shift gr. 1	0x3A0	0	U2	0=Day, 1=Night, 2=Dusk	0x3501-03	0x2CF1	Only the two least significant bits are used.
Colour shift gr. 2	0x3A0	1	U2	0=Day, 1=Night, 2=Dusk	0x3502-03	0x2CF2	2 LSB are the only bit used.
Colour shift gr. 3	0x3A0	2	U2	0=Day, 1=Night, 2=Dusk	0x3503-03	0x2CF3	2 LSB are the only bit used.
Colour shift gr. 4	0x3A0	3	U2	0=Day, 1=Night, 2=Dusk	0x3504-03	0x2CF4	2 LSB are the only bit used.
Colour shift gr. 5	0x3A0	4	U2	0=Day, 1=Night, 2=Dusk	0x3505-03	0x2CF5	2 LSB are the only bit used.
Colour shift gr. 6	0x3A0	5	U2	0=Day, 1=Night, 2=Dusk	0x3506-03	0x2CF6	2 LSB are the only bit used.
Colour shift gr. 7	0x3A0	6	U2	0=Day, 1=Night, 2=Dusk	0x3507-03	0x2CF7	2 LSB are the only bit used.
Colour shift gr. 8	0x3A0	7	U2	0=Day, 1=Night, 2=Dusk	0x3508-03	0x2CF8	2 LSB are the only bit used.
Colour shift gr. 9	0x4A0	0	U2	0=Day, 1=Night, 2=Dusk	0x3508-03	0x2CF9	2 LSB are the only bit used.

9.3 Node IDs related to the used TPDOs

Each CAN node has four TPDOs (TPDO1 to 4) and four RPDOs (RPDO1 to 4) assigned.

The TPDOs used as default input for the standard libraries are the ones assigned for CAN node with ID from 1 to 11 and 32-

33, and if new CAN input data types are added later, the TPDOs assigned for node 12 to 40 will be used as default TPDOs. Please see the XDi/CANopen reference manual for more detailed information about CANopen TPDOs and their COBIDs.

9.3.1 Actual data

Node ID 1: Azimuth/rudder transmitter (16 bit encoder, for example DEIF RTC 600 or RTC 300)

Node ID 2: Pitch angle transmitter (16 bit encoder, for example DEIF RTC 600 or RTC 300) also used for calculated % pitch

Node ID 3: Prop. RPM, RPM %

Node ID 4: Thrust %

Node ID 5: Power %

Node ID 6: Load %

Node ID 7: Engine RPM, RPM %

Node ID 10 (0x0A): Used for rudder/azimuth angle output

(Node ID 11(0x0B): Is reserved for pitch angle (or pitch %) output (for instance to be received by an XL indicator))

Node ID 12 (0x0C): Used for prop. power in kW or MW (set-point data can be mapped in this TPDO if needed)

Node ID 13 (0x0D): Used for heading and/or ROT

9.3.2 Commanded (set point data)

Node ID 33 (0x21): Commanded values for azimuth/rudder, pitch, propeller RPM, RPM %, thrust %, power %, load %, engine RPM, engine RPM %

9.3.3 Dimmer data

Node ID 32 (0x20): Dimmer group 1 to 8 and colour shift 1 to 8.

9.4 TPDO and XDi-net input switching

In all product profiles (PPs) in the standard libraries, sharing of variable data via the XDi-net protocol is by default activated. This means that even if a CAN TPDO is defined as the VI input in selected VI setup profile (VS), it is still possible to use either the specified TPDO or XDi-net for data transfer.

XDi will automatically shift between the two input types.

If you use VS02 that is pre-set to use TPDOs for all inputs, you can still decide to use XDi-net instead for some of the indications in the VI. This is often the case if a CAN angle encoder is used in a system where all other data is received from another XDi that is sharing data from its analogue (or digital) input module.

If the defined but unused TPDOs are not used for anything else on the CAN bus, it is not necessary to do anything.

If a defined but unused TPDO is used for something else on the CAN bus, you must disable the TPDO via the XDi installation menu.

Input data should not be sent in both a TPDO and on XDi-net at the same time.