

PCM6-1

Run



Status



In



13

14



Out

1

2

3

4

5

6

7

8

15

16

17

18

19

20

USB host



9

10

11

12

21


22

23

24

Eth0

 Eth1



USB
device

