

PCM6-2

Run



Status



DP



USB host




1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12

13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24

Eth0

Eth1

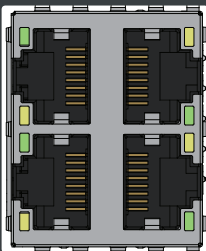

Eth2

Eth3