


SGC 110

Single Genset Controller

Data sheet

4921240607D

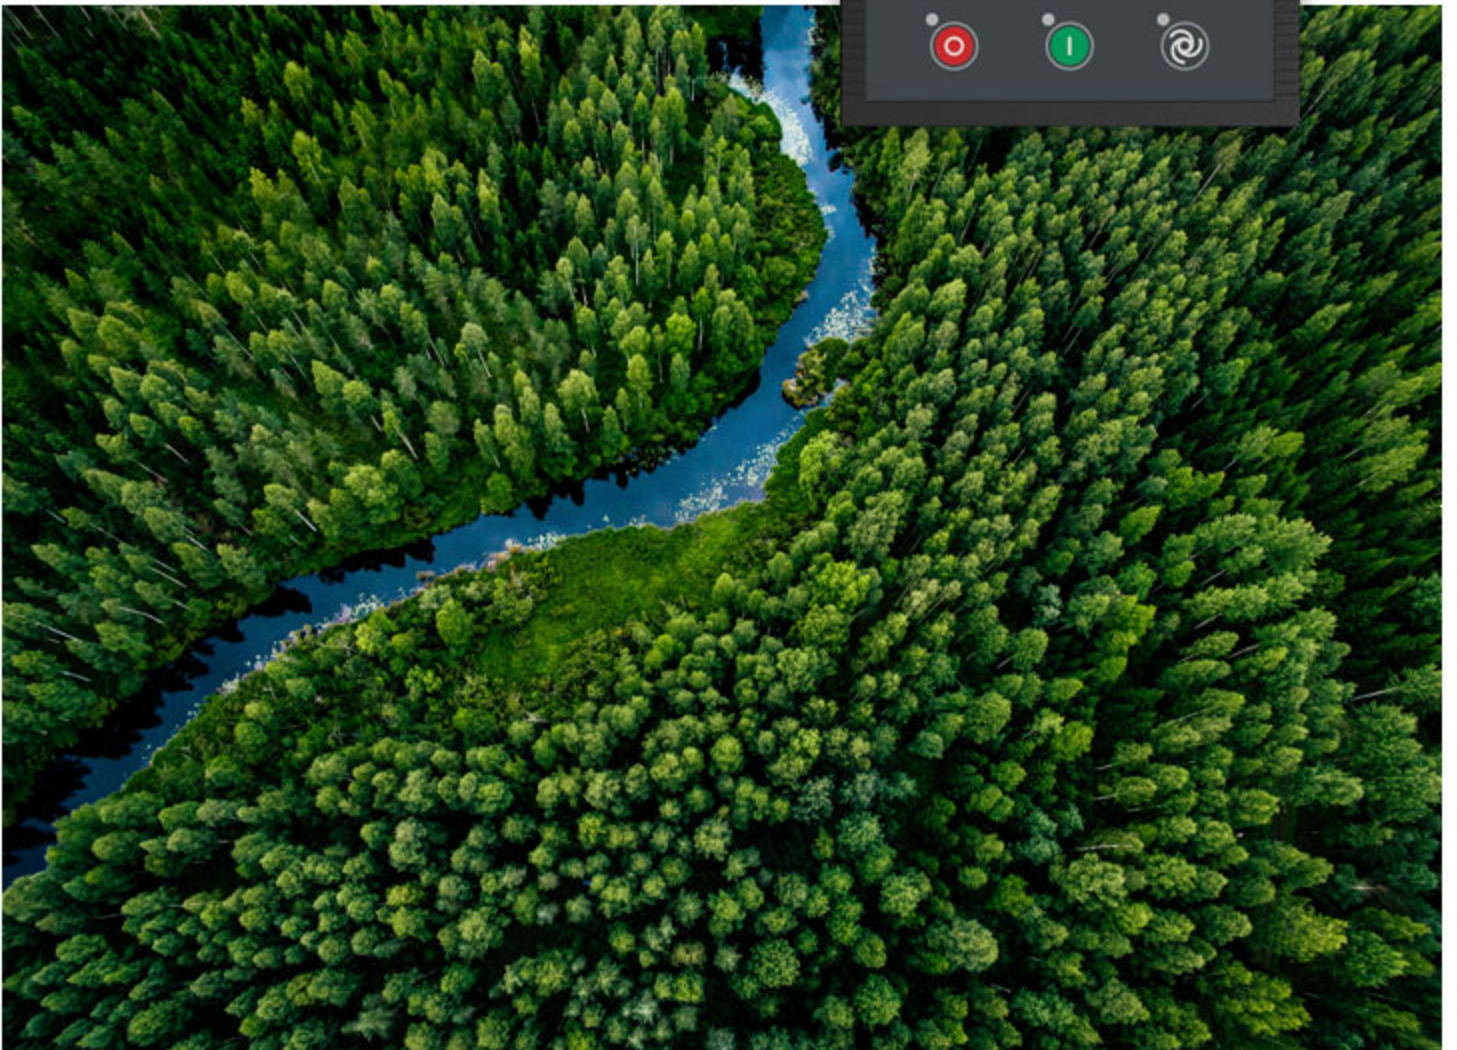

1. Product description	
1.1 Controller description.....	3
1.2 Product overview.....	3
1.3 Overview of controller buttons.....	3
2. Safety	
2.1 Warnings and safety.....	5
2.2 Electrical safety.....	5
2.3 Safety during installation and operation.....	5
3. Alarms	
3.1 Alarms.....	7
4. Technical specifications	
4.1 Electrical specifications.....	10
4.1.1 Power supply.....	10
4.1.2 Genset voltage and frequency measurements.....	10
4.1.3 Digital inputs.....	11
4.1.4 Analogue resistive sensor inputs.....	11
4.1.5 Analogue inputs used as digital inputs.....	12
4.1.6 D+ charger alternator.....	12
4.1.7 Sensor common point.....	12
4.1.8 Digital outputs.....	12
4.1.9 Communication ports.....	13
4.2 Environmental specifications.....	13
4.3 Terminal details.....	13
4.4 Approvals.....	15
4.5 Dimensions.....	15
5. Legal information	

1. Product description

1.1 Controller description

SGC 110 is a modern genset controller with user friendly HMI and full graphics LCD. The controller comes with a highly versatile software. Extensive inputs and outputs support a wide variety of industry standard features in diesel/gasoline genset applications.


The DEIF Smart Connect software offers flexibility to configure each individual input and output for a specific function or application. All parameters can also be configured on the controller.

1.2 Product overview

Following table gives a brief overview of SGC 110 features:

Features	Specifications
Digital switch input	5
Analogue resistive inputs	3
DG alternator voltage input, D+ charging alternator I/O	Yes
Digital outputs	6
Event logs	Yes
USB I/O port for laptop access	Yes
DC battery supply voltage (with -32 V reverse protection)	8 to 28 V
Operating temperature range	-20 to 65 °C
Protection class with gasket (included)	IP65

1.3 Overview of controller buttons

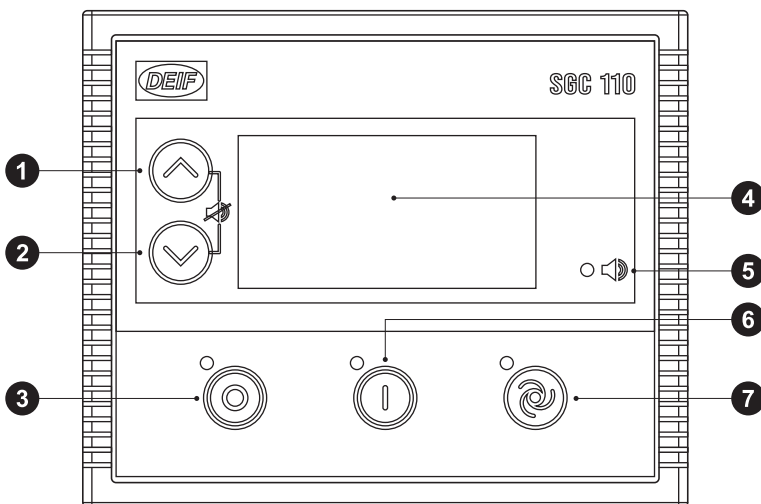

1. Menu navigation up button
2. Menu navigation down button
3. Stop/Config button
4. Display
5. Alarm LED
6. Start button
7. Mode selection button

Button functions

In Mode	Button input	Function
Manual	Start	Starts the engine
Manual	Stop	Stops the engine
	Stop (long press)	Enters Configuration mode
	Down + Stop (long press)	Enters Programming mode
Manual Auto Configuration	Up Down	Scrolls through the views/parameters
Manual Auto	Up + Down (during Alarm view)	Acknowledges and clears the alarm
Configuration	Start	Selects/saves the parameter
Configuration	Up + Down (long press)	Enters the Event log page
Configuration	Stop (long press)	Back to Manual mode
Deep sleep	Any Key (for min. 1 s)	Back to Manual mode
Event log page	Up + Down (long press)	Back to Configuration mode
Programming	Up + Down (long press)	Enters Manual mode

2. Safety

2.1 Warnings and safety

This document includes important instructions that should be followed during installation and maintenance of the controller.

Only approved personnel can do the installation and maintenance work. The work must comply with all applicable state and local electrical codes. Efficient and safe operation of the controller is only possible if equipment operation and configuration is correct, and maintenance is completed.

Symbols for hazard statements



WARNING



This shows potentially dangerous situations.

If the guidelines are not followed, these situations could result in death, serious personal injury, and equipment damage or destruction.



CAUTION



This shows low level risk situation.

If the guidelines are not followed, these situations could result in minor or moderate injury.

Symbols for general notes

NOTE This shows general information.



More information

This shows where you can find more information.

2.2 Electrical safety

You must ground the generator before you install the controller or do maintenance work. Failure to ground the generator can result in injury or death.

Generators produce high electrical voltages. Do not touch terminals, bare wires, and while the generator and related equipment are in operation. If you touch the generator, it can give you an electrical shock and result in death. Do not change the interlocks.

Use the correct size for wires that are used for electrical connections and wirings. This is to make sure that the generator can operate at the maximum electrical current.

2.3 Safety during installation and operation

Before you install the controller, make sure that all power voltage supplies are positively turned off at the source. Remove the panel fuse to prevent accidental start of the generator. Disconnect the battery cables for the generator from the negative battery terminal first. This is shown with a NEGATIVE, NEG, or (-). Reconnect the negative cable last. If not, this can give you an electrical shock and possibly kill you.

Remove the electric power supply before you remove the controller or touch other electrical part. High voltage can cause injury or death.

With floors of metal or concrete, use rubber insulation mats placed on wooden platforms, when you do work near the generator or other electrical equipment. Make sure you wear dry clothes and shoes, and that your hands and feet are dry when you operate electric devices or work with wires. Do not wear jewellery. Jewellery can cause a short circuit, which can result in shock or burning.

If an accident caused by electric shock occurs, stop the electrical power source immediately. If this is not possible, use a non-conducting object (for example a rope or a wooden stick) to remove the person with the injuries from the live conductor. Do not touch the person with injuries. If the person with injuries is unconscious, use first aid and get medical help immediately.

3. Alarms

3.1 Alarms

With SGC 110 it is possible to configure several Shutdown/Electrical trip, Warning and Notification alarms, for example Low oil pressure shutdown, Overload warning, and more.

An alarm occurs when a pre-configured parameter is out of the preset level. The Alarm LED flashes and the Sounder alarm activates (if configured). The controller shows the alarm names on the Alarms display and the nature of alarm on Engine status display.

To acknowledge the alarms, press the *Up*  and *Down*  buttons simultaneously.

All the alarms are activated at the end of Safety monitoring timer. The controller will not send the start command if Warning, Electrical trip or Shutdown alarms are left unacknowledged.

Alarm types

No.	Alarm actions	Description
1	Shutdown	Load is taken off from the genset and the genset is immediately stopped by skipping the Engine cooling time.
2	Electrical trip	Load is taken off from the genset, the Engine cooling timer begins, after which the genset is stopped.
3	Warning	Warning alarms draw the operator's attention to an undesirable condition without affecting the genset's operation. The genset cannot be started without acknowledging the Warning alarms
4	Notification	The controller shows the message on the display. The genset start/stop operation is not affected.

Alarms and their causes

No.	Alarms	Causes/Indication	Actions
1	Low Oil Pressure (Sensor)	Indicates that the oil pressure measured is below the preset threshold.	Shutdown Warning
	Low Oil Pressure (Switch)	Indicates that the oil pressure measured is low through switch.	Shutdown Warning Electrical Trip Notification
2	Low Fuel level sensor	Indicates that the amount of fuel level is below the preset threshold.	Shutdown Warning
	Low Fuel level switch	Indicates that the amount of fuel level is below the preset threshold.	Shutdown Warning Electrical Trip Notification
3	High Eng Temp sensor	Indicates that the engine temperature is above the preset threshold. This condition is detected only when engine is on.	Shutdown Warning
	High Eng Temp switch	Indicates that the engine temperature measured is high through switch.	Shutdown Warning Electrical Trip Notification
4	Low Water Level switch	Indicates that radiator water level is below the preset threshold.	Shutdown Warning

No.	Alarms	Causes/Indication	Actions
			Electrical Trip Notification
5	Over Speed	Indicates that genset speed has exceeded the preset overspeed threshold. The genset will shut down after Overspeed delay.	Shutdown
6	Gross Over Speed	Indicates that genset speed has exceeded the preset Gross overspeed threshold. The genset will shut down immediately without any delay.	Shutdown
7	Under Speed	The engine speed has fallen below the preset RPM.	Shutdown
8	L1 Phase Over Voltage	Indicates that genset (L1) phase voltage has exceeded the preset over-voltage threshold.	Shutdown Warning
9	L1 Phase Under Voltage	Indicates that genset (L1) phase voltage has fallen below preset under-voltage threshold.	Shutdown Warning
10	L2 Phase Over Voltage	Indicates that genset (L2) phase voltage has exceeded the preset over-voltage threshold.	Shutdown Warning
11	L2 Phase Under Voltage	Indicates that genset (L2) phase voltage has fallen below preset under-voltage threshold.	Shutdown Warning
12	L3 Phase Over Voltage	Indicates that genset (L3) phase voltage has exceeded the preset over-voltage threshold.	Shutdown Warning
13	L3 Phase Under Voltage	Indicates that genset (L3) phase voltage has fallen below preset under-voltage threshold.	Shutdown Warning
14	Over Frequency	Indicates that genset output frequency has exceeded the preset threshold.	Shutdown Warning
15	Under Frequency	Indicates that genset output frequency has fallen below the preset threshold.	Shutdown Warning
16	Emergency stop	Configured as digital input has triggered longer than preset duration or when the immediate shutdown is required.	Shutdown
17	Charge Fail	The charge alternator voltage has dropped below the preset threshold.	Shutdown Warning Notification
18	Battery Over Voltage	The battery voltage has exceeded the preset threshold.	Shutdown Warning Electrical Trip Notification
19	Battery Under Voltage	The battery voltage has fallen below the preset threshold.	Shutdown Warning Electrical Trip Notification
20	Maintenance due	Indicates that engine running hours exceed the preset hours limit or maintenance due date has occurred and filter servicing is required.	Warning Notification
21	Auxiliary input/User defined name	Configured auxiliary input has triggered longer than preset duration.	Shutdown Warning Electrical Trip Notification
22	Fail to Stop	It is detected that genset is still running after sending stop command.	Shutdown
23	Fail to Start	Indicates that genset has not started after the preset number of Start attempts.	Shutdown

No.	Alarms	Causes/Indication	Actions
24	Fuel theft	The fuel consumption exceeds the preset threshold.	Warning
25	Eng Temp/terminal 24 - Ckt Opn	The temperature sensor is not detected (circuit open).	Warning
26	Fuel Level Ckt Open	The fuel level sensor is not detected (circuit open).	Shutdown
27	LOP/terminal 26 - Ckt Opn	The oil pressure sensor is not detected (circuit open).	Warning
28	DG Phase Reversed	Alternator phase sequence (L1-L2-L3) is not correct.	Shutdown Warning Electrical Trip
29	High Oil Pressure sensor	Indicates that the measured oil pressure is above the preset threshold.	Shutdown Warning
	High Oil Pressure switch	Indicates that the measured oil pressure is above the preset threshold.	Shutdown Warning Electrical Trip Notification

4. Technical specifications

4.1 Electrical specifications

4.1.1 Power supply

Category	Specification
Controller terminals	1 (Ground) 2 (Battery or DC+)
Supply voltage range	Nominal voltage: 12/24 V DC Operating range: 8 to 28 V DC
Cranking drop out period	50 ms
Maximum reverse voltage protection	-32 V DC
Measurement accuracy (battery voltage)	±1 % full scale
Resolution	0.1 V
Maximum current consumption	~ 200 mA, 12/24 V DC (excluding the current load for the DC outputs)
Standby current consumption (LCD backlight off)	124 mA, 12 V DC 123 mA, 24 V DC
Deep sleep current	20 mA, 12/24 V DC

4.1.2 Genset voltage and frequency measurements

Category	Specifications
Controller terminals	27 (Neutral) 28 (L3) 29 (L2) 30 (L1)
Measurement type	True RMS
Phase-to-neutral voltage	32 to 300 V AC RMS
Phase-to-phase voltage	32 to 520 V AC RMS
Voltage accuracy	±2 % of full scale for phase-to-phase
Voltage resolution	1 V AC RMS for phase-to-neutral 2 V AC RMS for phase-to-phase
Frequency range	5 to 75 Hz
Frequency accuracy	0.25 % of full scale
Frequency resolution	0.1 Hz

NOTE For single phase applications, it is mandatory to connect the genset phase and neutral cables to the genset controller's phase L1 and neutral terminals.

4.1.3 Digital inputs


Category	Specifications
Controller terminals	10, 11, 12, 21, 22
Number of inputs	5
Type	Negative switching
Maximum input voltage	+32 V
Minimum input voltage	-24 V
Current source	2.42 mA to 7.27 mA (depends on the battery voltage)
Configurable parameters with software	For example, high water temperature and switch to measure if the lube oil pressure is low (LLOP) switch.

4.1.4 Analogue resistive sensor inputs


Category	Specifications
Controller terminals	24 (Engine temperature) 25 (Fuel level sensor) 26 (Oil pressure)
Number of inputs	3
Type	Ratio-metric sensing
Range	10 to 5000 Ω (terminal 24) 10 to 1000 Ω (terminal 25 and 26)
Open circuit detection	Above 5.5 k Ω (terminal 24) Above 1.5 k Ω (terminal 25 and 26)
Measurement accuracy	$\pm 2\%$ of full scale (up to 1000 Ω)
Connection method	Connect the sensor output terminals between the genset controller terminal and the battery ground terminal

SCP connection

SCP connections for Analogue inputs 1 to 3*:

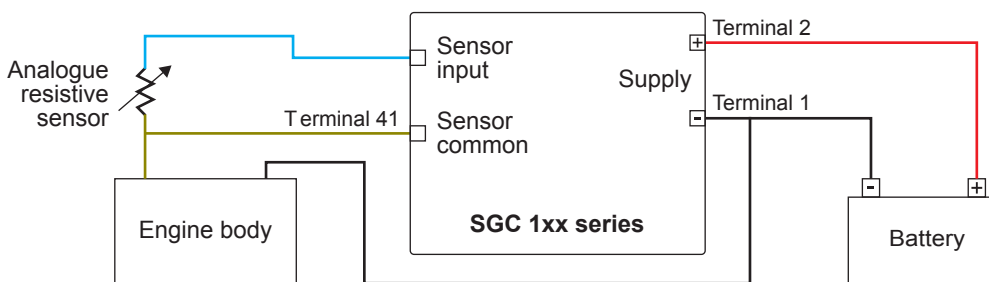


*SCP connections for Analogue input 2 used as *Fuel level sensor* with the reference configured as *Battery Negative*

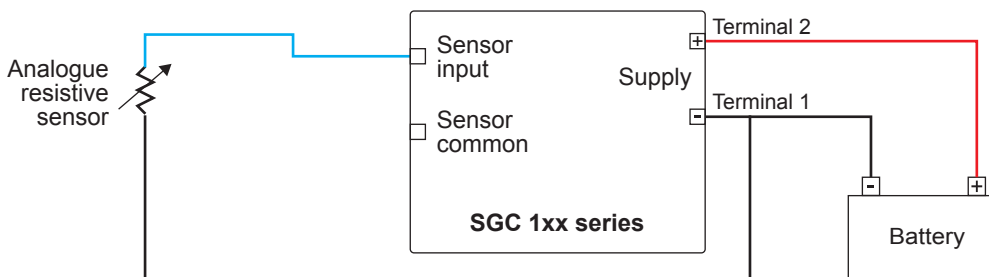

4.1.5 Analogue inputs used as digital inputs

To use analogue inputs as digital inputs wire the inputs as shown.

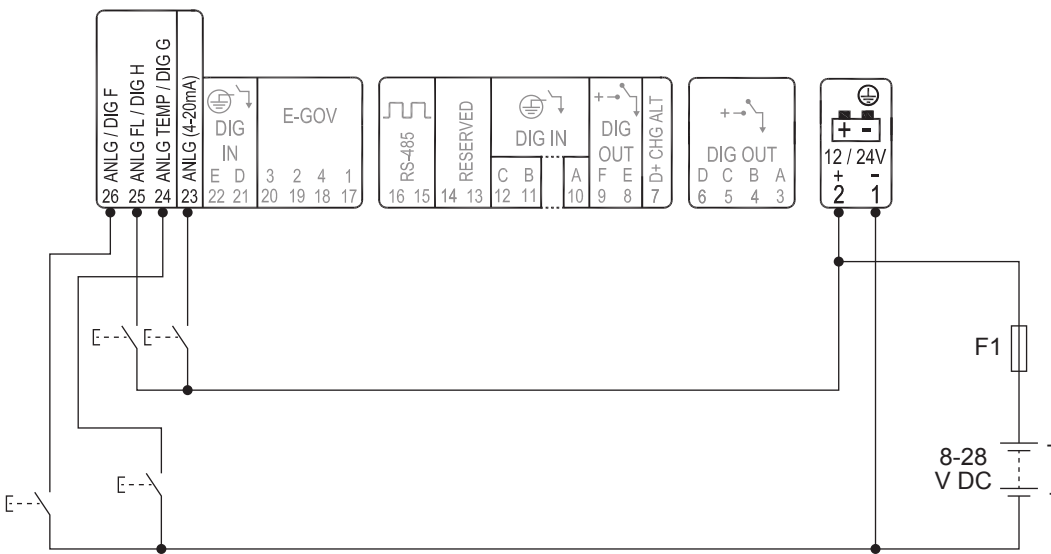

4.1.6 D+ charger alternator

Category	Specifications
Controller terminal	7
Voltage range	0 to V_{BATT} $V_{BATT} = 8$ to 28 V DC
Excitation	PWM (power limited to 3 W, 12 V/250 mA)
Accuracy	± 1 % of full scale

The charge fail is a combined input and output terminal. When the genset starts, the terminal provides controlled power output to excite the charging alternator. After excitation, the controller monitors the output voltage of the charging alternator. You can configure the action for charge fail.

4.1.7 Sensor common point

Category	Specifications
Controller terminal	41
Range	± 2 V
Accuracy	± 2 % of full scale

Connect terminal 41 (SCP) to a solidly grounded point on the engine, for example the engine frame. Do not share the cable used for this connection with other electrical connections.

4.1.8 Digital outputs

Category	Specifications
Controller terminals	3, 4, 5, 6, 8, 9
Number of outputs	6
Type	DC outputs

Category	Specifications
Maximum current rating	Max. per output: 500 mA Total max.: 1 A
Software configurable parameters	For example, start relay and fuel relay.



More information

See **Configurable parameters** in the **User manual** for how to configure the parameters.

Do not connect the starter motor relay and the stop solenoid directly to the output terminals on the controller.

Protect the breaker relays for the genset and mains against 4 kVA surges as described by the IEC-61000-4-5 standard.

4.1.9 Communication ports


Category	Specifications
USB	USB 2.0 type B for connection to PC with DEIF Smart Connect software.

4.2 Environmental specifications

Operation conditions	
Operating temperature	-20 to +65 °C (-4 to +149 °F). To IEC 60068-2-1, 2
Storage temperature	-30 to +75 °C (-22 to +167 °F). To IEC 60068-2-1, 2
Vibration	2G in X,Y and Z axes for 8 to 500 Hz. To IEC 60068-2-6
Shock	15 g for 11 ms. To IEC 60068-2-27
Humidity	0 to 95 % RH. To IEC 60068-2-78
Protection degree	IP65 (front of module when installed into the control panel with the supplied sealing gasket). To IEC 60529
EMI/EMC	IEC 61000-6-2, 4

4.3 Terminal details

Rear view of the controller with terminal details.

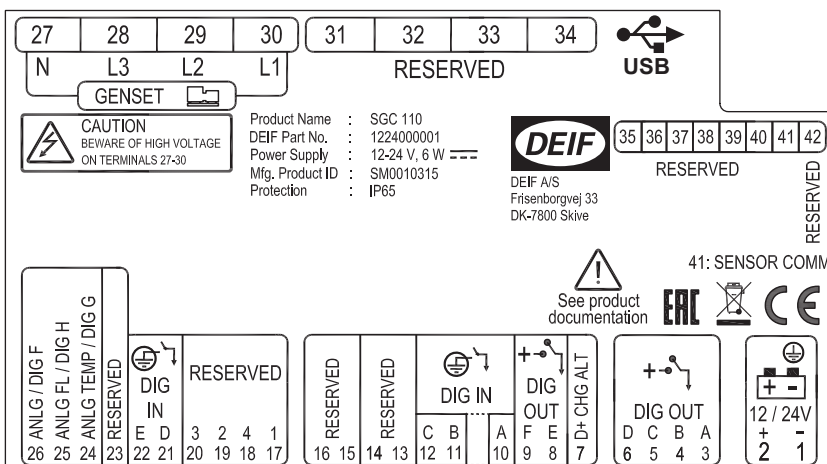


Terminal	Text	Description	Phoenix connector
1	GND	Power ground	5441980
2	BATT +	Power supply positive	
3	DIG OUT A	DC output - A	5441223
4	DIG OUT B	DC output - B	
5	DIG OUT C	DC output - C	
6	DIG OUT D	DC output - D	
7	D+ CHG ALT	Input for charging alternator control	5441223
8	DIG OUT E	DC output - E	
9	DIG OUT F	DC output - F	
10	DIG IN A	Input from switch - A	5441249
11	DIG IN B	Input from switch - B	
12	DIG IN C	Input from switch - C	
13	Reserved	-	
14	Reserved	-	
15	Reserved	-	
16	Reserved	-	
17	Reserved	-	5447560
18	Reserved	-	
19	Reserved	-	
20	Reserved	-	
21	DIG_IN D	Input from switch - D	
22	DIG_IN E	Input from switch - E	
23	Reserved	-	
24	ANLG_IN ENG_TEMP	Analogue input from Engine temperature sensor	5453499
25	ANLG_IN FUEL_LEVEL	Analogue input from Fuel level sensor	
26	ANLG_IN LOP	Analogue input from Lube oil pressure sensor	
27	GEN_V-IN NTRL	Voltage input from Generator Neutral	5453499
28	GEN_V-IN L3	Voltage input from Generator phase L3	
29	GEN_V-IN L2	Voltage input from Generator phase L2	
30	GEN_V-IN L1	Voltage input from Generator phase L1	
31	Reserved	-	
32	Reserved	-	
33	Reserved	-	
34	Reserved	-	

Terminal	Text	Description	Phoenix connector
35	Reserved	-	5441456
36	Reserved	-	
37	Reserved	-	
38	Reserved	-	
39	Reserved	-	
40	Reserved	-	
41	SCP	Sensor common point	
42	Reserved	-	

4.4 Approvals

Standards	
CE	Comply to the EU Low Voltage Directive: EN 61010-1 Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 1: General requirements Comply to the EU EMC: Directive EN 61000-6-2, 4

4.5 Dimensions

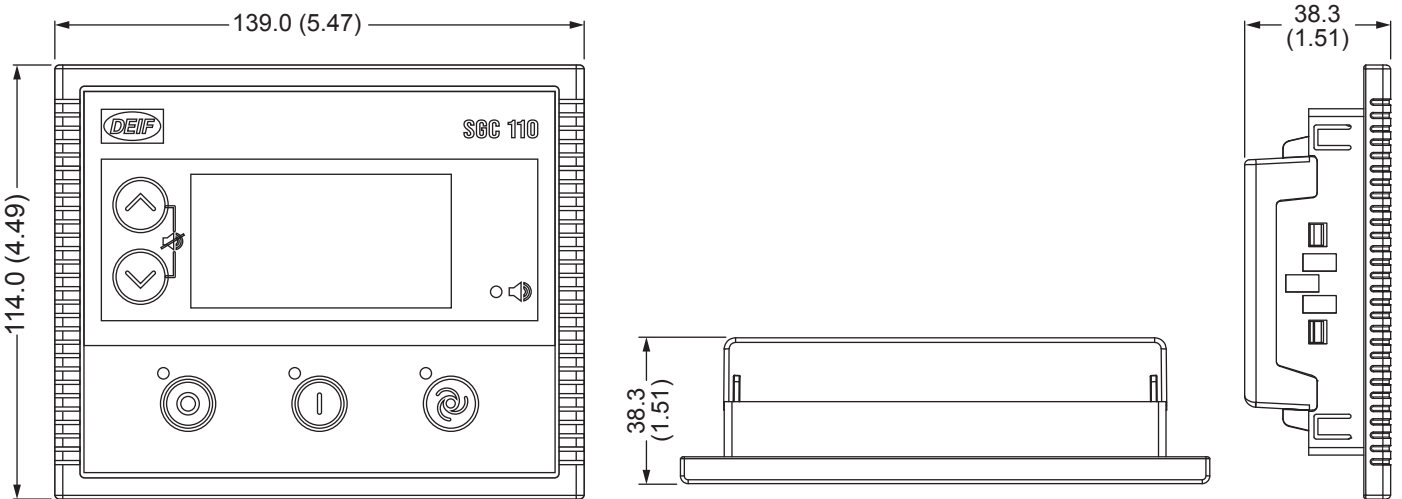

	Length	Height	Depth
Controller	139.0 mm (5.47 in)	114.0 mm (4.49 in)	38.3 mm (1.51 in)
Panel cut-out	118.0 mm (4.65 in)	93.0 mm (3.66 in)	Tolerance: ± 0.3 mm (0.01 in)

5. Legal information

Warranty

NOTICE



Warranty

The controller is not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

Copyright

© Copyright DEIF A/S. All rights reserved.