


# Multi-line 2

Configurable I/O extension card: 13 digital inputs, 4 relay outputs

**Option M12**



Improve  
Tomorrow

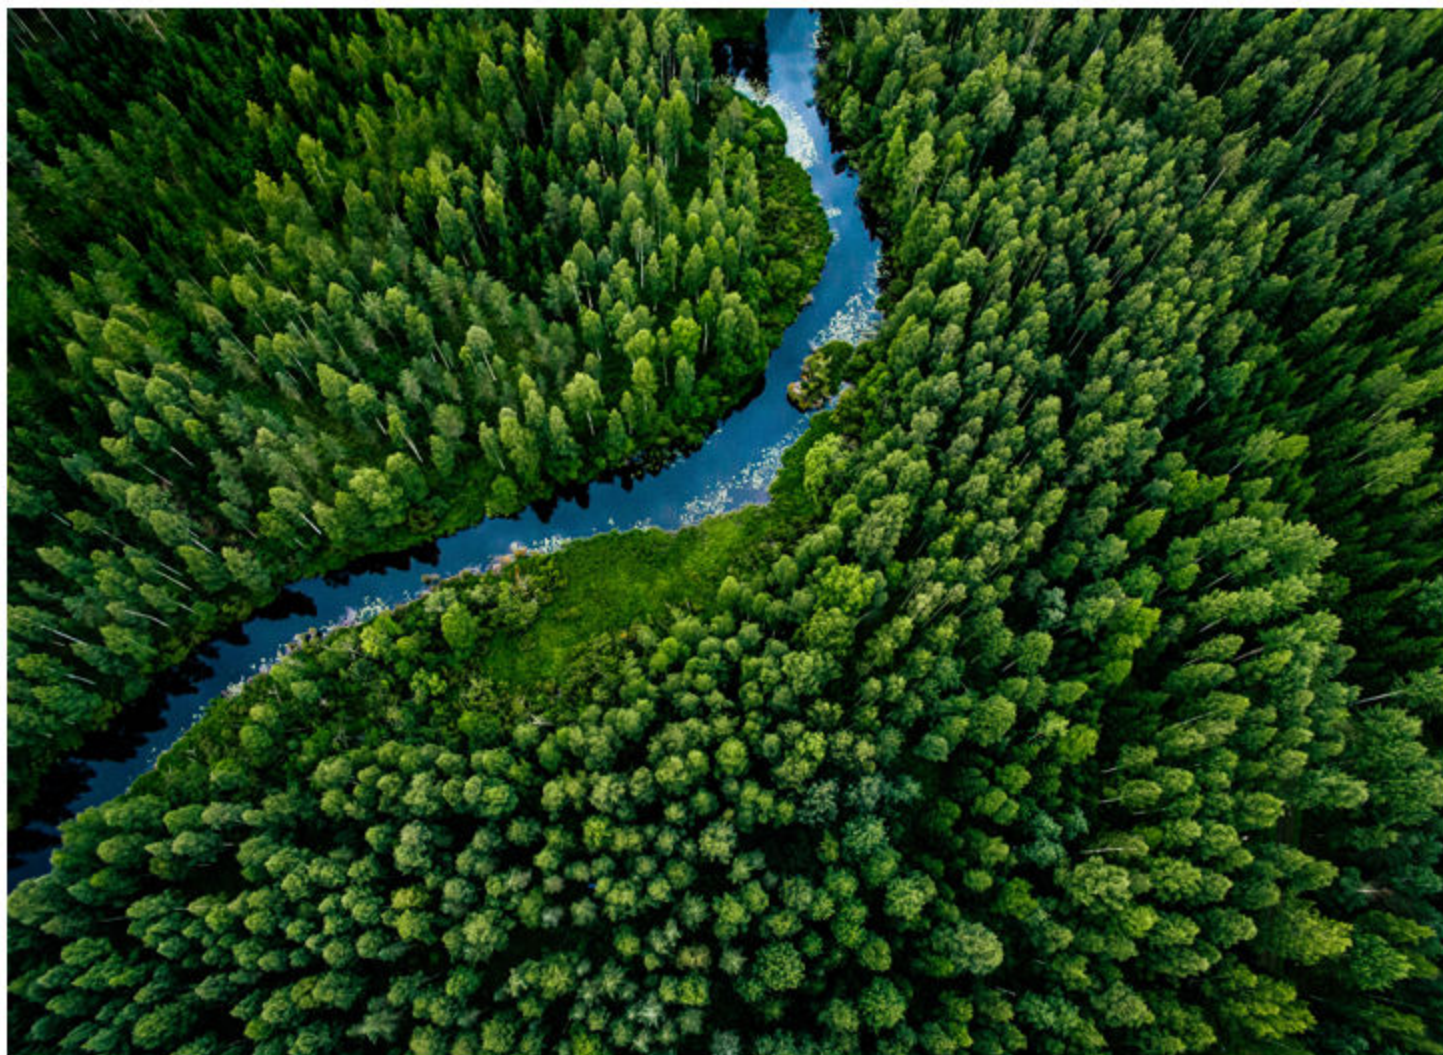

## 1. Delimitation

1.1 Scope of option M12.....	3
------------------------------	---

## 2. General information

2.1 Warnings, legal information and safety.....	4
2.1.1 Warnings and notes.....	4
2.1.2 Legal information and disclaimer.....	4
2.1.3 Safety issues.....	4
2.1.4 Electrostatic discharge awareness.....	4
2.1.5 Factory settings.....	4

## 3. Description of option

3.1 Option M12.....	5
3.2 ANSI numbers.....	5
3.3 Terminal descriptions.....	5
3.3.1 Terminal description, AGC.....	5
3.3.2 Terminal description, GPU/GPU Hydro.....	6

## 4. Function description

4.1 Digital inputs.....	8
4.2 Protection/alarm inputs.....	8
4.2.1 Function input.....	8
4.3 Relay setup.....	8
4.4 External analogue setpoints.....	9
4.4.1 AGC.....	9

## 5. Parameters

5.1 Further information.....	11
------------------------------	----

# 1. Delimitation

## 1.1 Scope of option M12

This description of options covers the following products:

AGC-4 Mk II	SW version 6.0x.x or later
AGC-4	SW version 4.0x.x or later
AGC-3	SW version 3.4x.x or later
GPU/GPU Hydro	SW version 3.0x.x or later

## 2. General information

### 2.1 Warnings, legal information and safety

#### 2.1.1 Warnings and notes

Throughout this document, a number of warnings and notes with helpful user information will be presented. To ensure that these are noticed, they will be highlighted as follows in order to separate them from the general text.

##### Warnings



**DANGER!**



**This shows dangerous situations.**

If the guidelines are not followed, these situations will result in death, serious personal injury, and equipment damage or destruction.

##### Notes

**NOTE** Notes provide general information, which will be helpful for the reader to bear in mind.

#### 2.1.2 Legal information and disclaimer

DEIF takes no responsibility for installation or operation of the generator set. If there is any doubt about how to install or operate the engine/generator controlled by the Multi-line 2 unit, the company responsible for the installation or the operation of the set must be contacted.

**NOTE** The Multi-line 2 unit is not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

##### Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

#### 2.1.3 Safety issues

Installing and operating the Multi-line 2 unit may imply work with dangerous currents and voltages. Therefore, the installation should only be carried out by authorised personnel who understand the risks involved in working with live electrical equipment.



**DANGER!**

Be aware of the hazardous live currents and voltages. Do not touch any AC measurement inputs as this could lead to injury or death.

#### 2.1.4 Electrostatic discharge awareness

Sufficient care must be taken to protect the terminals against static discharges during the installation. Once the unit is installed and connected, these precautions are no longer necessary.

#### 2.1.5 Factory settings

The unit is delivered from the factory with default settings. These are not necessarily correct for the engine/generator set. Check all the settings before running the engine/generator set.

## 3. Description of option

### 3.1 Option M12

Option M12 is a hardware option, and therefore an extra PCB is placed in slot #3 in addition to the standard-installed hardware.

### 3.2 ANSI numbers

Function	ANSI no.
13 x digital inputs for control and/or alarms	77
4 x digital outputs	74



#### INFO

AGC-4 Mk II: If option M12 is installed, the controller can do analogue load sharing. Option G3 is a standard option when option M12 is selected.



#### INFO

AGC-3 and AGC-4: If option G3 is already installed, option M12 is a software upgrade.

### 3.3 Terminal descriptions

#### 3.3.1 Terminal description, AGC

Term.	Function	Technical data	Description
37	<b>Used for analogue load sharing</b>		
38	AGC-4 Mk II: Analogue load sharing is possible when option M12 is installed.		
39	AGC-4 and AGC-3: Analogue load sharing also requires option G3.		
40	-10...0...10V DC	Analogue I/O	f/P setpoint
41	Com.	Common	Common
42	-10...0...10V DC	Analogue I/O	U/Q setpoint
43	Digital input 43	Optocoupler	Configurable
44	Digital input 44	Optocoupler	Configurable
45	Digital input 45	Optocoupler	Configurable
46	Digital input 46	Optocoupler	Configurable
47	Digital input 47	Optocoupler	Configurable
48	Digital input 48	Optocoupler	Configurable
49	Digital input 49	Optocoupler	Configurable
50	Digital input 50	Optocoupler	Configurable
51	Digital input 51	Optocoupler	Configurable
52	Digital input 52	Optocoupler	Configurable
53	Digital input 53	Optocoupler	Configurable
54	Digital input 54	Optocoupler	Configurable
55	Digital input 55	Optocoupler	Configurable
56	Com.	Common	Common for terminals 43 to 55

Term.	Function	Technical data	Description
57	NE/ND	Relay 57	Configurable
58	Com.	250V AC/5 A	
59	NE/ND	Relay 59	Configurable
60	Com.	250V AC/5 A	
61	NE/ND	Relay 61	Configurable
62	Com.	250V AC/5A	
63	NE/ND	Relay 63	Configurable
64	Com.	250V AC/5 A	



#### INFO

See the **Installation Instructions** for a detailed description of the wiring of digital inputs.

### 3.3.2 Terminal description, GPU/GPU Hydro

Term.	Function	Technical data	Description
37	Not used		
38			
39			
40			
41			
42			
43	Digital input 43	Optocoupler	Configurable
44	Digital input 44	Optocoupler	Configurable
45	Digital input 45	Optocoupler	Configurable
46	Digital input 46	Optocoupler	Configurable
47	Digital input 47	Optocoupler	Configurable
48	Digital input 48	Optocoupler	Configurable
49	Digital input 49	Optocoupler	Configurable
50	Digital input 50	Optocoupler	Configurable
51	Digital input 51	Optocoupler	Configurable
52	Digital input 52	Optocoupler	Configurable
53	Digital input 53	Optocoupler	Configurable
54	Digital input 54	Optocoupler	Configurable
55	Digital input 55	Optocoupler	Configurable
56	Com.	Common	Common for terminals 43 to 55
57	NE/ND	Relay 57	Configurable
58	Com.	250V AC/5 A	
59	NE/ND	Relay 59	Configurable
60	Com.	250V AC/5 A	
61	NE/ND	Relay 61	Configurable

Term.	Function	Technical data	Description
62	Com.	250V AC/5 A	
63	NE/ND	Relay 63	Configurable
64	Com.	250V AC/5 A	



#### INFO

Please refer to the Installation Instructions for detailed description of the wiring of digital inputs.



## 4. Function description


### 4.1 Digital inputs

The digital inputs available in this option can be used for two purposes:

1. Protection (alarm) inputs
2. Function inputs

### 4.2 Protection/alarm inputs

The delay settings are all of the definite time type, i.e. a set time is selected. The delay will be activated if the input goes ON (or OFF if selected to be N/C). If the input is reset before the delay runs out, the delay will be reset.

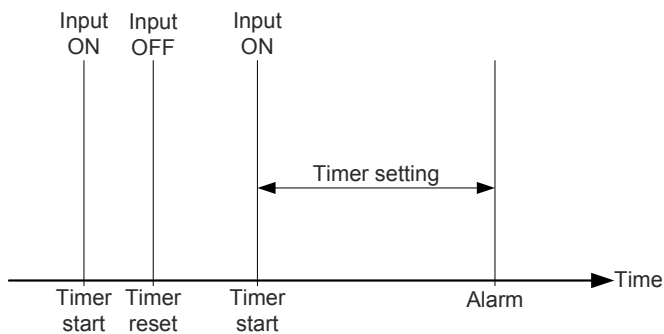

When the delay runs out, the output will be activated.

#### 4.2.1 Function input

The function inputs can be set up using the PC utility software.

The PC utility software is a Windows®-based software, which can be downloaded from our website [www.deif.com](http://www.deif.com). To adjust the inputs via the PC utility software, a computer must be connected to the controller unit. Furthermore, the unit parameters must be uploaded to the computer.



#### INFO

See the **Designer's Handbook** for a complete list of the available input functions.

### 4.3 Relay setup

Each relay has a function and an OFF delay setting as described below.

Function	Description
Alarm relay NE	When the relay is activated, an alarm is displayed. The relay will remain activated for as long as the alarm is present and unacknowledged.
Alarm relay ND (GPU/GPU Hydro only)	When the relay is activated, an alarm is displayed. The relay will remain activated for as long as the alarm is present and unacknowledged.
Alarm/reset (GPU/GPU Hydro only)	The functionality is similar to "Alarm", but with a short-time reset if the relay is ON and another alarm tries to activate the same relay.



Function	Description
Limit relay	When the relay is activated, no alarm message is displayed. After the condition activating the relay has returned to normal, the relay will deactivate when the "OFF delay" has expired.
Horn relay	When the relay is activated, an alarm message is displayed. The relay will be activated until the time set in menu 6130 "Alarm horn" has expired or the alarm activating the relay has been acknowledged.
Siren relay (GPU/GPU Hydro only)	The output activates on all alarms, like "Horn output". If the relay is ON and another alarm is active, a short-time reset = 1 s will be activated.
OFF delay	The "OFF delay" is used when limit relay is selected. It is the time between the disappearance of the event that caused the relay to activate and the actual deactivation of the relay.



#### INFO

It is possible to configure the relay outputs to be used for speed and/or voltage regulation. See the **Designer's Handbook**.



#### INFO

The relays can also be used together with M-Logic. See the help function in the PC utility software.

## 4.4 External analogue setpoints

### 4.4.1 AGC

The genset can be controlled from internal as well as from external setpoints. The external setpoints are activated with a digital signal.

Five inputs can be selected, and their function depends on the mains breaker position.

Input	Frequency	Power	Voltage	Reactive power	Power factor
Island mode, stand-alone	X		X		
Island mode, load sharing	X		X		
Parallel to the mains		X		X	X

The controller setpoints will be ignored if the running condition is not present. For instance, it is not possible to use the frequency controller when paralleling to the mains.

The table below shows the setpoints.

Controller	Input voltage	Description	Comment
Frequency	+/-10V DC	$f_{NOM} \pm 5 \text{ Hz}$	Active when MB is OFF
Power	+/-10V DC	$\pm 100\% \cdot P_{NOM}$	
Voltage	+/-10V DC	$U_{NOM} \pm 10\%$	Active when GB is OFF
Reactive power	+/-10V DC	$\pm 100\% \cdot Q_{NOM}$	
Power factor	$\pm 10 \text{ V} \dots 0 \dots 10 \text{ V DC}$	0.6 capacitive...1.0...0.6 inductive	

The external setpoints can be used in all genset modes when auto or semi-auto mode is selected.



#### INFO

Only a limited number of digital inputs are available in the standard unit. The unit should be installed with the sufficient number of options to get the desired digital inputs.

**INFO**

If the option H2 is available in the unit, the external setpoints can be controlled from the control registers in the Modbus protocol. Please refer to the description of option H2 for further information.

## 5. Parameters

### 5.1 Further information

Option M12 relates to parameters 3130-3250 and 5110-5140.

For further information, see the separate parameter list:

AGC-4 Mk II	Document number 4189341273
AGC-4	Document number 4189340688
AGC-3	Document number 4189340705
GPC-3/GPU-3 Hydro	Document number 4189340580
PPU-3/GPU-3	Document number 4189340581