

GPC 300

Generator Paralleling Controller

Operator's manual



Improve
Tomorrow



1. About the Operator's manual

1.1 Symbols and notation	5
1.1.1 Symbols for general notes	5
1.1.2 Symbols for hazard statements	5
1.1.3 Symbols for LEDs	5
1.2 Intended users of the Operator's manual	6
1.3 Software versions	6
1.4 Technical support	6
1.5 Warnings and safety	7
1.6 Legal information	7

2. Getting started

2.1 About controller operation	9
2.2 About the display unit (DU 300)	10
2.2.1 Display, LEDs, and buttons	10
2.2.2 Screen layout	11
2.2.3 About the virtual keyboard	12
2.2.4 About the help	13

3. Operating the system

3.1 SINGLE genset controller basic actions	14
3.1.1 About operation of the SINGLE genset controller	14
3.1.2 SINGLE genset controller buttons with no mains breaker	14
3.1.3 SINGLE genset controller LEDs with no mains breaker	15
3.1.4 SINGLE genset controller buttons with mains breaker	16
3.1.5 SINGLE genset controller LEDs with mains breaker	17
3.1.6 Change modes	18
3.1.7 Start the genset	18
3.1.8 Stop the genset	18
3.1.9 Close the genset breaker	19
3.1.10 Open the genset breaker	19
3.1.11 Close the mains breaker	19
3.1.12 Open the mains breaker	20
3.2 GENSET controller basic actions	20
3.2.1 About operation of the GENSET controller	20
3.2.2 GENSET controller buttons	20
3.2.3 GENSET controller LEDs	22
3.2.4 Change modes	23
3.2.5 Start the genset	23
3.2.6 Stop the genset	23
3.2.7 Close the genset breaker	24
3.2.8 Open the genset breaker	24
3.3 MAINS controller basic actions	25
3.3.1 About operation of the MAINS controller	25
3.3.2 MAINS controller buttons with no tie breaker	25
3.3.3 MAINS controller LEDs with no tie breaker	26
3.3.4 MAINS controller buttons with tie breaker	26
3.3.5 MAINS controller LEDs with tie breaker	27
3.3.6 Change modes	28
3.3.7 Close the mains breaker	28

3.3.8 Open the mains breaker.....	28
3.3.9 Close the tie breaker.....	28
3.3.10 Open the tie breaker.....	29
3.4 BUS TIE breaker controller basic actions.....	30
3.4.1 About operation of the BUS TIE breaker controller.....	30
3.4.2 BUS TIE breaker controller LEDs and buttons.....	31
3.4.3 Close the bus tie breaker.....	32
3.4.4 Open the bus tie breaker.....	32
3.5 Operator messages.....	33
3.5.1 Controller status texts.....	33
3.5.2 Operator information messages.....	34
4. Home	
4.1 Home page.....	36
5. Log on	
5.1 Log on page.....	37
6. Configure	
6.1 Configure page.....	38
6.2 Date and time page.....	39
6.3 View design page.....	40
6.3.1 Add or configure a view.....	41
6.3.2 Configure Exhaust aftertreatment dashboard view.....	43
6.4 Pair page.....	45
6.4.1 Identify controller.....	45
6.5 Counters page.....	46
6.6 Parameters.....	47
6.6.1 Parameters list page.....	47
6.6.2 Configure a curve.....	48
6.7 Input/output.....	49
6.7.1 About input/output.....	49
6.7.2 Rack or ECU selection page.....	51
6.7.3 Module selection page.....	52
6.7.4 Terminal selection page.....	53
6.7.5 Digital input (DI) page.....	54
6.7.6 Digital output (DO) page.....	55
6.7.7 Analogue input (AI) page.....	56
6.7.8 Analogue output (AO or PWM) page.....	57
7. Alarms	
7.1 Alarms page.....	58
7.1.1 Alarm state.....	59
7.1.2 Shelved alarms.....	59
7.1.3 Remove from service.....	60
7.1.4 Silence horn.....	60
8. Tools	
8.1 Tools page.....	62
8.2 Tags page.....	63
8.3 Backup page.....	64

8.4 Restore	65
8.4.1 Restore restrictions	65
8.4.2 Restore page	66
8.4.3 Restore selection page	67
8.5 Quick connect	68
8.6 Regulator status	69
8.6.1 Regulator status AVR page	69
8.6.2 Regulator status GOV page	70
8.7 Units page	71
8.8 Communication	72
8.8.1 About communication	72
8.8.2 Controller communication page	72
8.8.3 Display communication page	73
9. Tools - Advanced	
9.1 Tools advanced page	74
9.2 Brightness page	75
9.2.1 Brightness level page	76
9.2.2 Brightness time page	77
9.3 Permissions page	78
9.3.1 Groups page	79
9.3.2 Users page	80
10. Log	
10.1 Log page	81
10.2 DM2 Log page	82
11. Info	
11.1 Info page	83
12. Live data	
12.1 Live data page	84
12.2 Visual synchronisation page	85
12.3 Exhaust aftertreatment dashboard (Tier4)	86
13. Troubleshooting	
13.1 Troubleshooting alarms	87
13.2 Troubleshooting analogue input sensor failures	87
13.3 Troubleshooting communication	87
14. End-of-life	
14.1 Disposal of waste electrical and electronic equipment	89

1. About the Operator's manual

1.1 Symbols and notation

1.1.1 Symbols for general notes

NOTE This shows general information.



More information

This shows where you can find more information.



Example

This shows an example.



How to ...

This shows a link to a video for help and guidance.

1.1.2 Symbols for hazard statements



DANGER!



This shows dangerous situations.

If the guidelines are not followed, these situations will result in death, serious personal injury, and equipment damage or destruction.



WARNING



This shows potentially dangerous situations.

If the guidelines are not followed, these situations could result in death, serious personal injury, and equipment damage or destruction.



CAUTION



This shows low level risk situation.

If the guidelines are not followed, these situations could result in minor or moderate injury.

NOTICE






This shows an important notice

Make sure to read this information.



1.1.3 Symbols for LEDs

LEDs in this document are noted by the following symbols:

Symbol	Colour	State		Notes
	Grey	Off	Static	<ul style="list-style-type: none"> The LED is not active. The feature or indication is not active.
	Any	On	Static	The feature or indication is active.
	Any	On	Flashing	The feature or indication is active.

NOTE Some products do not support all LED colours.

1.2 Intended users of the Operator's manual

 CAUTION	
	<p>Read this manual</p> <p>Read this manual before you operate the system. Failure to do this may result in personal injury and damage to the equipment.</p>

The Operator's manual is for the operator that completes daily operations with the controller. The manual includes information about the LEDs, buttons and screens, and general operator tasks, alarms, and logs.

1.3 Software versions

The information in this document relates to software versions:

Software	Details	Version
PCM APPL	Controller application	1.0.23.x
DU APPL	Display unit application	1.0.20.x
PICUS	PC software	1.0.20.x

1.4 Technical support

Technical documentation

Download the technical documentation from the DEIF website: www.deif.com/documentation/

Service and support

DEIF is committed to being available to our customers and partners 24 hours a day, seven days a week, to guarantee the highest levels of service and support.

www.deif.com/support

Training

DEIF arranges **training courses** at DEIF offices worldwide.

www.deif.com/training

Additional service

DEIF offers **service** with design, commissioning, operating and optimisation.

www.deif.com/support/local-office

1.5 Warnings and safety

Safety during installation and operation

When you install and operate the equipment, you may have to work with dangerous currents and voltages. The installation must only be carried out by authorised personnel who understand the risks involved in working with electrical equipment.



DANGER!



Hazardous live currents and voltages

Do not touch any terminals, especially the AC measurement inputs and the relay terminals, as this could lead to injury or death.

Automatic and remote-controlled starts



CAUTION



Automatic genset start

The power management system automatically starts gensets when more power is needed. It can be difficult for an inexperienced operator to predict which gensets will start. In addition, gensets can be started remotely (for example, via an Ethernet connection, or a digital input).

To avoid personal injury, the genset design, the layout, and maintenance procedures must take this into account.

Do not manually override active alarm actions



DANGER!



Manual override of latched alarm action

If the alarm action is manually overridden, a latched alarm does NOT provide any protection.

Do not override the alarm action of an active alarm. An alarm may be active because it is latched, or because the alarm condition is still present.



Latched *Over-current* alarm example

The controller trips a breaker because of over-current. The operator then manually (that is, not using the controller) closes the breaker while the *Over-current* alarm is still latched.

If another over-current situation arises, the controller **does not trip the breaker again**. The controller regards the original *Over-current* latched alarm as still active, and it does not provide protection.

1.6 Legal information

Warranty

The rack may only be opened to remove, replace, and/or add a hardware module or the internal RTC battery (if fitted). The procedure in the **Installation instructions** must be followed. If the rack is opened for any other reason, and/or the procedure is not followed, then the warranty is void.

If the display unit is opened, then the warranty is void.

Open source software

This product contains open source software licensed under, for example, the GNU General Public License (GNU GPL) and GNU Lesser General Public License (GNU LGPL). The source code for this software can be obtained by contacting DEIF at support@deif.com. DEIF reserves the right to charge for the cost of the service.

Trademarks

DEIF, *power in control* and the DEIF logo are trademarks of DEIF A/S.

Bonjour® is a registered trademark of Apple Inc. in the United States and other countries.

Adobe®, *Acrobat*®, and *Reader*® are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

CANopen® is a registered community trademark of CAN in Automation e.V. (CiA).

SAE J1939® is a registered trademark of SAE International®.

CODESYS® is a trademark of CODESYS GmbH.

EtherCAT®, *EtherCAT P*®, *Safety over EtherCAT*®, are trademarks or registered trademarks, licensed by Beckhoff Automation GmbH, Germany.

Modbus® is a registered trademark of Schneider Automation Inc.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

All trademarks are the properties of their respective owners.

Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

Copyright

© Copyright DEIF A/S. All rights reserved.

2. Getting started

2.1 About controller operation

The GPC 300 controllers make sure that the system is protected for typical land applications.

Local or Remote mode

LOCAL mode uses command start sequences from the display push-buttons. Remote commands for sequences are ignored.

REMOTE mode uses command start sequences from digital input, PICUS, Modbus, and/or CustomLogic or CODESYS. Display push-buttons for sequences are ignored.

Buttons and LEDs

You can use the push-buttons to operate the system. You can change modes, start pre-programmed sequences, and silence alarms. The buttons to start or stop the genset, or close or open the breakers, are only active in LOCAL mode.

Some push-buttons may not be used, subject to the design of the system. Check with the designer of the system.

Push-buttons that can be enabled or not enabled for use:

- Mode change
- Mute alarms
- Start/stop engine
- Open/close breaker

The display LEDs show the status of the system.

Display screen

Use the display screen to:

- Monitor system operation.
- Log on to the controller.
- See alarm lists and logs.
- Acknowledge and unlatch alarms.
- Configure the controller settings.

NOTE Features are protected by user level permissions.

PICUS

Power In Control Utility Software (PICUS) is the computer software to configure and monitor the controllers. You can connect a computer with PICUS to the controller (direct connection). You can now configure, supervise, send commands and more.




More information

See <https://www.deif.com/products/picus/> for the latest software download and information.


2.2 About the display unit (DU 300)

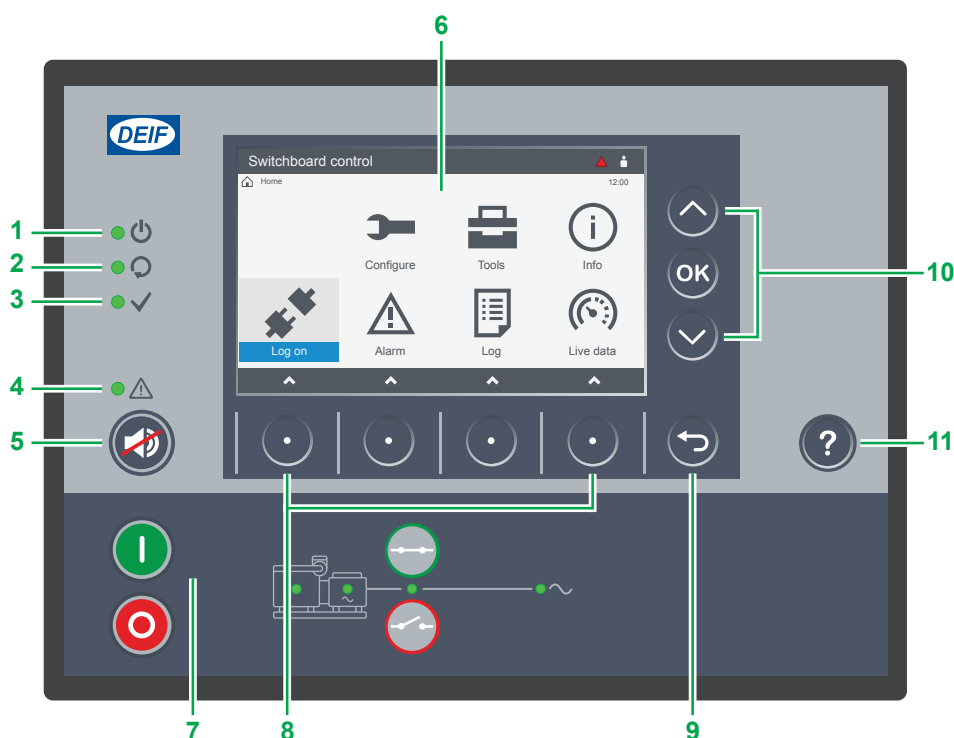


2.2.1 Display, LEDs, and buttons



No.	Item	Notes	
1	Display unit power	<ul style="list-style-type: none"> ● Off : Unit not powered. 	<ul style="list-style-type: none"> ● Green : Unit powered.
2	Self-check OK	<ul style="list-style-type: none"> ● Off : Controller self-check not OK, or no connection to the controller. 	<ul style="list-style-type: none"> ● Green : Controller self-check OK.
3	Ready for operation	<ul style="list-style-type: none"> ● Off : The controller is in manual regulation, or an alarm action prevents the source from supplying power. 	<ul style="list-style-type: none"> ● Green : The controller is not in manual regulation and no alarm action prevents the source from supplying power.
4	Alarm	<ul style="list-style-type: none"> ● Green : No alarms. ● Yellow : Unlatched alarms can be reset. ● Red : All active alarms acknowledged. 	<ul style="list-style-type: none"> ● Green flash : Only cleared unacknowledged alarms. ● Yellow flash : Unacknowledged latched alarms ● Red flash : Unacknowledged alarms.
5	Horn silence	Stop the horn output.	Hold: Change to alarms page.
6	Screen	Shows the feature or page.	
7	Bottom strip	LEDs and buttons for the controller type.	
8	Soft key	Move selection to a column, or select the soft key shown on screen.	
9	Back	Change to previous page.	Hold: Change to home page.
10	Selection on screen	<ul style="list-style-type: none"> ▲ Up : Move selection up on the screen. OK OK : confirm selection on screen. 	<ul style="list-style-type: none"> ▼ Down : Move selection down on the screen.
11	Help	Change to help page.	Hold: Change to Live data page.

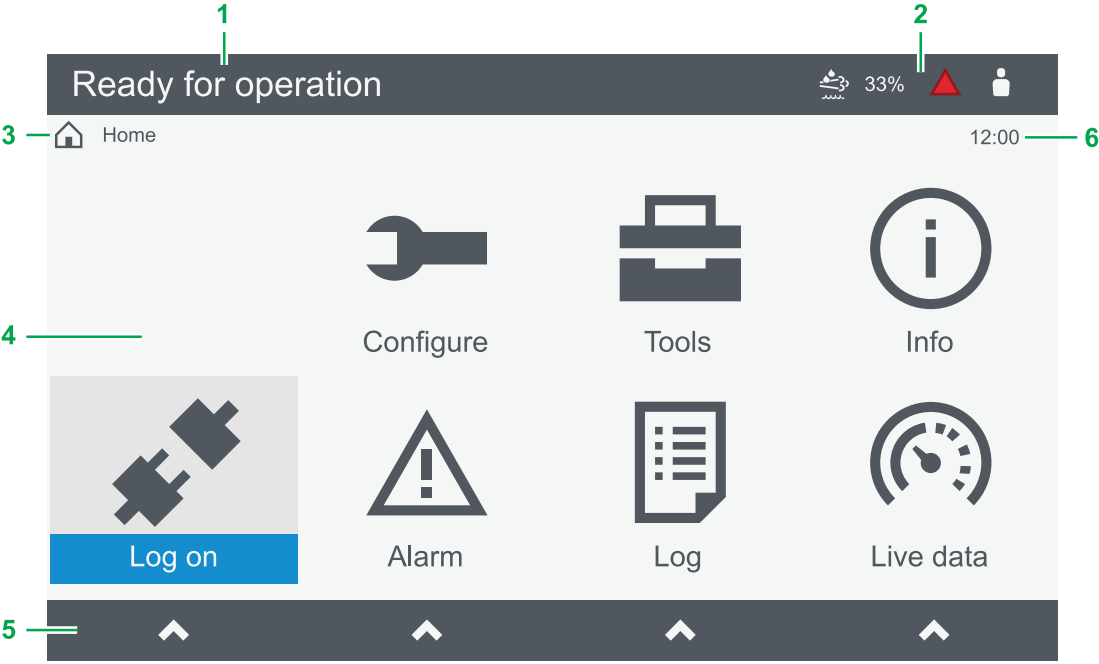2.2.2 Screen layout




No.	Item	Notes	
1	Status text	Shows the current controller status text. This varies depending on the operation of the controller.	
2	Symbols	Shows information as symbols:	
		 Diesel Exhaust Fluid (DEF) level. *	 Active alarms in system.
		 Logged on user.	
3	Path	Shows the path for the selected page.	
4	Page	Shows the menu or page.	
5	Soft keys	Shows the soft keys for the page viewed.	
6	Time	Shows the time from the controller.	

NOTE * Diesel Exhaust Fluid (DEF) percentage level is only shown if data is available.


2.2.3 About the virtual keyboard


The display unit features several virtual keyboards to enter information or settings.

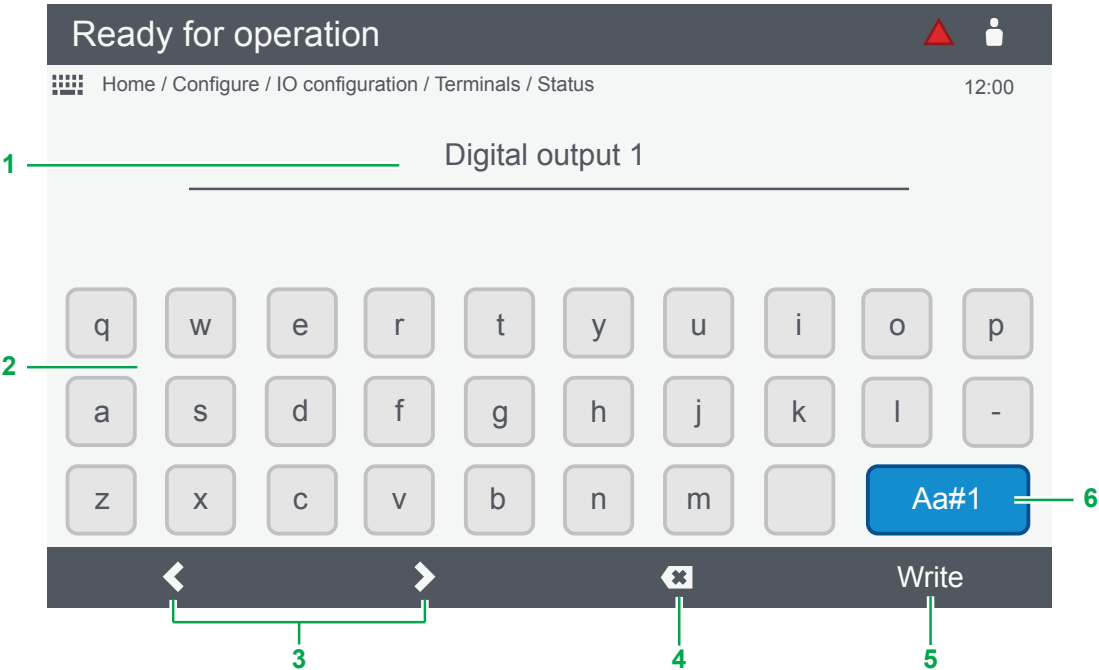




No.	Item	Notes
1	Text input	Shows the text, numbers, or value entered.
2	Virtual keyboard	Shows keyboard layout selected.
3	Cursor selection	◀ Move left cursor selection. ▶ Move right cursor selection. Or use ⬆ Up or ⬇ Down .
4	Delete	✖ Delete character at selection.
5	Soft key confirm	Soft key function varies by page selected.
6	Change keyboard	Changes layout to a different virtual keyboard.

2.2.4 About the help

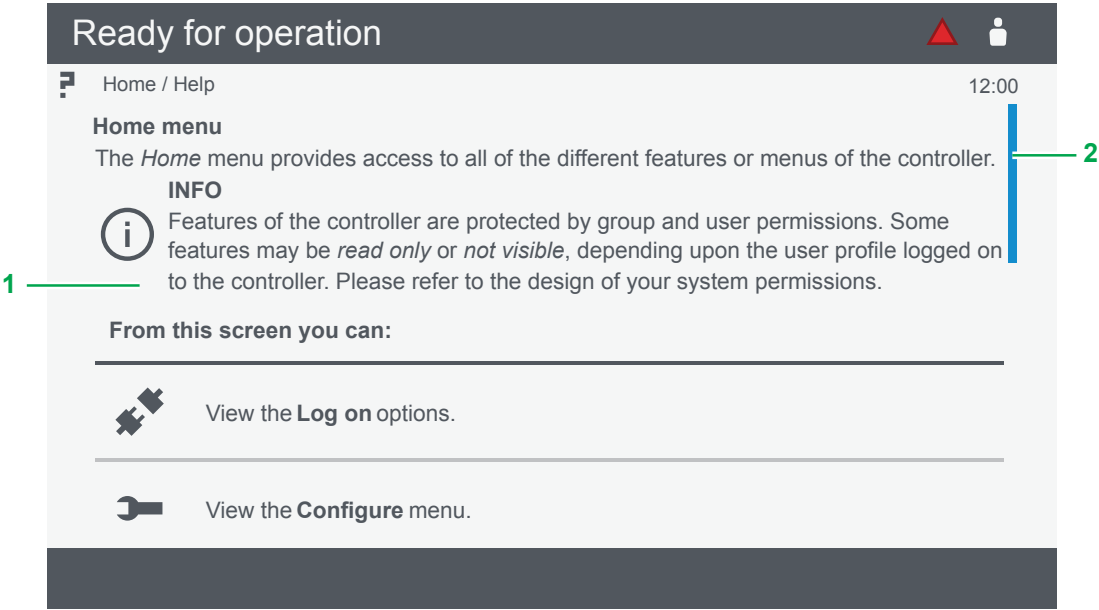View help for any page by selecting  **Help** button



No.	Item	Notes	
1	Help information	Shows help information for the page you were viewing. The default help is shown if not help is available for the page.	
2	Scroll	 Scroll up the page.	 Scroll down the page.

Select  **Back** to close the help page and return to the previous page.

3. Operating the system

3.1 SINGLE genset controller basic actions

3.1.1 About operation of the SINGLE genset controller


A **SINGLE genset** controller controls and protects a prime mover and generator (that is, a genset), the generator breaker, and optionally a mains breaker. There are no other controllers on the single-line diagram. A system can include only one **SINGLE genset** controller.











Normal operation

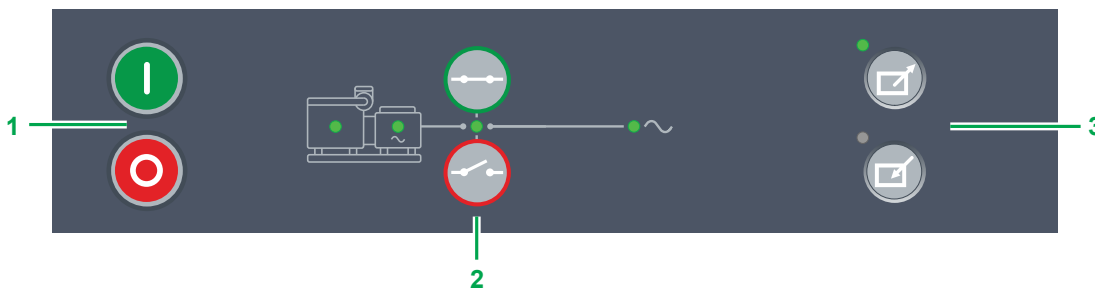The **SINGLE genset** controller is usually in LOCAL mode.

The controller can operate in REMOTE mode or LOCAL mode.


3.1.2 SINGLE genset controller buttons with no mains breaker



No.	Item	Notes	
1	Genset	 Start genset and start sequence. *	 Stop genset and stop sequence. *
2	Breaker	 Close breaker : Starts close sequence. *	 Open breaker : Starts open sequence. *
3	Options	 REMOTE mode : Change to REMOTE if possible. *	 Off : Controller not in REMOTE.  Green : Controller in REMOTE.
		 LOCAL mode : Change to LOCAL if possible.	 Off : Controller not in LOCAL.  Green : Controller in LOCAL.


NOTE * Only in LOCAL mode. In REMOTE the controller ignores the input.



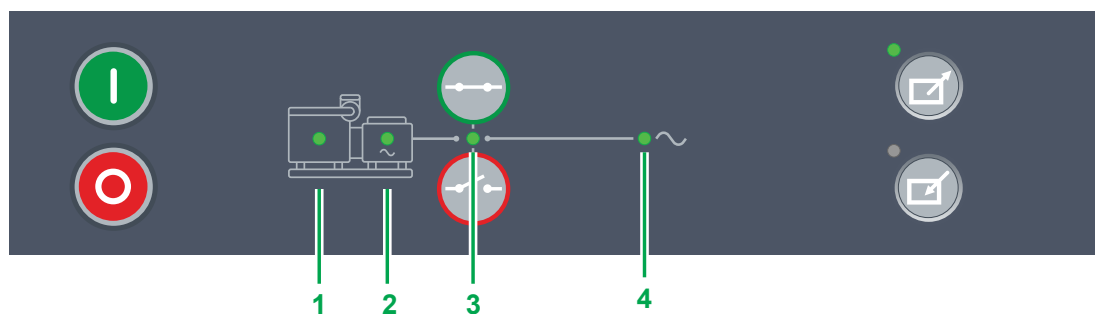





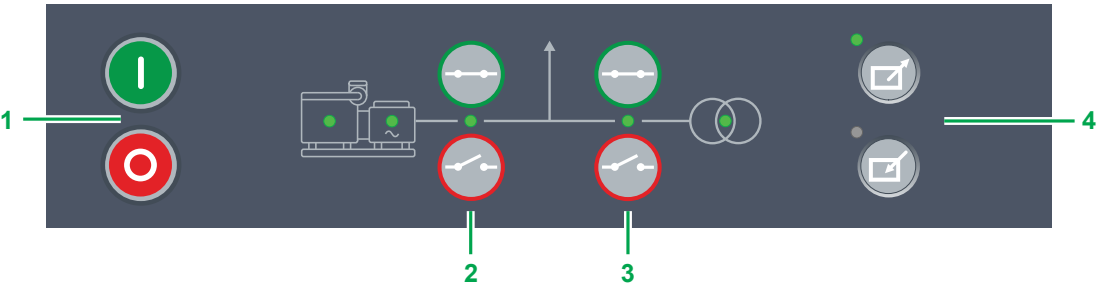



3.1.3 SINGLE genset controller LEDs with no mains breaker



No.	Item	Notes
1	Engine	<ul style="list-style-type: none"> ● Off : Engine not running or no running feedback. ⚙️ Green flash : Engine start sequence initiated. ● Green : Running feedback. Oil pressure, RPM, frequency within configured limits.
2	Generator	<ul style="list-style-type: none"> ● Off : Generator voltage too low to measure. ● Yellow : Generator voltage and frequency not OK. Cannot close breaker. ⚙️ Green flash : Generator voltage and frequency OK, V&Hz OK timer still running. Cannot close breaker. ● Green : Generator voltage and frequency OK, and controller can synchronise and close breaker.
3	Breaker	<ul style="list-style-type: none"> ● Off : Breaker open ● Green : Breaker closed. ● Yellow : Breaker spring charging (only compact breaker). ⚙️ Yellow flash : Synchronising or de-loading breaker. ⚡ Red flash : Any generator breaker trip alarm active. ● Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
4	Mains	<ul style="list-style-type: none"> ● Green : Voltage and frequency OK, and controller can synchronise and close breaker. ⚙️ Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker. ● Yellow : Voltage and frequency are measurable, but not OK. ● Red : Voltage too low to measure. Controller can close breaker. ⚡ Red flash : Blackout detection timer running and controller checking the busbar.


3.1.4 SINGLE genset controller buttons with mains breaker



No.	Item	Notes	
1	Genset	 Start genset and start sequence. *	 Stop genset and stop sequence. *
2	Generator breaker	 Close breaker : Starts close sequence. *	 Open breaker : Starts open sequence. *
3	Mains breaker	 Close breaker : Starts close sequence. *	 Open breaker : Starts open sequence. *
4	Options	 REMOTE mode : Change to REMOTE if possible. *	 Off : Controller not in REMOTE.  Green : Controller in REMOTE.
		 LOCAL mode : Change to LOCAL if possible.	 Off : Controller not in LOCAL.  Green : Controller in LOCAL.





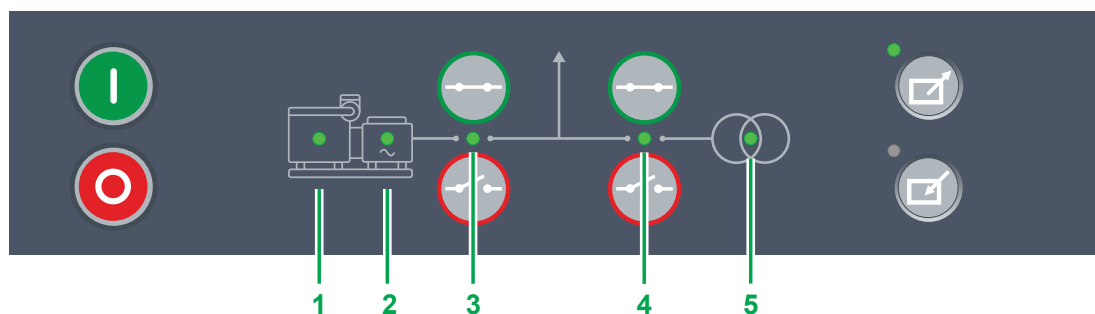

NOTE * Only in LOCAL mode. In REMOTE the controller ignores the input.

3.1.5 SINGLE genset controller LEDs with mains breaker







No.	Item	Notes
1	Engine	<ul style="list-style-type: none"> ● Off : Engine not running or no running feedback. ⚙️ Green flash : Engine start sequence initiated. ● Green : Running feedback. Oil pressure, RPM, frequency within configured limits.
2	Generator	<ul style="list-style-type: none"> ● Off : Generator voltage too low to measure. ● Yellow : Generator voltage and frequency not OK. Cannot close breaker. ⚙️ Green flash : Generator voltage and frequency OK, V&Hz OK timer still running. Cannot close breaker. ● Green : Generator voltage and frequency OK, and controller can synchronise and close breaker.
3	Generator breaker	<ul style="list-style-type: none"> ● Off : Breaker open ● Green : Breaker closed. ● Yellow : Breaker spring charging (only compact breaker). ⚙️ Yellow flash : Synchronising or de-loading breaker. ⚡ Red flash : Any generator breaker trip alarm active. ● Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
4	Mains breaker	<ul style="list-style-type: none"> ● Off : Breaker open ● Green : Breaker closed. ● Yellow : Breaker spring charging (only compact breaker). ⚙️ Yellow flash : Synchronising or de-loading breaker. ⚡ Red flash : Any mains breaker trip alarm active. ● Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
5	Mains	<ul style="list-style-type: none"> ● Green : Voltage and frequency OK, and controller can synchronise and close breaker. ⚙️ Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker. ● Yellow : Voltage and frequency are measurable, but not OK. ● Red : Voltage too low to measure. Controller can close breaker. ⚡ Red flash : Blackout detection timer running and controller checking the busbar.

3.1.6 Change modes







Mode	Procedure
REMOTE 	<p>To change to REMOTE mode from LOCAL mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green when the controller is in REMOTE mode.
LOCAL 	<p>To change to LOCAL mode from REMOTE mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green when the controller is in LOCAL mode.


3.1.7 Start the genset

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the engine start is based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>To start the genset:</p> <ol style="list-style-type: none"> Push  once. The controller runs the start sequence. <ul style="list-style-type: none"> If everything is OK, the genset starts. If the genset does not start, the display shows an info message. If Idle run start is configured: * <ul style="list-style-type: none"> The controller runs the Idle run start sequence. <ul style="list-style-type: none"> If needed, to override the Idle run start push  again.

NOTE * Idle run may not be permitted or approved by certain classification societies.








3.1.8 Stop the genset

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the engine stop is based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>The genset breaker must be open to stop the genset. If the genset breaker is not open, press  to open the breaker before stopping the genset.</p> <p> More information See Open the genset breaker for more information.</p> <p>To stop the genset:</p> <ol style="list-style-type: none"> Push  once. The controller runs the cooldown period. <ul style="list-style-type: none"> If necessary, to override the cooldown time, push  again. <ul style="list-style-type: none"> Note: A genset stop without cooldown time increases the mechanical wear of the genset. The genset may also have problems if it needs to restart immediately. The genset should only be stopped without cooldown time in emergencies. Contact the genset manufacturer for more information. If Idle run stop is configured: * <ul style="list-style-type: none"> The controller runs the Idle run stop sequence.





Mode	Procedure
	<ul style="list-style-type: none"> ◦ If needed, to override the Idle run stop , push  again. <p>4. If the genset does not stop, the controller activates an alarm.</p>


NOTE * Idle run may not be permitted or approved by certain classification societies.

3.1.9 Close the genset breaker




Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the generator breaker is closed based on a remote signal, for example, from a PLC.
	<p>The genset must be running to close the genset breaker. If the genset is not running, push  to start the genset.</p> <p> More information See Start the genset for more information.</p> <p>To close the breaker:</p>
LOCAL 	<p>1. Push  to close the genset breaker.</p> <ol style="list-style-type: none"> The controller synchronises the genset with the busbar. (the breaker LED flashes yellow ). When the genset and busbar synchronise, the controller closes the breaker. When the breaker is closed, the breaker LED is green . <ul style="list-style-type: none"> • If the genset and busbar are not synchronised before the synchronisation timer expires, the breaker does not close. The synchronisation failure alarm is activated.

3.1.10 Open the genset breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the generator breaker is opened based on a remote signal, for example, from a PLC.
	<p>To open the genset breaker:</p>
LOCAL 	<p>1. Push  to open the genset breaker. *</p> <ol style="list-style-type: none"> If load sharing is present, the controller de-loads the breaker until the load is less than the de-load open point (the breaker LED flashes yellow ). The controller then opens the generator breaker. The breaker LED is OFF when the breaker is open. If load sharing is not present or not possible, the controller immediately opens the generator breaker. The breaker LED is OFF when the breaker is open.




NOTE * If there is a position failure for the breaker, you can still attempt to try and open the breaker and push .


3.1.11 Close the mains breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the mains breaker is closed based on a remote signal, for example, from a PLC.
	<p>The mains must be running to close the mains breaker.</p> <p>To close the breaker:</p>
LOCAL 	<p>1. Push  to close the mains breaker.</p>

Mode	Procedure
	a. The controller synchronises the mains with the busbar. (the breaker LED flashes yellow ☀️). b. When the mains and busbar synchronise, the controller closes the breaker. c. When the breaker is closed, the breaker LED is green ● . <ul style="list-style-type: none"> If the mains and busbar are not synchronised before the synchronisation timer expires, the breaker does not close. The synchronisation failure alarm is activated.

3.1.12 Open the mains breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the mains breaker is opened based on a remote signal, for example, from a PLC.
LOCAL 	To open the mains breaker: 1. Push  to open the mains breaker. * a. The controller opens the mains breaker. The breaker LED is OFF when the breaker is open. b. The breaker LED is OFF when the breaker is open.

NOTE * If there is a position failure for the breaker, you can still attempt to try and open the breaker and push .

3.2 GENSET controller basic actions

3.2.1 About operation of the GENSET controller


A system can include a number of **GENSET** controllers that work together to ensure effective power management.





Normal operation

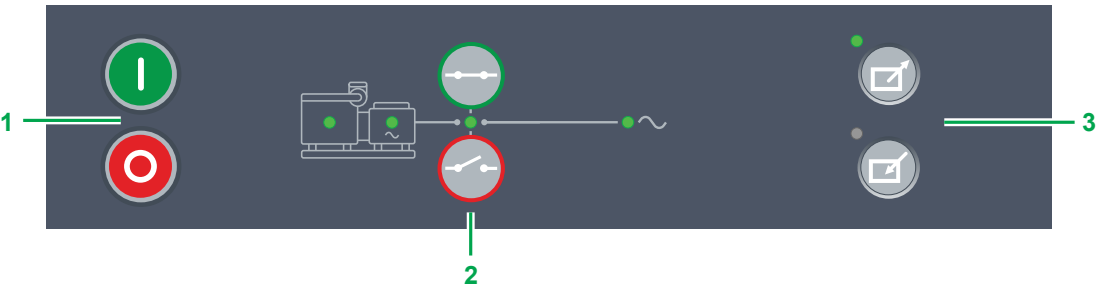

The **GENSET** controller is usually in LOCAL mode.

The controller can operate in REMOTE mode or LOCAL mode.


3.2.2 GENSET controller buttons



No.	Item	Notes
1	Genset	 Start genset and start sequence.  Stop genset and stop sequence.
2	Breaker	 Close breaker : Starts close sequence.  Open breaker : Starts open sequence.





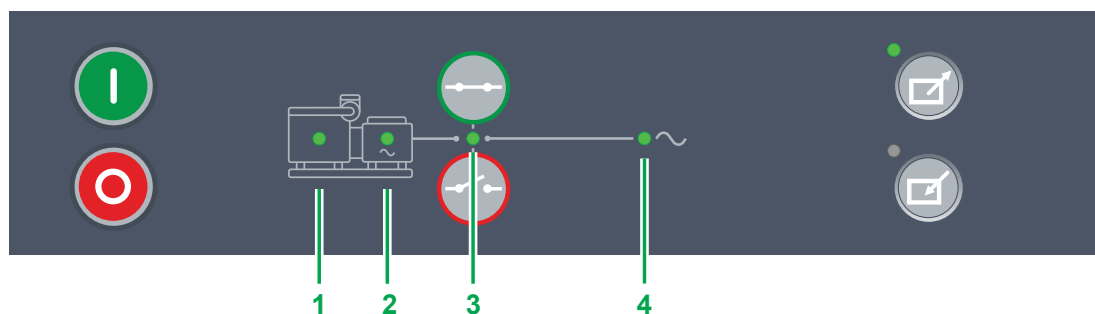



No.	Item	Notes	
3	Options	 REMOTE mode : Change to REMOTE if possible.	<ul style="list-style-type: none"> ● Off : Controller not in REMOTE. ● Green : Controller in REMOTE.
		 LOCAL mode : Change to LOCAL if possible.	<ul style="list-style-type: none"> ● Off : Controller not in LOCAL. ● Green : Controller in LOCAL.

3.2.3 GENSET controller LEDs







No.	Item	Notes
1	Engine	<ul style="list-style-type: none"> ● Off : Engine not running or no running feedback. ☀ Green flash : Engine start sequence initiated. ● Green : Running feedback. Oil pressure, RPM, frequency within configured limits.
2	Generator	<ul style="list-style-type: none"> ● Off : Generator voltage too low to measure. ● Yellow : Generator voltage and frequency not OK. Cannot close breaker. ☀ Green flash : Generator voltage and frequency OK, V&Hz OK timer still running. Cannot close breaker. ● Green : Generator voltage and frequency OK, and controller can synchronise and close breaker.
3	Breaker	<ul style="list-style-type: none"> ● Off : Breaker open ● Green : Breaker closed. ● Yellow : Breaker spring charging (only compact breaker). ☀ Yellow flash : Synchronising or de-loading breaker. ☀ Red flash : Any generator breaker trip alarm active. ● Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
4	Busbar	<ul style="list-style-type: none"> ● Green : Voltage and frequency OK, and controller can synchronise and close breaker. ☀ Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker. ● Yellow : Voltage and frequency are measurable, but not OK. ● Red : Voltage too low to measure. Controller can close breaker. ☀ Red flash : Blackout detection timer running and controller checking the busbar.

3.2.4 Change modes







Mode	Procedure
REMOTE 	<p>To change to REMOTE mode from LOCAL mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green  when the controller is in REMOTE mode.
LOCAL 	<p>To change to LOCAL mode from REMOTE mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green  when the controller is in LOCAL mode.


3.2.5 Start the genset

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the engine start is based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>To start the genset:</p> <ol style="list-style-type: none"> Push  once. The controller runs the start sequence. <ul style="list-style-type: none"> If everything is OK, the genset starts. If the genset does not start, the display shows an info message. If Idle run start is configured: * <ul style="list-style-type: none"> The controller runs the Idle run start sequence. <ul style="list-style-type: none"> If needed, to override the Idle run start push  again.

NOTE * Idle run may not be permitted or approved by certain classification societies.








3.2.6 Stop the genset

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the engine stop is based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>The genset breaker must be open to stop the genset. If the genset breaker is not open, press  to open the breaker before stopping the genset.</p> <p> More information See Open the genset breaker for more information.</p> <p>To stop the genset:</p> <ol style="list-style-type: none"> Push  once. The controller runs the cooldown period. <ul style="list-style-type: none"> If necessary, to override the cooldown time, push  again. <ul style="list-style-type: none"> Note: A genset stop without cooldown time increases the mechanical wear of the genset. The genset may also have problems if it needs to restart immediately. The genset should only be stopped without cooldown time in emergencies. Contact the genset manufacturer for more information. If Idle run stop is configured: * <ul style="list-style-type: none"> The controller runs the Idle run stop sequence.





Mode	Procedure
	<ul style="list-style-type: none"> ◦ If needed, to override the Idle run stop , push  again. <p>4. If the genset does not stop, the controller activates an alarm.</p>


NOTE * Idle run may not be permitted or approved by certain classification societies.

3.2.7 Close the genset breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the generator breaker is closed based on a remote signal, for example, from a PLC.
	<p>The genset must be running to close the genset breaker. If the genset is not running, push  to start the genset.</p> <p> More information See Start the genset for more information.</p> <p>To close the breaker:</p>
LOCAL 	<p>1. Push  to close the genset breaker.</p> <ol style="list-style-type: none"> The controller synchronises the genset with the busbar. (the breaker LED flashes yellow . When the genset and busbar synchronise, the controller closes the breaker. When the breaker is closed, the breaker LED is green . <ul style="list-style-type: none"> • If the genset and busbar are not synchronised before the synchronisation timer expires, the breaker does not close. The synchronisation failure alarm is activated.

3.2.8 Open the genset breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the generator breaker is opened based on a remote signal, for example, from a PLC.
	<p>To open the genset breaker:</p>
LOCAL 	<p>1. Push  to open the genset breaker. *</p> <ol style="list-style-type: none"> If load sharing is present, the controller de-loads the breaker until the load is less than the de-load open point (the breaker LED flashes yellow . The controller then opens the generator breaker. The breaker LED is OFF when the breaker is open. If load sharing is not present or not possible, the controller immediately opens the generator breaker. The breaker LED is OFF when the breaker is open.

NOTE * If there is a position failure for the breaker, you can still attempt to try and open the breaker and push .

3.3 MAINS controller basic actions

3.3.1 About operation of the MAINS controller


A **MAINS** controller controls a mains breaker (MB) to a mains, and optionally also a tie breaker (TB) to a load point.









Normal operation

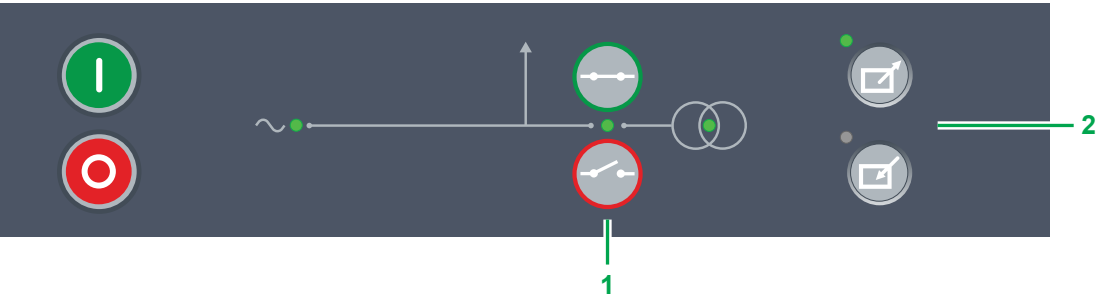The **MAINS** controller is usually in LOCAL mode.


The controller can operate in REMOTE mode or LOCAL mode.

3.3.2 MAINS controller buttons with no tie breaker




No.	Item	Notes	
1	Mains breaker	 Close breaker : Starts close sequence.	 Open breaker : Starts open sequence.
2	Options	 REMOTE mode : Change to REMOTE if possible.	 Off : Controller not in REMOTE.  Green : Controller in REMOTE.
		 LOCAL mode : Change to LOCAL if possible.	 Off : Controller not in LOCAL.  Green : Controller in LOCAL.

3.3.3 MAINS controller LEDs with no tie breaker

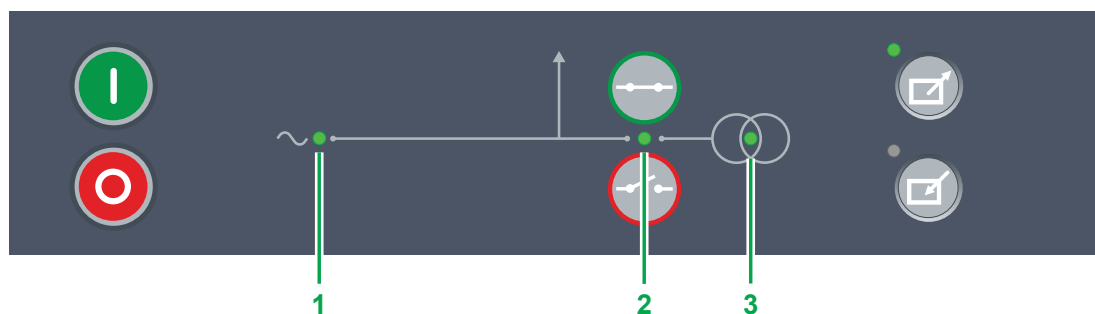





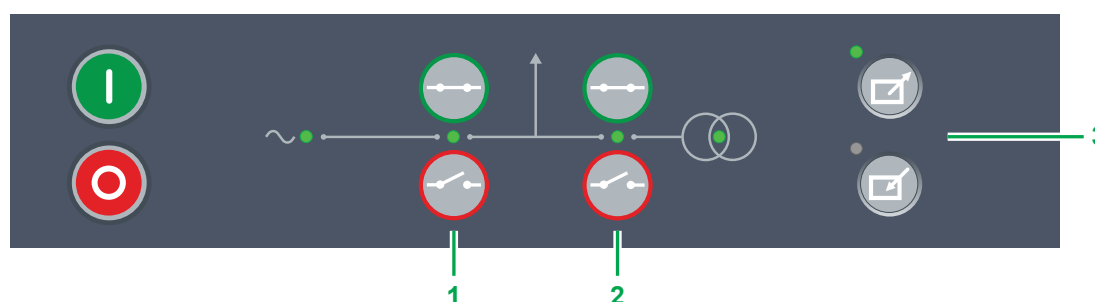

No.	Item	Notes
1	Busbar	<ul style="list-style-type: none"> Green : Voltage and frequency OK, and controller can synchronise and close breaker. Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker. Yellow : Voltage and frequency are measurable, but not OK. Red : Voltage too low to measure. Controller can close breaker. Red flash: Blackout detection timer running and controller checking the busbar.
2	Mains beaker	<ul style="list-style-type: none"> Off : Breaker open Green : Breaker closed. Yellow : Breaker spring charging (only compact breaker). Yellow flash : Synchronising or de-loading breaker. Red flash : Any generator breaker trip alarm active. Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
3	Mains	<ul style="list-style-type: none"> Green : Voltage and frequency OK, and controller can synchronise and close breaker. Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker. Yellow : Voltage and frequency are measurable, but not OK. Red : Voltage too low to measure. Controller can close breaker. Red flash: Blackout detection timer running and controller checking the mains.


3.3.4 MAINS controller buttons with tie breaker









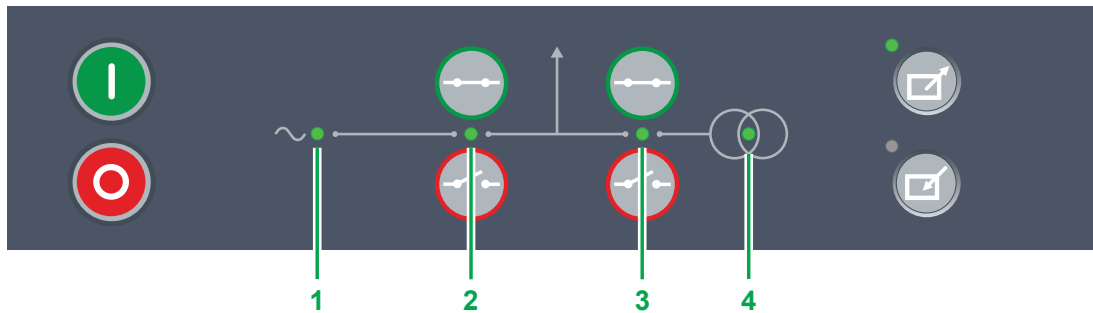















No.	Item	Notes
1	Tie breaker	<ul style="list-style-type: none"> Close breaker : Starts close sequence. Open breaker : Starts open sequence.
2	Mains breaker	<ul style="list-style-type: none"> Close breaker : Starts close sequence. Open breaker : Starts open sequence.







No.	Item	Notes
3	Options	 REMOTE mode : Change to REMOTE if possible. <ul style="list-style-type: none">  Off : Controller not in REMOTE.  Green : Controller in REMOTE.
		 LOCAL mode : Change to LOCAL if possible. <ul style="list-style-type: none">  Off : Controller not in LOCAL.  Green : Controller in LOCAL.

3.3.5 MAINS controller LEDs with tie breaker








No.	Item	Notes
1	Busbar	<ul style="list-style-type: none">  Green : Voltage and frequency OK, and controller can synchronise and close breaker.  Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker.  Yellow : Voltage and frequency are measurable, but not OK.  Red : Voltage too low to measure. Controller can close breaker.  Red flash: Blackout detection timer running and controller checking the busbar.
2	Tie breaker	<ul style="list-style-type: none">  Off : Breaker open  Green : Breaker closed.  Yellow : Breaker spring charging (only compact breaker).  Yellow flash : Synchronising or de-loading breaker.  Red flash : Any generator breaker trip alarm active.  Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
3	Mains breaker	<ul style="list-style-type: none">  Off : Breaker open  Green : Breaker closed.  Yellow : Breaker spring charging (only compact breaker).  Yellow flash : Synchronising or de-loading breaker.  Red flash : Any generator breaker trip alarm active.  Red : Tripped breaker, and trip alarm unacknowledged and/or alarm condition present.
4	Mains	<ul style="list-style-type: none">  Green : Voltage and frequency OK, and controller can synchronise and close breaker.  Green flash : Voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker.  Yellow : Voltage and frequency are measurable, but not OK.  Red : Voltage too low to measure. Controller can close breaker.  Red flash: Blackout detection timer running and controller checking the mains.




3.3.6 Change modes


Mode	Procedure
REMOTE 	<p>To change to REMOTE mode from LOCAL mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green when the controller is in REMOTE mode.
LOCAL 	<p>To change to LOCAL mode from REMOTE mode:</p> <ol style="list-style-type: none"> Push . <ul style="list-style-type: none"> The LED next to  is green when the controller is in LOCAL mode.

3.3.7 Close the mains breaker





Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the mains breaker is closed based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>The mains must be running to close the mains breaker. To close the breaker:</p> <ol style="list-style-type: none"> Push  to close the mains breaker. <ol style="list-style-type: none"> The controller synchronises the mains with the busbar. (the breaker LED flashes yellow ). When the mains and busbar synchronise, the controller closes the breaker. When the breaker is closed, the breaker LED is green . <ul style="list-style-type: none"> If the mains and busbar are not synchronised before the synchronisation timer expires, the breaker does not close. The synchronisation failure alarm is activated.


3.3.8 Open the mains breaker

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the mains breaker is opened based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>To open the mains breaker:</p> <ol style="list-style-type: none"> Push  to open the mains breaker. * <ol style="list-style-type: none"> The controller then opens the mains breaker. The breaker LED is OFF when the breaker is open.




NOTE * If there is a position failure for the mains breaker, you can still attempt to try and open the breaker and push .


3.3.9 Close the tie breaker

Mode	Procedure
REMOTE 	<p>When the controller is in REMOTE mode, the tie breaker is closed based on a remote signal, for example, from a PLC.</p>
LOCAL 	<p>To close the breaker:</p> <ol style="list-style-type: none"> Push  to close the tie breaker. <ol style="list-style-type: none"> The controller synchronises the load point with the busbar. (the breaker LED flashes yellow ).

Mode	Procedure
	<ul style="list-style-type: none"> b. When the load point and busbar synchronise, the controller closes the breaker. c. When the breaker is closed, the breaker LED is green  . <ul style="list-style-type: none"> • If the load point and busbar are not synchronised before the synchronisation timer expires, the breaker does not close. The synchronisation failure alarm is activated.

3.3.10 Open the tie breaker

Mode	Procedure
REMOTE 	When the controller is in REMOTE mode, the tie breaker is opened based on a remote signal, for example, from a PLC.
LOCAL 	<p>To open the tie breaker:</p> <ol style="list-style-type: none"> 1. Push  to open the tie breaker. * <ol style="list-style-type: none"> a. The controller then opens the tie breaker. b. The breaker LED is OFF when the breaker is open.

NOTE * If there is a position failure for the tie breaker, you can still attempt to try and open the breaker and push .

3.4 BUS TIE breaker controller basic actions

3.4.1 About operation of the BUS TIE breaker controller

There is no restriction on the number of **BUS TIE breaker** controllers. Ring busbar connection is possible.


Normal operation



The **BUS TIE breaker** controller is usually operate in LOCAL mode.

The controller can also operate in REMOTE or LOCAL mode.


3.4.2 BUS TIE breaker controller LEDs and buttons

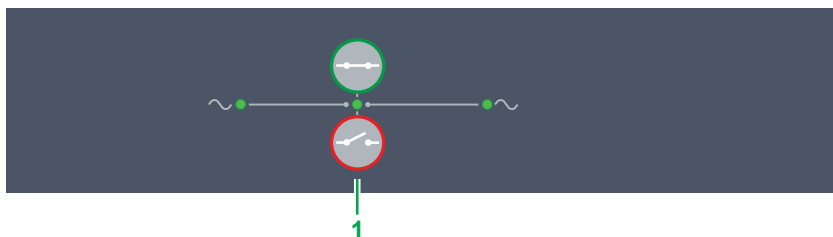








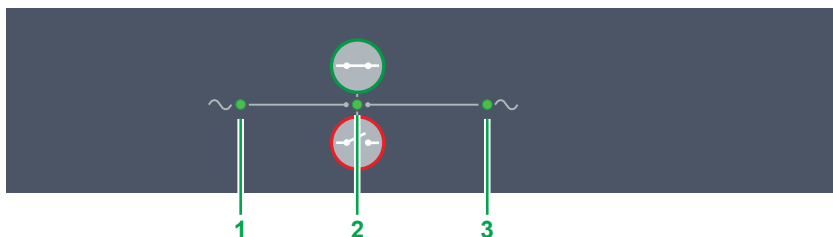





BUS TIE breaker buttons



No.	Item	Notes
1	Breaker	 Close breaker : Starts close sequence.  Open breaker : Starts open sequence.






BUS TIE breaker LEDs



No.	Item	Notes
1	Busbar A	<ul style="list-style-type: none">  Green : Busbar A voltage and frequency OK, and controller can close breaker.  Green flash : Busbar A voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker.  Yellow : Busbar A voltage and frequency are measurable, but not OK.  Red : Busbar A voltage too low to measure. Controller can close breaker.  Red flash: Blackout detection timer running and controller checking busbar A.
2	Bus tie Breaker	<ul style="list-style-type: none">  Off : Bus tie breaker open  Green : Bus tie breaker closed.  Yellow flash : Synchronising or de-loading bus tie breaker.  Red flash : Bus tie breaker configuration failure, or a position failure.  Red : Tripped bus tie breaker, and trip alarm unacknowledged and/or alarm condition present.
3	Busbar B	<ul style="list-style-type: none">  Green : Busbar A voltage and frequency OK, and controller can close breaker.  Green flash : Busbar A voltage and frequency OK, but V&Hz OK timer running. Controller cannot close breaker.  Yellow : Busbar A voltage and frequency are measurable, but not OK.  Red : Busbar A voltage too low to measure. Controller can close breaker.  Red flash: Blackout detection timer running and controller checking busbar A.





3.4.3 Close the bus tie breaker


When the bus tie breaker closes, the busbar reconnects. The busbar acts as one busbar, and not as two independent busbars.

Control	Procedure
REMOTE 	When the controller is in REMOTE mode, the bus tie breaker is closed based on a remote signal, for example, from a PLC.
LOCAL 	<p>To close the bus tie breaker:</p> <ol style="list-style-type: none"> 1. Push . <ul style="list-style-type: none"> a. The controller synchronises busbar A and busbar B (the breaker LED flashes yellow ). b. When the bus tie breaker is synchronised, the controller closes the bus tie breaker. c. When the breaker is closed, the breaker LED is green . <ul style="list-style-type: none"> • If the bus tie breaker is not synchronised before the synchronisation timer expires, the breaker does not close. A synchronisation failure alarm activates.

3.4.4 Open the bus tie breaker

When a bus tie breaker opens, the busbar divides in to two independent busbars (busbar A and busbar B). Each busbar must have enough gensets to supply the load required, before you can open the bus tie breaker.

Control	Procedure
REMOTE 	When the controller is in REMOTE mode, the bus tie breaker is opened based on a remote signal, for example, from a PLC.
LOCAL 	<p>To open the bus tie breaker:</p> <ol style="list-style-type: none"> 1. Push . * <ul style="list-style-type: none"> a. The controller calculates if there is enough power available on each busbar after the bus tie breaker opens: <ul style="list-style-type: none"> • If there is not enough power available: <ul style="list-style-type: none"> ◦ The controller does not open the bus tie breaker. ◦ The controller display shows an information message. b. The controller de-loads the bus tie breaker (the breaker LED flashes yellow ). c. When the bus tie breaker is de-loaded, the controller opens the bus tie breaker. d. When the breaker is open, the breaker LED is OFF. <ul style="list-style-type: none"> • If the bus tie breaker is not de-loaded before the de-load timer expires, the breaker does not open. The de-load failure alarm is activated.

NOTE * Even if there is a position failure for the breaker, you can still attempt to try and open the breaker and push .

3.5 Operator messages

3.5.1 Controller status texts

The controller status texts are shown at the top of the display. The status text shown depends on the type of controller. Not all texts apply for all controller types.

Status text *	Description
-	Cannot read controller status. For example, slow communication or a loss of communication.
Alarm testing	<i>Enable alarm test</i> parameter is enabled.
BTB in operation	The bus tie breaker is closed.
Cooldown - # s	The remaining time (in seconds) for the genset cooldown.
Crank off	The crank is turned off if there is no running detection of the genset during start.
Crank on	The crank is activated in order to start the genset.
De-loading GB	The controller is de-loading the generator breaker.
De-loading MAINS **	The controller is broadcasting a set point for de-loading the mains breaker.
De-loading TB ***	The controller is broadcasting a set point for de-loading the tie breaker.
Dividing section	The controller is broadcasting set points for de-loading the bus tie breaker.
Engine stopping	The genset is being stopped.
Fixed power	The genset is running and is being regulated to a fixed power.
Fixed frequency	The genset is running and is being regulated using fixed frequency regulation.
Frequency droop	The genset is running and is being regulated using frequency droop regulation.
Frequency too high	The frequency is too high and should be adjusted to a lower value.
Frequency too low	The frequency is too low and should be adjusted to a higher value.
Load sharing	The gensets that are connected to the busbar are sharing the load symmetrically with each other.
Not ready for operation	The controller is not ready for operation. For gensets <i>Start enable</i> might not be activated, or there are alarms (latched or unacknowledged) blocking the ready status.
Ready for operation	All operation conditions are met. Gensets are ready to start and/or breakers are ready to close.
MAINS in operation	MAINS supply is available, and mains breaker is closed.
MAINS not ready	MAINS is not ready to provide power to the busbar. There may be alarms blocking the mains breaker from closing.
MAINS ready	MAINS supply is available, and mains breaker is open.
Manual regulation	The genset is running and is under manual regulation.
Start prepare - # s	The remaining time (in seconds) for the genset to prepare to start.
Stop coil activated - # s	The remaining time (in seconds) before the genset shuts down.
Synchronising GB	The controller is synchronising the genset to the busbar frequency and voltage to close the generator breaker.
Synchronising sections	The controller is broadcasting the set points for synchronisation.
Synchronising MB **	The controller is broadcasting a set point for synchronisation.
Synchronising TB ***	The controller is broadcasting a set point for synchronisation.
Waiting for software	A software update is in progress.

NOTE * "# s" represents a timer countdown.

NOTE ** Applicable to both **MAINS** controller and **SINGLE genset** with mains breaker.

NOTE *** Only on **MAINS** controller with tie breaker.

3.5.2 Operator information messages

During operation some operator information messages may be shown. The information shown depends on the type of controller. Not all texts apply for all controller types.

Operator info	Additional information
Alarm blocking engine start	A block alarm is active. Clear the alarm before attempting to start the genset.
Alarm blocking GB / MB / TB / BTB close *	A block alarm is active. Clear the alarm before attempting to close the breaker.
Breaker already closed	The breaker is already closed and cannot be closed again.
Breaker already opened	The breaker is already open and cannot be opened again.
BTB close blocked	The <i>Block BTB close</i> function is active. An open breaker cannot be closed.
BTB close cancelled	The <i>BTB close</i> was cancelled by a <i>BTB open</i> command.
BTB close unblocked	The <i>Block BTB close</i> function is not active.
BTB open cancelled	The <i>BTB open</i> was cancelled by a <i>BTB close</i> command.
Dynamic synchronisation activated	The digital input is activated. The controller will use dynamic synchronisation.
Dynamic synchronisation deactivated	The digital input is deactivated. The controller will use the synchronisation type configured in the parameter.
Engine already running	The prime mover is already running and cannot be started again.
Engine already stopped	The prime mover has already stopped and cannot be stopped again.
Engine is stopping	The command has already been received. The controller is executing the prime mover stop procedure.
Engine not ready	The prime mover cannot start. There might be alarms blocking the ready status.
Engine start blocked	The <i>Block engine start</i> function is active. A stopped prime mover cannot be started.
Engine start unblocked	The <i>Block engine start</i> function is not active.
GB close blocked	The <i>Block GB close</i> or <i>Trip</i> function is active. An open breaker cannot be closed.
GB close cancelled	The <i>GB close</i> was cancelled by a <i>GB open</i> command.
GB close unblocked	The <i>Block GB close</i> function is not active.
GB is closed	The <i>Generator breaker</i> is closed.
GB is de-loading	The <i>Generator breaker</i> is currently de-loading.
GB is open	The <i>Generator breaker</i> is open.
GB is synchronising	The <i>Generator breaker</i> is synchronising.
GB open cancelled	The <i>GB open</i> was cancelled by a <i>GB close</i> command.
Not under LOCAL control	The action cannot be performed unless the controller is in LOCAL mode.
You can remove latches	There are acknowledged latched alarms in the alarm list that can be reset.
MB close blocked *	The <i>Block MB close</i> function is active. An open breaker cannot be closed.
MB close cancelled *	The <i>MB close</i> was cancelled by a <i>MB open</i> command.
MB close unblocked *	The <i>Block MB close</i> function is not active.
MB open cancelled *	The <i>MB open</i> was cancelled by a <i>MB close</i> command.


Operator info	Additional information
TB close blocked **	The <i>Block TB close</i> function is active. An open breaker cannot be closed.
TB close cancelled **	The <i>TB close</i> was cancelled by a <i>TB open</i> command.
TB close unblocked **	The <i>Block TB close</i> function is not active.
TB open cancelled **	The <i>TB open</i> was cancelled by a <i>TB close</i> command.
Start enable not activated	The genset cannot start, because <i>Start enable</i> is not activated.
Static synchronisation activated	The digital input is activated. The controller will use static synchronisation.
Static synchronisation deactivated	The digital input is deactivated. The controller will use the synchronisation type configured in the parameter.
Synchronisation cancelled	The controller has cancelled the synchronisation (for example, if there is a blackout during synchronisation).








NOTE * Applicable to **SINGLE genset** controller with mains breaker (MB).

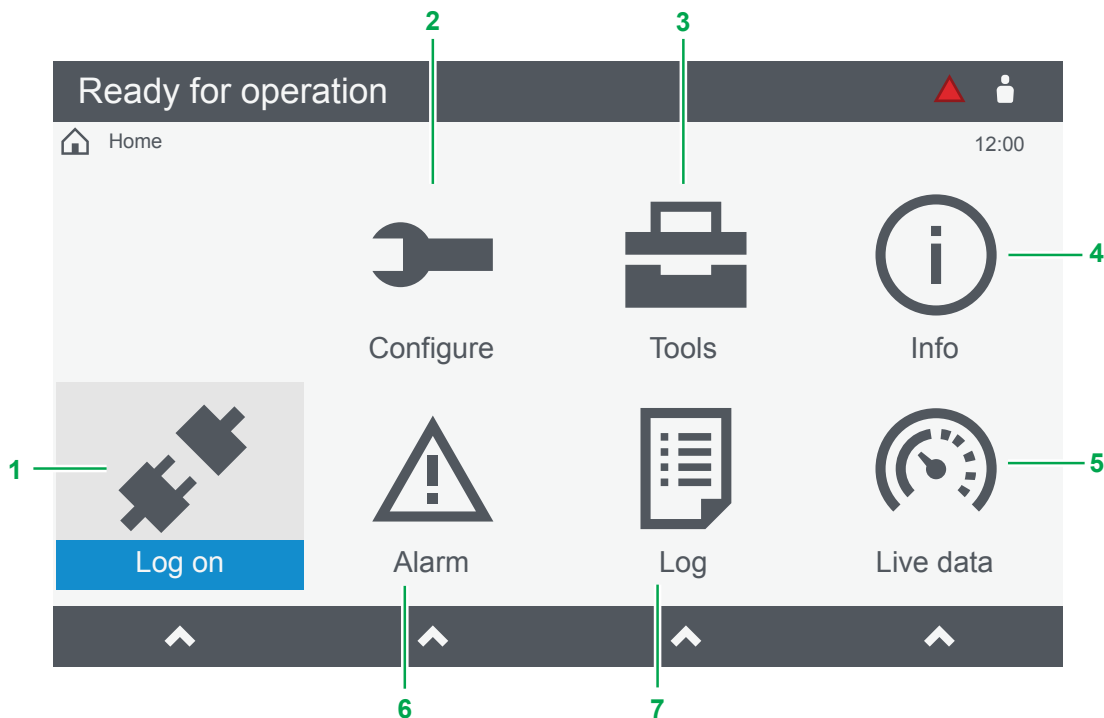* Applicable to **MAINS** controller with tie breaker (TB).

4. Home

4.1 Home page






No.	Item	Notes
1	 Log on page	Log on as a user or change the logged on user.
2	 Configure menu	Shows the configure menu.
3	 Tools menu	Shows the tools menu.
4	 Info menu	Shows the information menu.
5	 Live data page	Shows live information from the system.
6	 Alarms page	Shows action alarms present in the system.
7	 Log page	Shows a list of events recorded during operation.

NOTE Pages and menus can be restricted by group and user permissions.

5. Log on

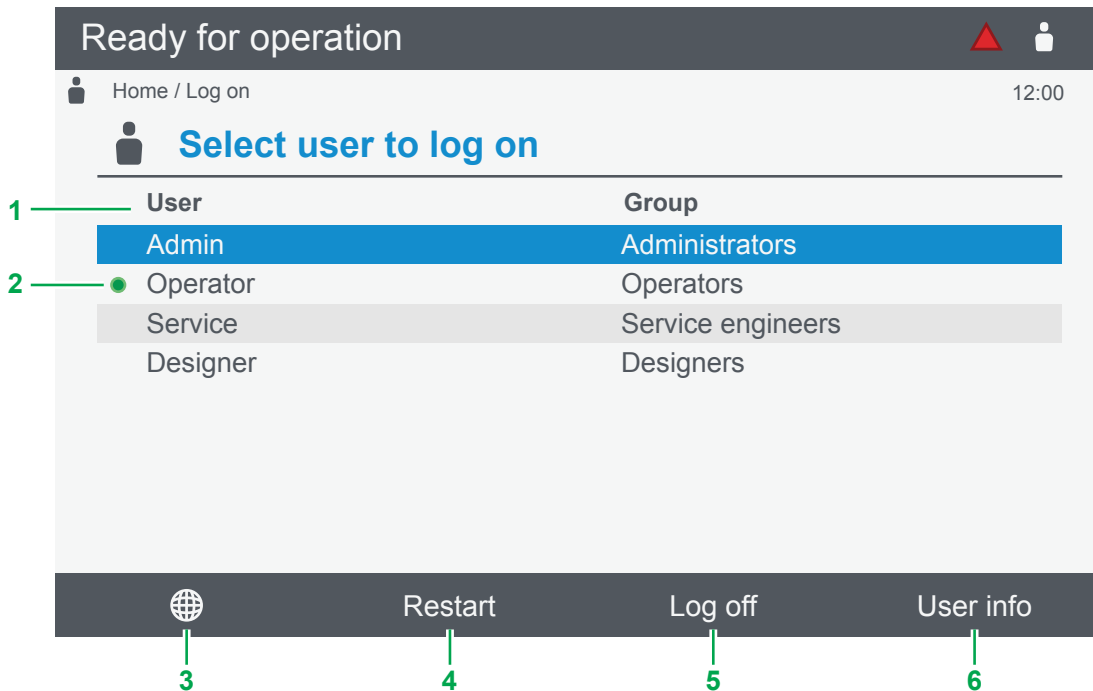5.1 Log on page










No.	Item	Notes
1	User list	Shows a list of available users on the controller.
2	Logged on user	 : Shows the user is currently logged on.
3	 Language page	Shows the language page. *
4	Restart	Restarts the display unit.
5	Log off	Logs off the user and changes to the home page. A user is automatically logged off after 3 minutes of inactivity.
6	User info	Shows further information for the selected user.

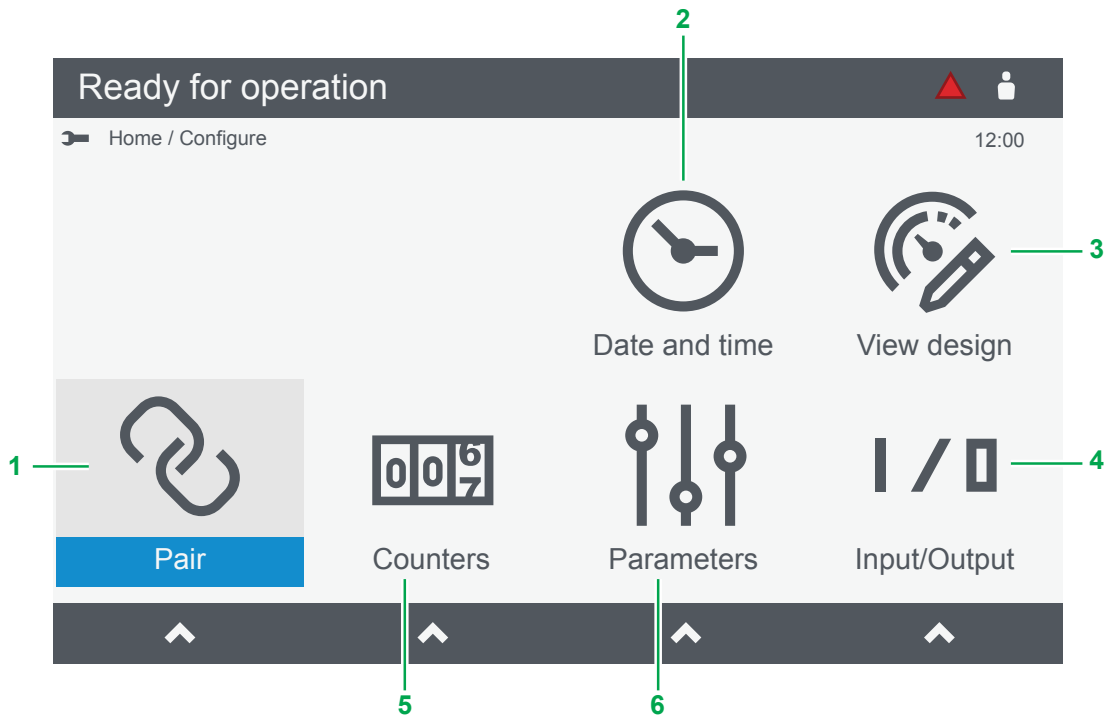NOTE * This feature is only available if both the controller and the display unit have the necessary language software installed.

6. Configure


6.1 Configure page




No.	Item	Notes
1	 Pair page	Change the controller connected to this display.
2	 Date and time page	Configure the date and time settings.
3	 View design page	Configure the views shown on the Live data page.
4	 Input/Output page	Configure the hardware modules functions and alarms.
5	 Counters page	Configure, view, or reset the counters in the system.
6	 Parameters page	Configure controller settings and alarms.

6.2 Date and time page


Date and time settings cannot be changed if a network time server (NTP) is configured.

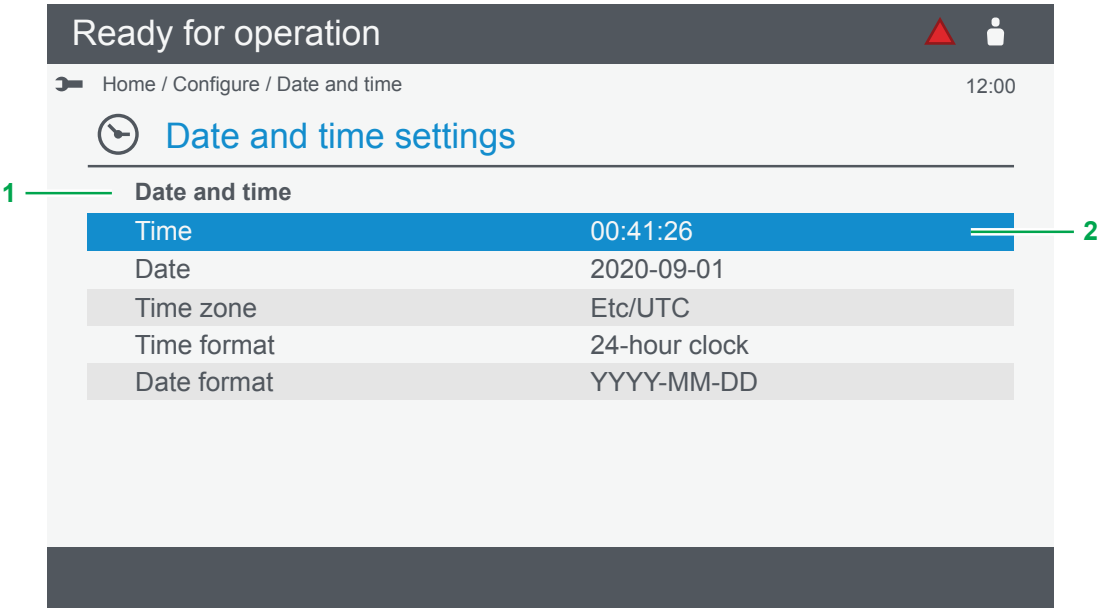

No.	Item	Notes
1	Date and time settings	Shows date, time, time zone, time format, and date format settings. The screen only updates when it is reloaded or the selection is moved.
2	Selected setting	Select  OK to configure the selected setting (requires the correct permissions).

Daylight savings are automatically applied to a selected time zone. Etc/UTC does not apply daylight savings.

6.3 View design page

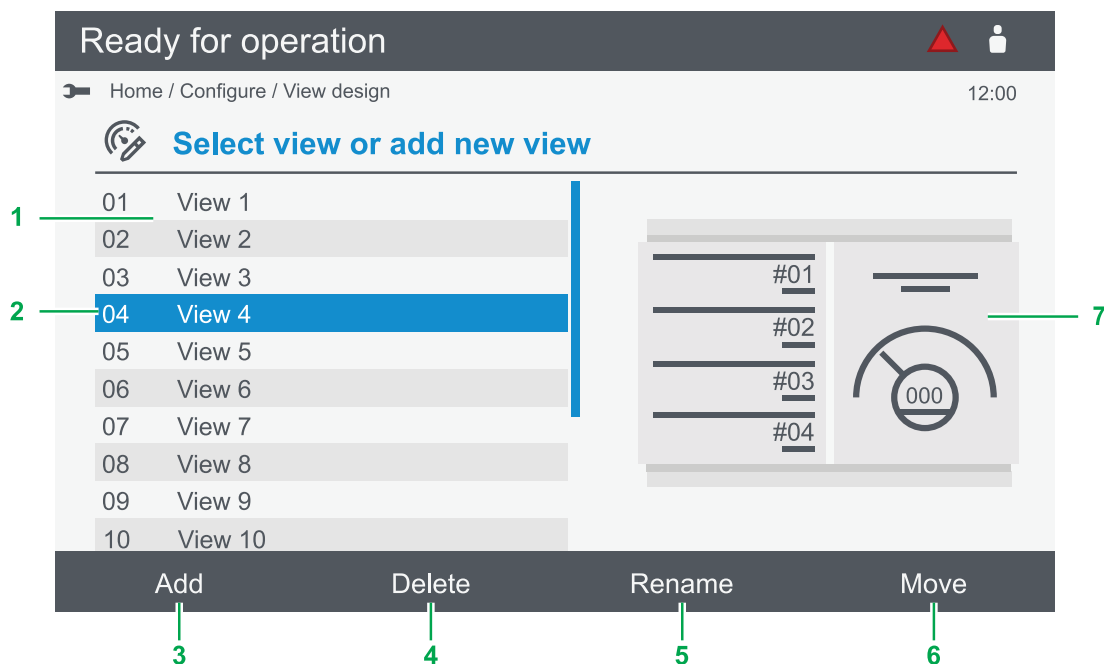


No.	Item	Notes
1	List of views	A list of the views shown on the Live data page for the paired controller.
2	Selected view	Select OK to configure the selected view.
3	Add	Adds a new view based on a template and configured with measurements.
4	Delete	Deletes the selected view after confirmation.
5	Rename	Renames the selected view. To restore the default name: Delete all characters and write to the controller.
6	Move	Select and move a view in the list.
7	View outline	Shows the selected type of view.


6.3.1 Add or configure a view

Add a view


1. Select **Add**.
2. Select the template:
 - Summary information is shown under the preview:

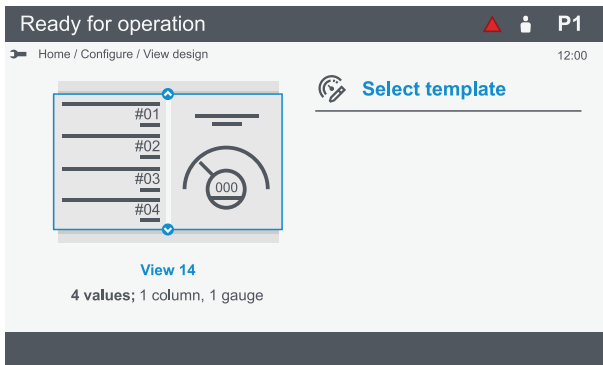

3. Select **OK** to display the measurements:

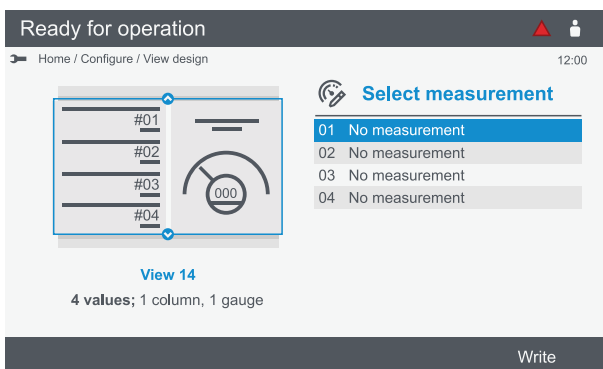

4. Select a measurement to configure.

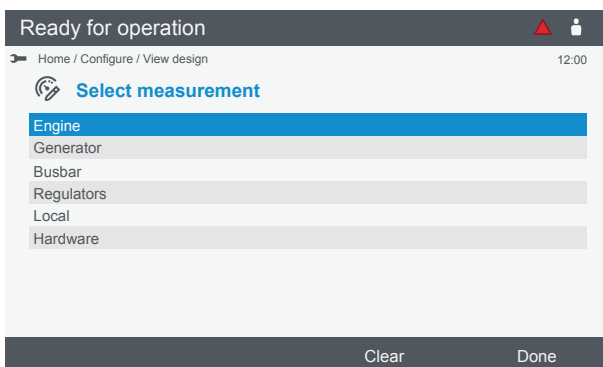

- Select **Clear** to remove the selected measurement.
 - Select **Done** to confirm the measurement selected.
5. Add further measurements as needed.
 6. Select Scale to configure the displayed range if needed.

Home / Configure / View design

Edit scale

Measurement

Terminal B - P total

Minimum

0

Maximum

600

Clear Write

- 7. Select **Write** to add the view.

Delete a view

1. Highlight the view to delete.
2. Select **Delete**.
3. Confirm deletion of the view.

Rename view

1. Highlight the view to rename.
2. Select **Rename**.
3. Rename the view as required.
4. Select **Write** to update the view.

Move view

1. Select **Move**.

Home / Configure / View design

Select view

01	View 1
02	View 2
03	View 3
04	View 4
05	View 5
06	View 6
07	View 7
08	View 8
09	View 9

#

2. Highlight the view to move.
3. Select the view.
4. Move the view up or down.

Home / Configure / View design

Move view

01	View 2
02	View 1
03	View 3
04	View 4
05	View 5
06	View 6
07	View 7
08	View 8
09	View 9

#

5. Confirm the new position with **OK**.
6. Select **Write** to confirm.


6.3.2 Configure Exhaust aftertreatment dashboard view

The Exhaust aftertreatment dashboard can be shown automatically if any of the data changes. You can additionally configure an automatic return to the last page viewed prior to the dashboard being shown.


Configure automatic display of dashboard

1. Open **View design**.


- Configure > View design

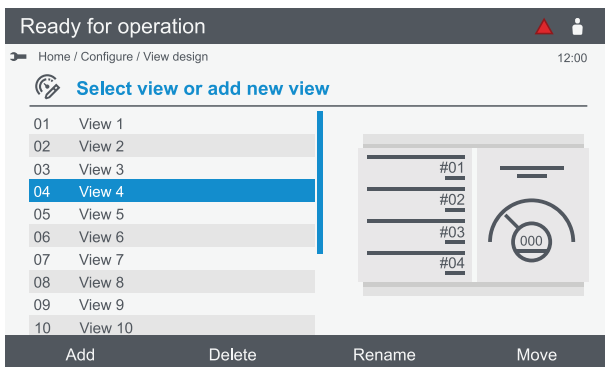

2. Scroll and highlight the **Exhaust aftertreatment dashboard**:

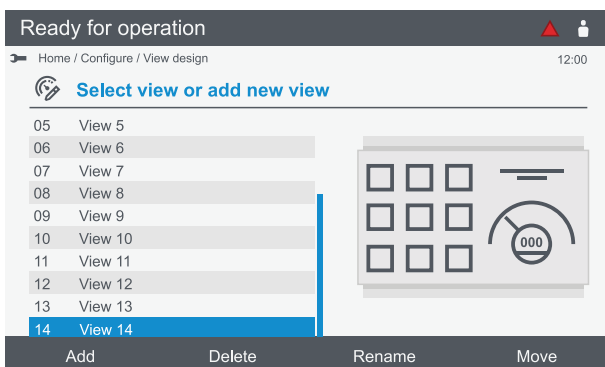


3. Select **OK** to display the **Exhaust aftertreatment dashboard**:

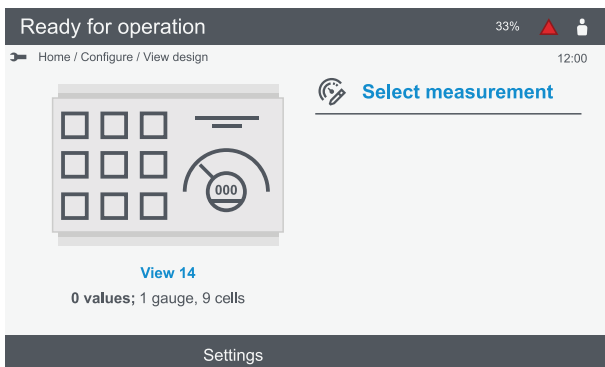

4. Select **Settings**.

5. Select **OK** on the settings to enable them:

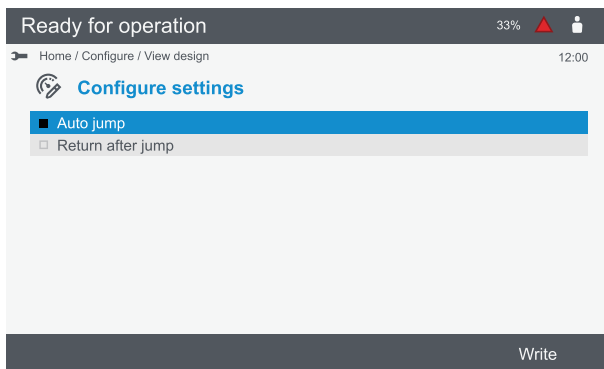

- - **Auto jump** : Shows the **Exhaust aftertreatment dashboard** if any data changes.
 - **Return after jump** : Returns back to the previous display after displaying the **Exhaust aftertreatment dashboard**.
6. Select **Write** to update the configuration.

6.4 Pair page

Ready for operation



Home / Configure / Pair12:00

Pair



ID	Label	Host name	Hops
4	DG 4	deif-ml300-017928	2
3	DG 3	deif-ml300-017900	1
2	DG 2	deif-ml300-015100	2
1	DG 1	deif-ml300-016700	3

Refresh

Identify

No.	Item	Notes
1	List of available controllers	Shows the list of available controllers you can connect.
		Select  OK to pair to the controller.
2	Connected controller	 : Shows the controller currently connected.
3	Hops	Number of hops (between controllers) from the display. 1 hop: The controller is connected directly to the display.
4	Identify	Starts the identification cycle for the highlighted controller.
5	Refresh	Refresh the list of controllers.

6.4.1 Identify controller

1. Select the controller from the controller list.
2. Select **Identify**.
 - The Power LED  on the PSM flashes  on the controller rack.
 - The LED repeats a cycle of fast, medium, and slow flashing.
 - The cycle ends after 30 seconds.

6.5 Counters page

Ready for operation

Home / Configure / Counters

12:00

Counters

Name	Value
Engine	
Start attempts	
Total	2
Since reset	0
Faults	0
Operation time	
Generator	
Breakers	


Reset

1

2

3


4





No.	Item	Notes
1	Counters list	Shows the list groups and counters.
2	Highlighted counter	Shows the highlighted counter to view, edit, or reset. Select  OK to edit the counter value.
3	Reset	Resets the counter value to 0 (zero).
4	Counter value	Shows the counter value.

6.6 Parameters

6.6.1 Parameters list page

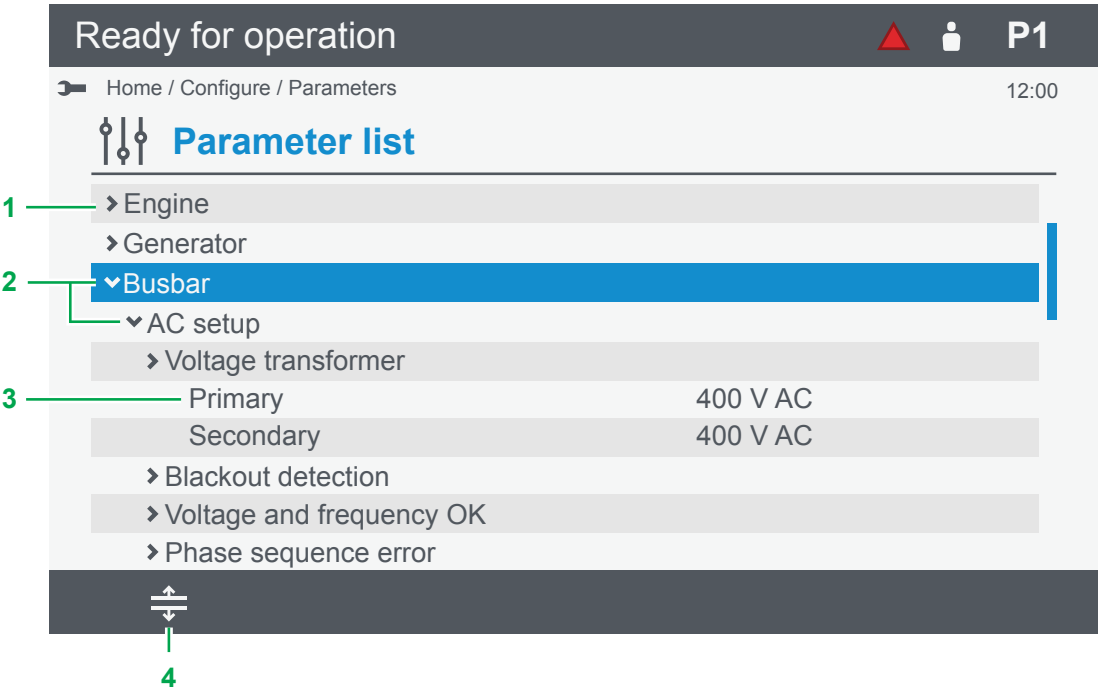
Parameter settings are organised in groups and sub-groups. Open a group or sub-group to select a parameter to configure.



No.	Item	Notes	
1	Parameter list	Shows a list of groups and sub-groups.	
2	Parameter group or sub-group	Select  OK to open the group or sub-group.	
3	Parameter and value	Select  OK to edit value.	
4	Expand all/Collapse all groups	Select  Expand all to open all groups.	Select  Collapse all to close all groups.

6.6.2 Configure a curve

Curves can only be configured if the curve function is assigned in the input/output configuration. When a curve function is assigned, the parameter is shown in the parameter list.



Example

Function assigned to an analogue input (AI):


Engine > Power derate > Temperature > Derate 1 temperature

Parameter now available under:


Engine > Power derate > Temperature > Derate 1

1. Select Setup from the parameter page.

- The curve is shown:

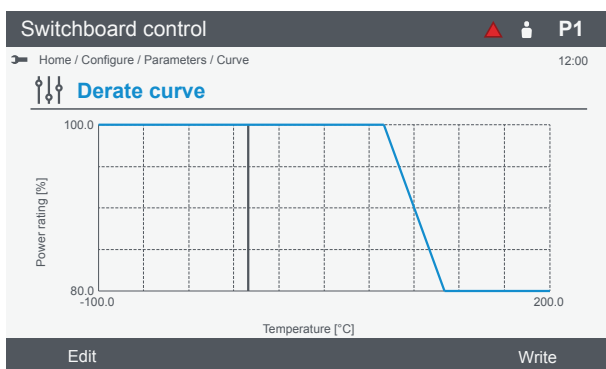


2. Select Edit to configure the curve settings:

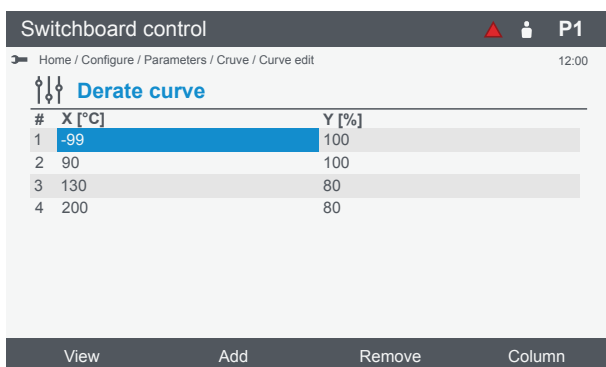

#	X [°C]	Y [%]
1	-99	100
2	90	100
3	130	80
4	200	80

3. Configure the curve settings:

- View to display the curve or write the settings.
- Add a new empty set of coordinates (X,Y), max. 10 sets per curve.
- Remove a set of coordinates, min. of four sets is required.
- Column to change between X or Y settings.
- Select  **OK** to edit the value.

4. Select View and then Write to save the curve settings.

6.7 Input/output

6.7.1 About input/output

The controller inputs and outputs are configurable but depend on the single-line diagram, parameters, functions and alarms. You can configure digital or analogue inputs and outputs, custom alarms, and use functions.



More information

See the **Data sheet**, or **Hardware characteristics and configuration** in the **Designer's handbook** for more information about the hardware modules and terminals.

Input/output restrictions

Digital input (DI)	
Functions allowed	One or more different functions on same input terminal.
Restrictions	<ul style="list-style-type: none">You cannot use a function already assigned to another digital input (DI).You cannot use a function assigned and used in CustomLogic.

Digital output (DO)	
Functions allowed	One function on the same terminal.
Restrictions	<ul style="list-style-type: none">Only one function or multiple alarms are allowed to be configured.You cannot use a function assigned and used in CustomLogic.
Notes	The same function can be assigned to other digital output (DO) terminals.

Analogue input (AI)	
Functions allowed	One or more different functions on the same input terminal.
Restrictions	<ul style="list-style-type: none">Functions must use the same unit of measure.You cannot use a function already assigned to another analogue input (AI).The selected functions type can be Analogue input functions (Analogue functions or Digital input functions (Supervised binary input)).You cannot use both analogue and digital functions on the same terminal.

Analogue output (AO)	
Functions allowed	One function on the same input terminal.
Restrictions	The function must be selected before the Output setup is configured.
Notes	The same function can be assigned to other analogue output (AO) terminals.

Pulse width modulation (PWM)	
Functions allowed	One function on the same input terminal.
Restrictions	The function must be selected before the Output setup is configured.
Notes	The same function can be assigned to other Pulse width modulation (PWM) terminals.

About Analogue inputs

You can use an analogue input:

- As an input for one or more controller **analogue functions**.
- As a supervised input for one or more controller **digital functions**.
- To detect **sensor failure**.
- As the basis for one or more **alarms**.

For each analogue input use, the table below shows which **pages** in the analogue input view you must configure.

Table 6.1 Configuration for the uses of an analogue input

Use	Functions	Sensor setup	Alarms
Analogue functions	Required	Required	Optional
Digital functions	Required	Required	Optional
Sensor failure	Optional	Required	Optional
Alarms	Optional	Required	Required




More information

See the **Designer's handbook** for more information on specific functions and hardware characteristics.


6.7.2 Rack or ECU selection page

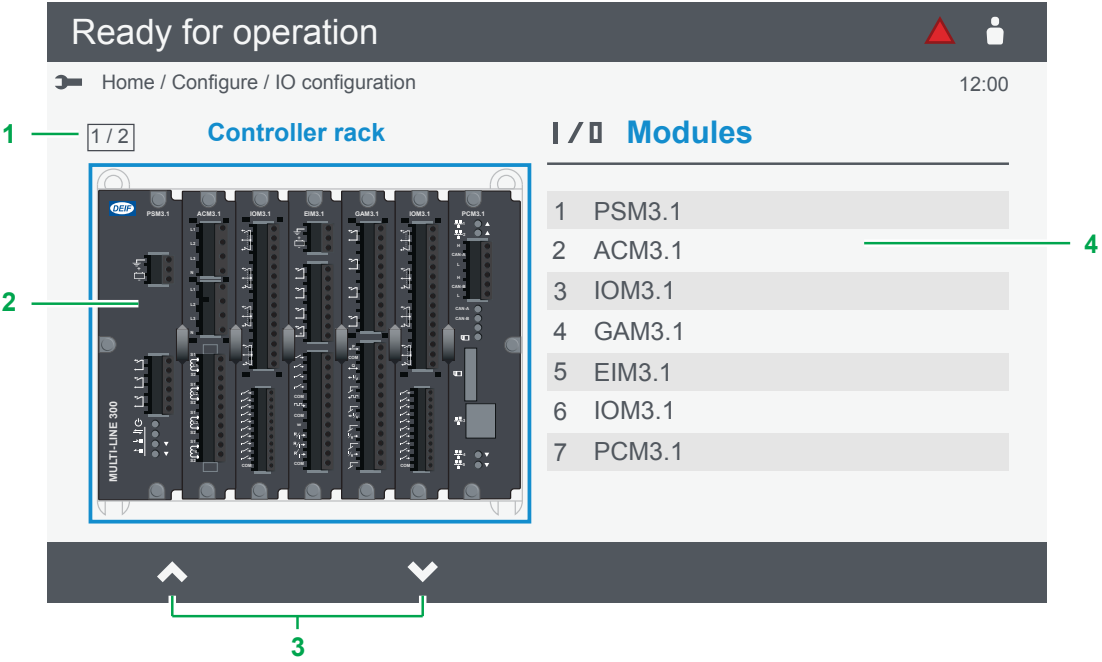


The selection is only shown if the system has extension racks or an ECU configured.



No.	Item	Notes
1	Rack number	Shows the selected rack number.
2	Rack or ECU	Shows the selected rack or ECU. Select OK to confirm the selection.
3	Rack or ECU selection	Up : move selection up. Down : move selection down.
4	I/O modules	Shows the I/O modules installed in the selected rack or the ECU image.

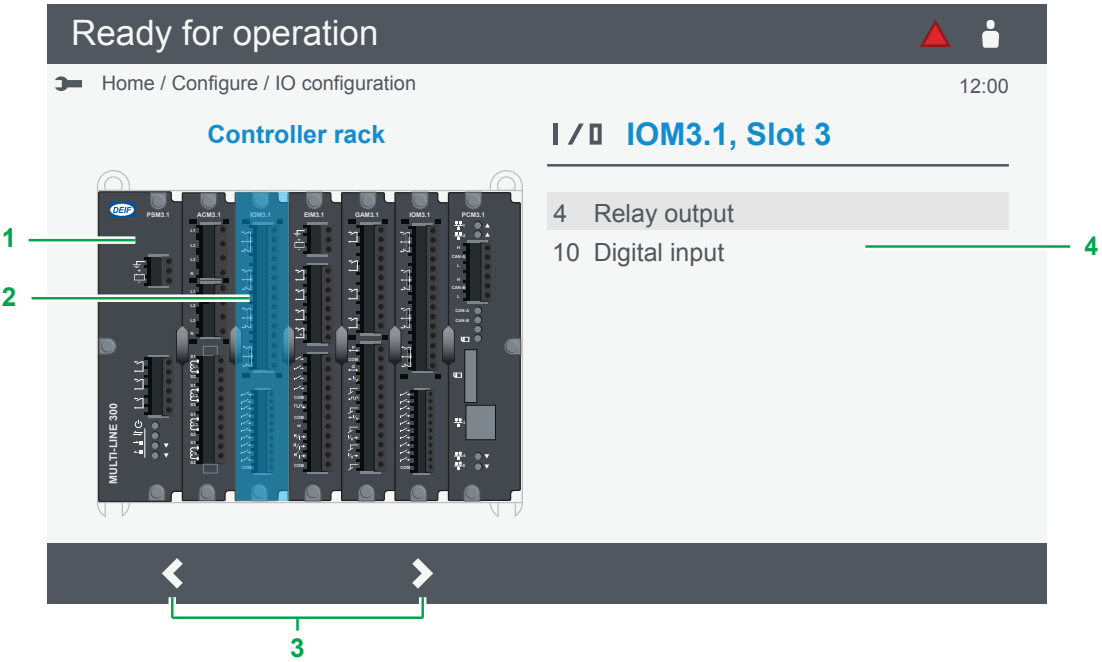6.7.3 Module selection page



No.	Item	Notes
1	Rack	Shows the selected rack.
2	Selected module	Shows the selected module. Select  OK to configure the terminals.
3	Module selection	<div>  Left: move module selection left.  Right: move module selection right. </div>
4	Terminals	Shows the available terminals in the selected module.

6.7.4 Terminal selection page

Ready for operation

Home / Configure / IO configuration / Terminals

12:00

I / O

Terminals


	State/Value	Terminal(s)	Name	Type	Func	Alarm
1	0	1, 2, 3	GB close	DO	<input type="radio"/>	
	0	4, 5, 6	GB open	DO	<input type="radio"/>	
2	0	7, 8, 9	Digital output 3	DO		
	0	10, 11, 12	Digital output 4	DO		
3	1	13, 23	GB opened	DI	<input type="radio"/>	
	0	14, 23	GB closed	DI	<input type="radio"/>	
	0	15, 23	Manual GOV increase	DI	<input type="radio"/>	
	0	16, 23	Manual GOV decrease	DI	<input type="radio"/>	
	0	17, 23	Digital input 5	DI		<input type="radio"/>

4


5


6

7


No.	Item	Notes
1	List of terminals	Shows the terminals for the selected module.
2	Selected terminal	Shows the terminal selected.
		Select  OK to configure the terminal.
3	Terminal state	Shows the state or value for the terminal.
4	Terminal numbers	Shows the terminal numbers for the connector.
5	Type	Shows the type of terminal.
		DI: Digital input
		DO: Digital output
		AI: Analogue input
6	Function	PWM: Pulse width modulation
		<input type="radio"/> : Shows there is 1 or more functions assigned.
7	Alarm	<input type="radio"/> : Shows there is 1 or more alarms assigned.


6.7.5 Digital input (DI) page

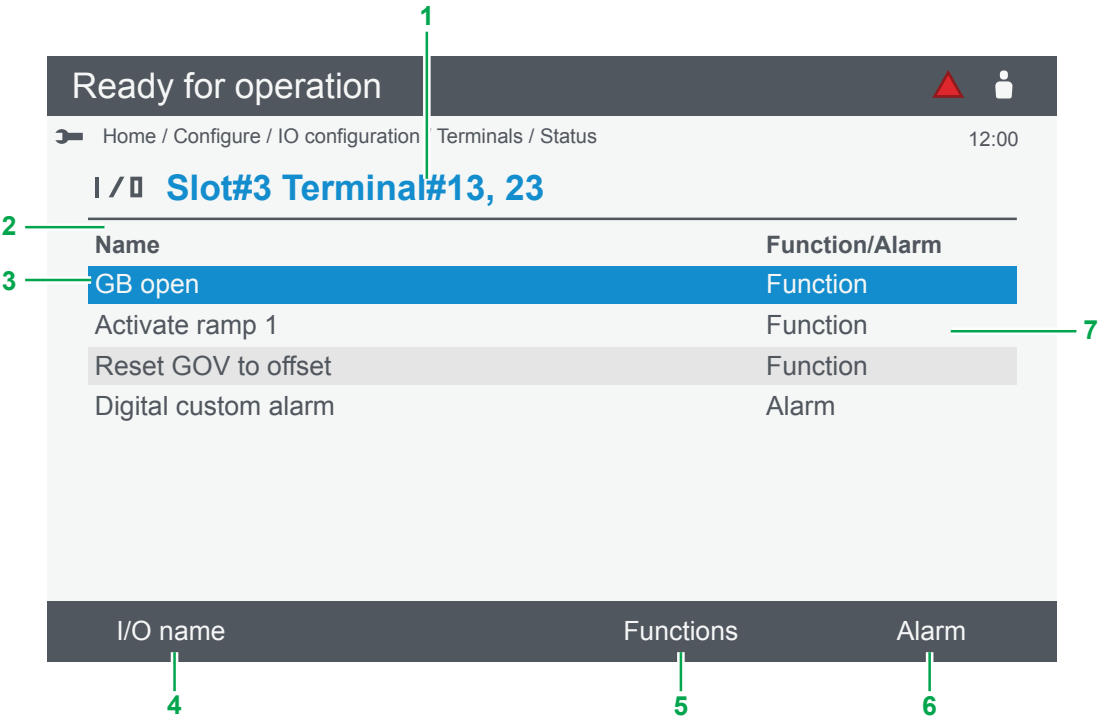

No.	Item	Notes
1	Module and terminal selected	Shows the slot number and terminal numbers.
2	Function or alarm list	Shows a list of all configured functions or alarms on this terminal.
3	Selected function or alarm	Select  OK to configure existing setting.
4	I/O name	Views or configures the terminal name.
5	Functions	Views or configures the functions on this terminal.
6	Alarm	Views or configures the alarms on this terminal.
7	Function or alarm	Shows if it is a function or an alarm configured.


6.7.6 Digital output (DO) page

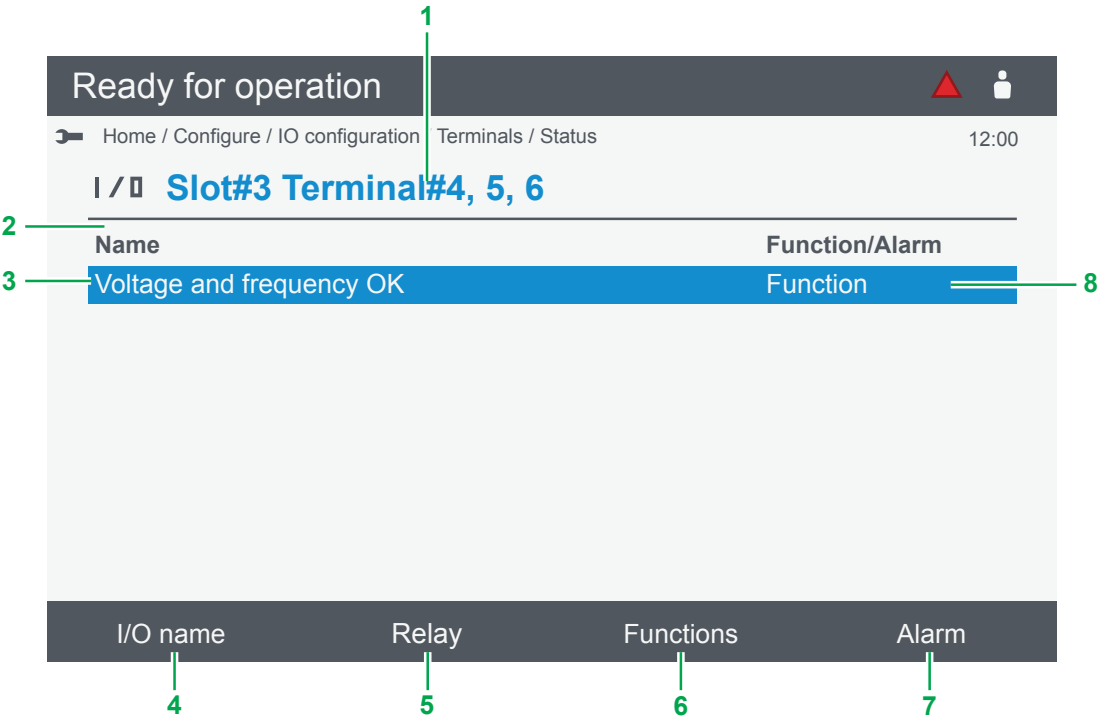


No.	Item	Notes
1	Module and terminal selected	Shows the slot number and terminal numbers.
2	Function or alarm list *	Shows a list of configured function or alarms on this terminal.
3	Selected function or alarm	Select  OK to configure existing setting.
4	I/O name	Views or configures the terminal name.
5	Relay	Views or configures the relay setting.
6	Functions	View or configure a function on this terminal.
7	Alarm	Views or configures the alarms on this terminal.
8	Function or alarm	Shows if it is a function or an alarm configured.

NOTE * A digital output can only have a function or alarms. You can not configure both a function and alarms on the same terminal.


6.7.7 Analogue input (AI) page

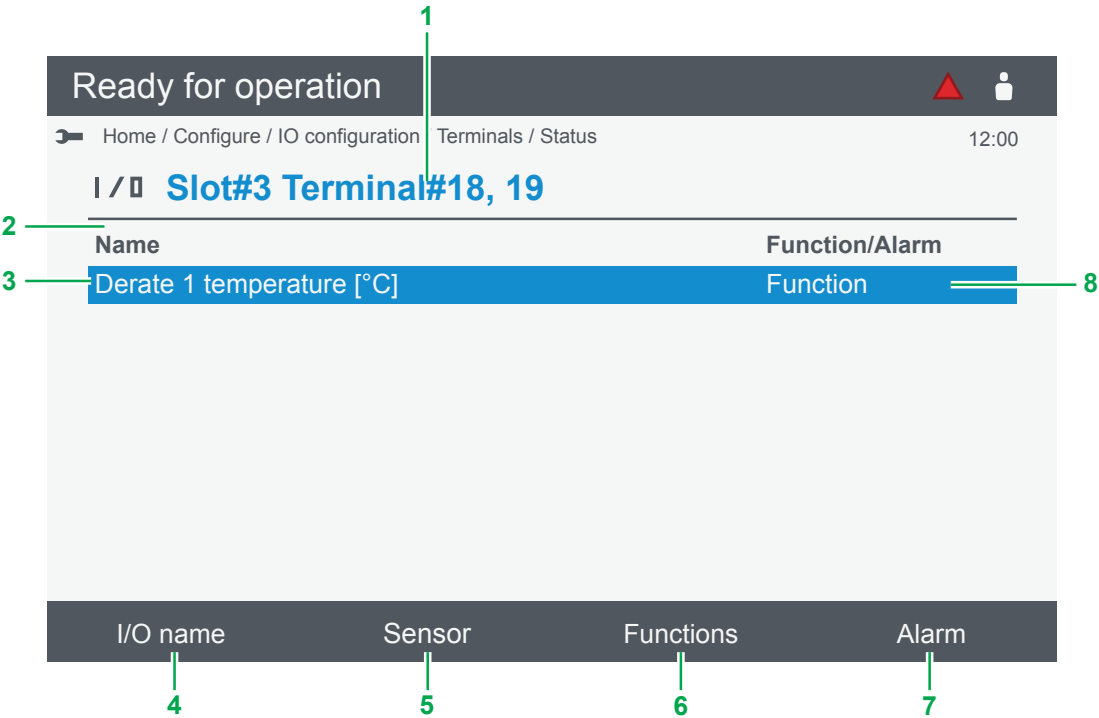


No.	Item	Notes
1	Module and terminal selected	Shows the slot number and terminal numbers.
2	Functions or alarms list	Shows a list of all configured functions or alarms on this terminal.
3	Selected function or alarm	Select  OK to configure existing setting.
4	I/O name	Views or configures the terminal name.
5	Sensor *	Views or configures the sensor settings.
6	Functions	Views or configures the functions on this terminal.
7	Alarm	Views or configures the alarms on this terminal.
8	Function or alarm	Shows if it is a function or an alarm configured.

NOTE * Configure any required functions before configuring the sensor settings.

6.7.8 Analogue output (AO or PWM) page

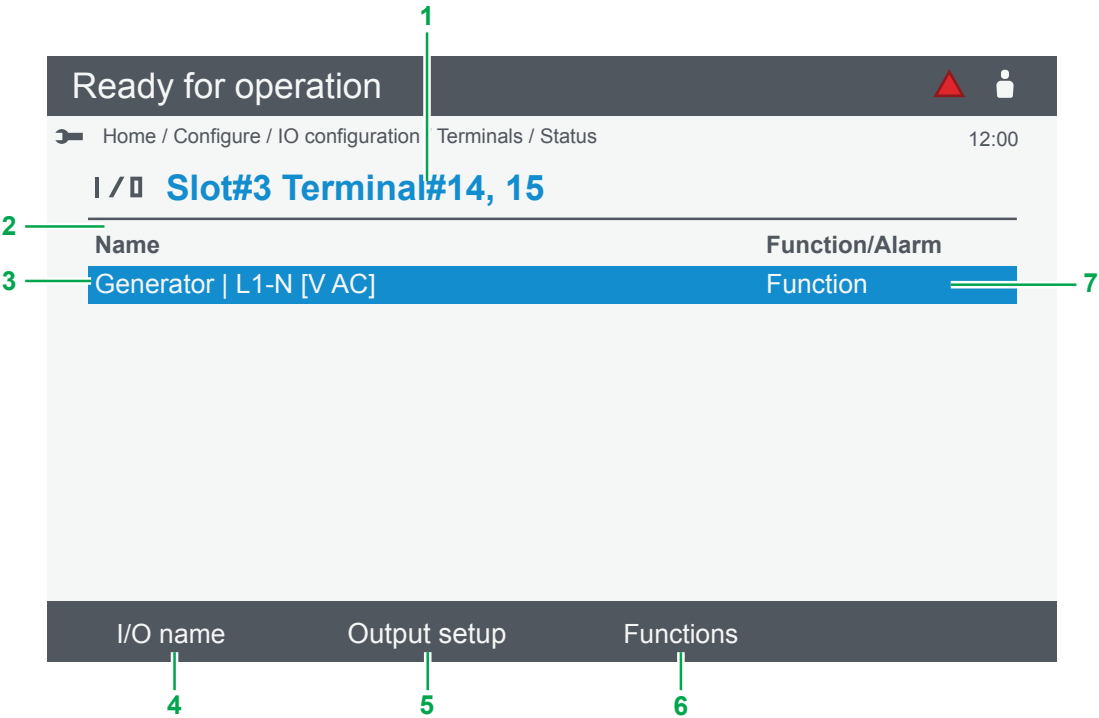

No.	Item	Notes
1	Module and terminal selected	Shows the slot number and terminal numbers.
2	Function list	Shows a list of all configured functions on this terminal.
3	Selected function	Select  OK to configure existing setting.
4	I/O name	Views or configures the terminal name.
5	Output setup	Views or configures the output setup.
6	Functions	Views or configures the functions on this terminal.
7	Function	Shows if a function is configured.

7. Alarms

7.1 Alarms page

















The screenshot shows the 'Alarms' page in a control system. At the top, a status bar indicates 'Ready for operation' with a red triangle icon and a user icon. Below this, a breadcrumb trail shows 'Home / Alarms' and the time '12:00'. The main heading 'Alarms' is accompanied by a warning icon. A table lists several alarms with columns for Time, Name, Value, Set point, and Latch Auto. Callout 1 points to the 'Time' column, and callout 2 points to the first alarm row. Callout 3 points to the 'Reset latches' button, and callout 4 points to the 'Acknowledge' button. Callout 5 points to the 'Latch' column, and callout 6 points to the 'Auto' column.

Time	Name	Value	Set point	Latch	Auto
11:25:18	Voltage or frequency not OK	-	-	<input checked="" type="radio"/>	<input type="radio"/>
06:26:56	Generator under-voltage 1	0.00 %	95.00 %	<input type="radio"/>	<input type="radio"/>
06:25:01	EIM3.1 1 supply voltage low ...	-	18.00 V ...	<input type="radio"/>	<input type="radio"/>
06:24:42	Generator under-frequency 1	0.00 %	95.00 %	<input type="radio"/>	<input type="radio"/>
06:17:32	EIM3.1 2 supply voltage low ...	-	18.00 V ...	<input type="radio"/>	<input type="radio"/>
05:13:24	Ethernet redundancy broken	-	-	<input type="radio"/>	<input type="radio"/>

Reset latches Acknowledge

No.	Item	Notes
1	List of alarms	Alarm state is shown by the symbol. Test alarms are shown in green.
2	Selected alarm	Select OK to show further information about the alarm or use the service options. If enabled you can view the Tag value for the alarm.
3	Reset latches	Resets all cleared alarm latches (requires the alarm is acknowledged and the alarm condition has cleared)
4	Acknowledge	Acknowledges an unacknowledged alarm. Acknowledging an alarm does not stop the alarm action (protection) if the alarm condition remains active or the alarm has a latch enabled.
5	Latch	<input type="radio"/> : Shows the alarm has a latch enabled. .
6	Auto	<input type="radio"/> : Shows the alarm has automatic acknowledge enabled.

7.1.1 Alarm state

Symbol	Alarm condition *	Alarm action **	Acknowledge	Notes
 or 	Active	Active	Unacknowledged	<ul style="list-style-type: none"> An alarm condition occurred. An alarm action is active. An alarm requires acknowledgement. An alarm requires action to clear the alarm condition.
 or 	Active	Active	Acknowledged	<ul style="list-style-type: none"> An alarm condition occurred. An alarm action is active. An alarm is acknowledged. An alarm requires action to clear the alarm condition.
 or 	Inactive	Active	Unacknowledged	<ul style="list-style-type: none"> An alarm condition has cleared. An alarm action is active. An alarm requires acknowledgement. An alarm latch requires reset.
 or 	Inactive	Active	Acknowledged	<ul style="list-style-type: none"> An alarm condition has cleared. An alarm action is active. An alarm is acknowledged. An alarm latch requires reset.
 or 	Inactive	Inactive	Unacknowledged	<ul style="list-style-type: none"> An alarm condition occurred, but was cleared. An alarm action is inactive. An alarm requires acknowledgement.
 or 	Active or Inactive	Inactive	-	<ul style="list-style-type: none"> An alarm is shelved for a period of time. An alarm returns automatically after the period has expired.
 or 	Active or Inactive	Inactive	-	<ul style="list-style-type: none"> An alarm is marked <i>out of service</i> for an indefinite period. An alarm does not return automatically and must be returned to service manually.
 or 	Active or inactive	Inactive	-	An alarm is inhibited to occur.

NOTE * Alarm condition is usually where the Set point is exceeded.

** Alarm action (the protection) is the configured action taken to protect the situation. When active, the controller activates the action.



More information


See **Alarms** in the **Designer's handbook** for more information about how to handle alarms in the system.

7.1.2 Shelved alarms

An alarm that is shelved is no longer active. Shelved alarms automatically become unshelved when the shelf period expires. You can also unshelve the alarm manually.

Shelve an alarm

1. Select the alarm.
2. On the details page, select Service.
3. Select Shelf.
4. Select the period to shelve the alarm.

- The alarm is now shelved for the selected period.
 - The alarm is marked as shelved (✓ or ) in the alarm list.
 - The alarm action (protection) is inactive until the alarm is unshelved.

Unshelve an alarm

- Select the shelved alarm.
- On the details page, select Service.
- Select Unshelve.

7.1.3 Remove from service


CAUTION





Alarm action not active

An alarm that is removed from service is no longer active.

The alarm remains out of service until it is returned back to service.

Remove an alarm from service

You can only remove certain types of alarms from service.


- Select the alarm.
- On the details page, select Service.
- Select Remove from service.
- The alarm is now removed from service.
 - The alarm is marked as out of service ( or ) in the alarm list.

Return an alarm to service


- Select the alarm.
- On the details page, select Service.
- Select Return to service.
- The alarm is now returned to service.
 - If the alarm condition is still present, the alarm is activated again.

7.1.4 Silence horn

The controller must be configured with horn outputs for the silence horn push-button to work. When an alarm occurs the horn output activates.

Push  **Silence horn** to deactivate all horn outputs. The push-button does not have any other effect on the alarm system. If a new alarm occurs after the button is pushed, the horn output restarts.

Example of the Silence horn button

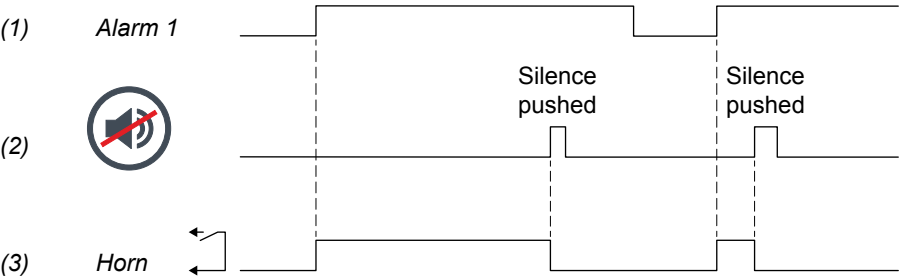










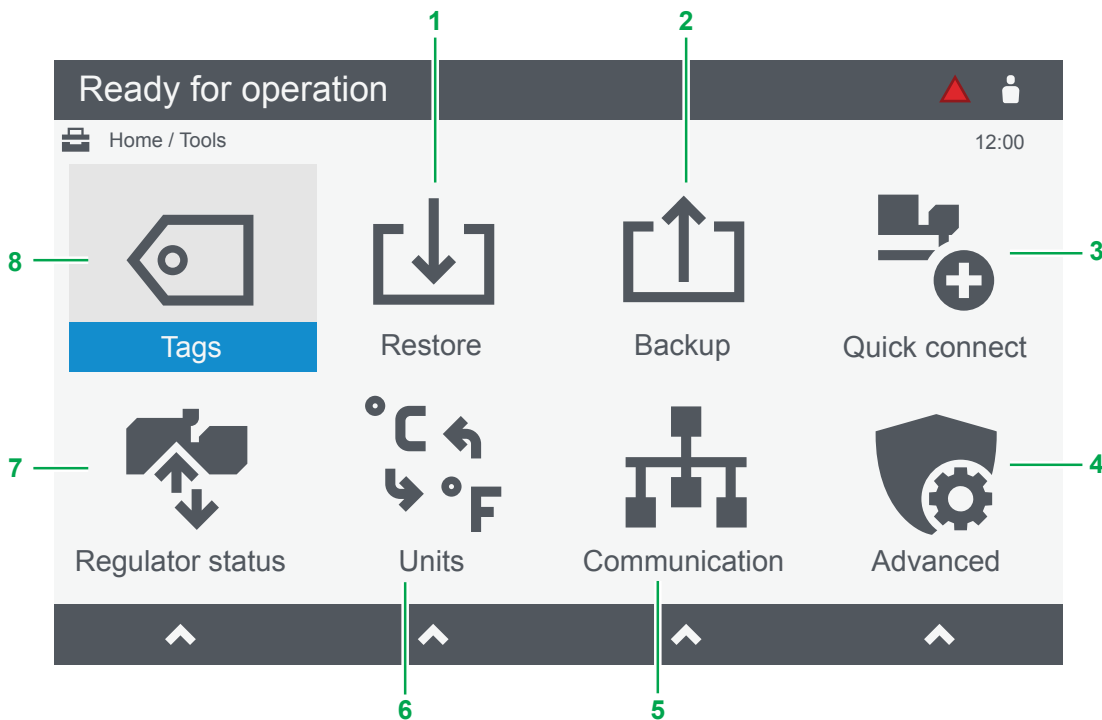

More information

See **Alarms, Horn outputs** in the **Designer's handbook** for more information about these outputs.


8. Tools


8.1 Tools page



No.	Item	Notes
1	 Restore page	Restore a backup to the controller.
2	 Backup page	Create a backup of the controller.
3	 Quick connect	Use Quick connect to join controller to the single-line diagram.
4	 Advanced menu	Shows the Advanced menu.
5	 Communication page	Configure network settings.
6	 Units page	Configure the units of measure shown.
7	 Regulator status page	View the GOV and AVR status.
8	 Tags page	Show or hide Tags.

8.2 Tags page

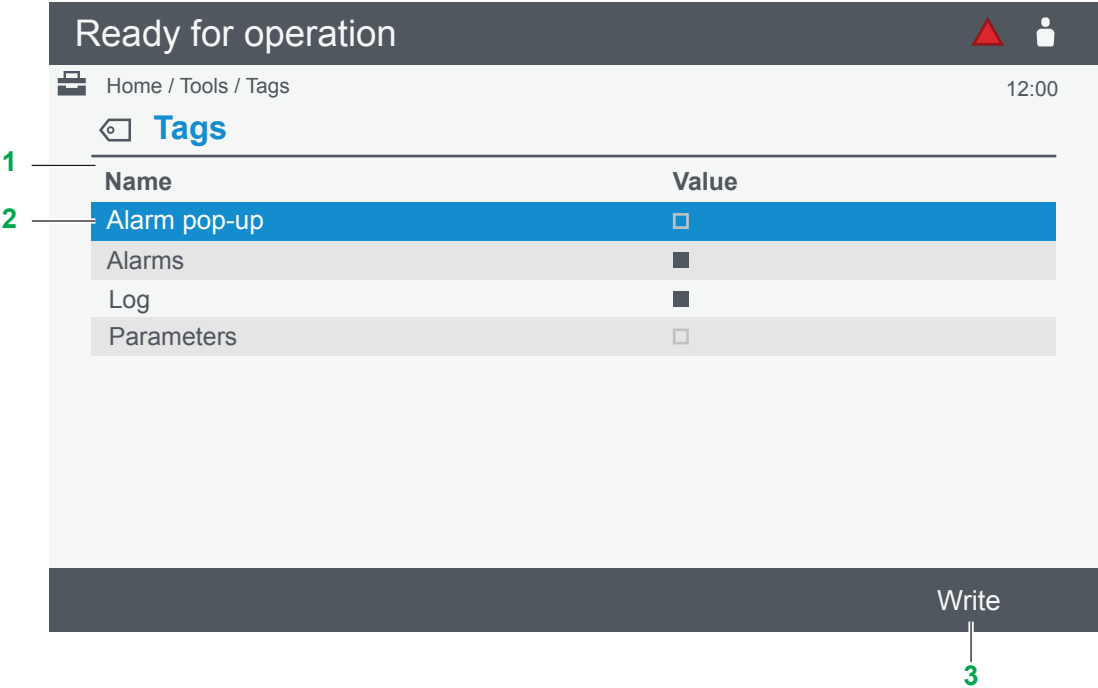

No.	Item	Notes
1	List of tags	Shows a list of areas that tags can be displayed on.
2	Tag selection	Select  OK to toggle selection. <input type="checkbox"/> Not selected : The tag is not shown. <input checked="" type="checkbox"/> Selected : The tag is shown.
3	Write	Write the settings to the controller.

8.3 Backup page

Ready for operation

Home / Tools / Backup

12:00

Backup

Backup name

ID 4 DG 1

Backup location

Save to controller

Clear

Create backup

No.	Item	Notes
1	Backup name	Shows the slot number and terminal numbers. Highlight and select OK to configure the name.
2	Backup location	Shows the location where the backup is created. Highlight and select OK to choose the location.
3	Clear	Clears and restores the default Backup name.
4	Create backup	Creates a backup in the selected location (max. 20 backups).

8.4 Restore

8.4.1 Restore restrictions

Controller prerequisites

Before you restore a backup to a controller, the controller must meet these prerequisites:

Controller type	Prerequisites
SINGLE genset controller without mains breaker	<ol style="list-style-type: none">1. The generator breaker must be opened.2. The engine must be stopped.
SINGLE genset controller with mains breaker	<ol style="list-style-type: none">1. The generator breaker must be opened.2. The mains breaker must be opened3. The engine must be stopped.
GENSET controller	<ol style="list-style-type: none">1. The breaker must be opened.2. The engine must be stopped.
MAINS controller without tie breaker	<ol style="list-style-type: none">1. The mains breaker must be opened.
MAINS controller with tie breaker	<ol style="list-style-type: none">1. The mains breaker must be opened.2. The tie breaker must be opened.
BUS TIE breaker controller	<ol style="list-style-type: none">1. The breaker must be opened.

Not compatible backup files

Backup files or folders are not compatible with the current controller configuration if:

- The backup is from a different product type.
- The backup is from a different controller type.
- The backup is from a different controller configuration.
- The backup is from a controller with a different hardware configuration.
- The backup is not supported by the current controller software.

Restore network settings

If you use **Restore IP address (IPv4) and controller ID**, the controller **must** be powered off and powered on before the network settings are restored.



CAUTION




Controller part of system


If the controller is part of the network communication between units, the processor and communication module is also powered off. Make sure this does not affect your system before you power the controller off.

Data not restored

When you restore a backup file or folder to a controller, the event log and alarms are **not** restored.


8.4.2 Restore page

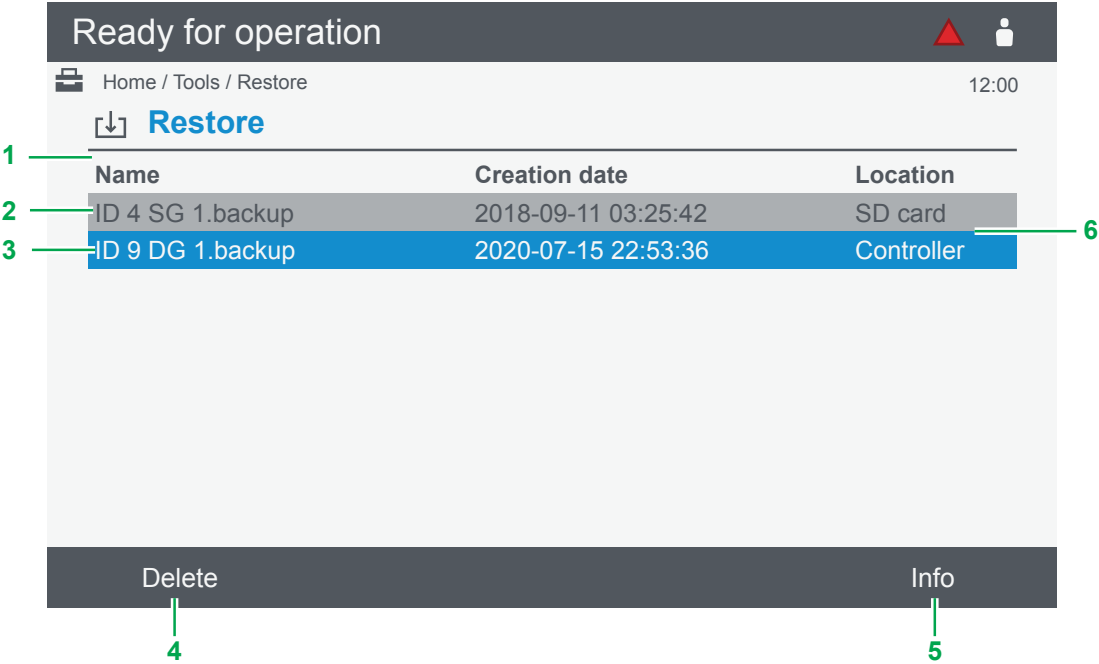


No.	Item	Notes
1	List of backups	Shows the backups on the controller or SD card.
2	Not compatible backup *	Shows a not compatible backup in dark grey.
3	Selected backup	Select  OK to choose the restore selections.
4	Delete	Deletes the selected backup.
5	Info	Shows information about the backup.
6	Location	Shows the location where the backup is stored.

NOTE * Backups are not compatible if they are a different product, controller type, controller configuration, hardware, or not supported by the current firmware.

8.4.3 Restore selection page

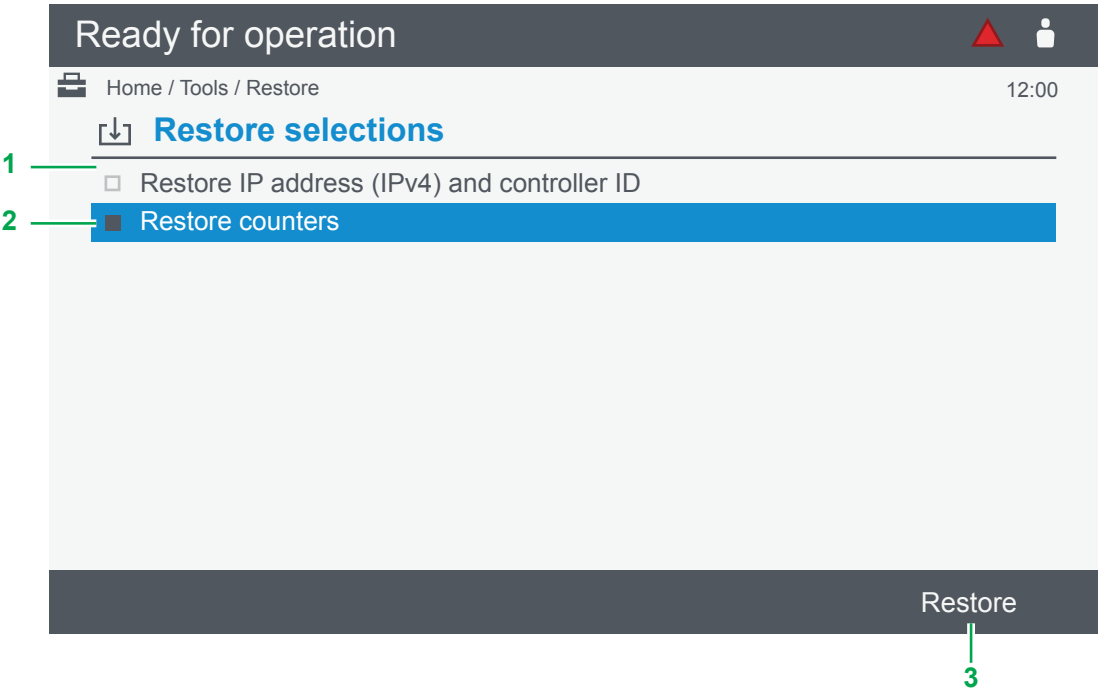


No.	Item	Notes
1	List of features	Shows a list of features you can restored.
2	Feature selection	Select  OK to choose the restore selections.
		<input type="checkbox"/> Not selected : The feature is not restored. <input checked="" type="checkbox"/> Selected : The feature is restored.
3	Restore	Restore the selected features.

8.5 Quick connect

You can use Quick connect to join the controller to the single-line diagram, even if the controller is not part of the application drawing.

To join the controller to the application single-line diagram, select:

Tools > Quick connect

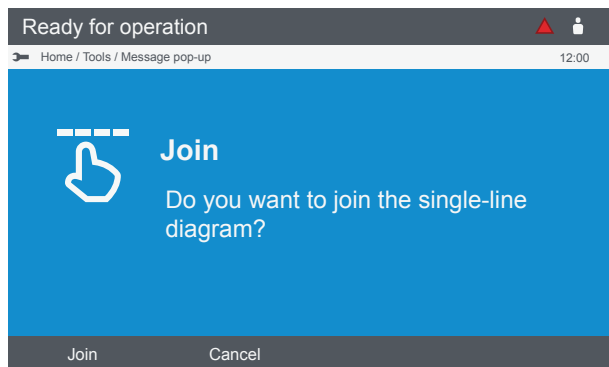

Select **Join** to add the controller to the application single-line diagram.

8.6 Regulator status

8.6.1 Regulator status AVR page

Ready for operation

Home / Tools / Regulator status12:00

AVR status

1

AVR selected regulation mode	Voltage regulation
AVR active regulation mode	Voltage regulation
AVR regulator source	Nominal
AVR regulator manual input	Not active
AVR regulator external offset	0 %
AVR set point	400 V AC
AVR actual value	392 V AC
AVR actual output	0 %

GOV status

2

No.	Item	Notes
1	AVR regulation	Shows the status of the AVR regulation.
2	GOV status page	Select to go to the GOV status page.

8.6.2 Regulator status GOV page

Ready for operation

Home / Tools / Regulator status

12:00

GOV status

1


GOV selected regulation mode	Frequency regulation
GOV active regulation mode	Frequency regulation
GOV regulator source	Nominal
GOV regulator manual input	Not active
GOV regulator external offset	0 %
GOV set point	50.00 Hz
GOV actual value	49.97 Hz
GOV actual output	5.03 %


AVR status

2

No.	Item	Notes
1	GOV regulation	Shows the status of the GOV regulation.
2	AVR status page	Select to go to the AVR status page.

8.7 Units page

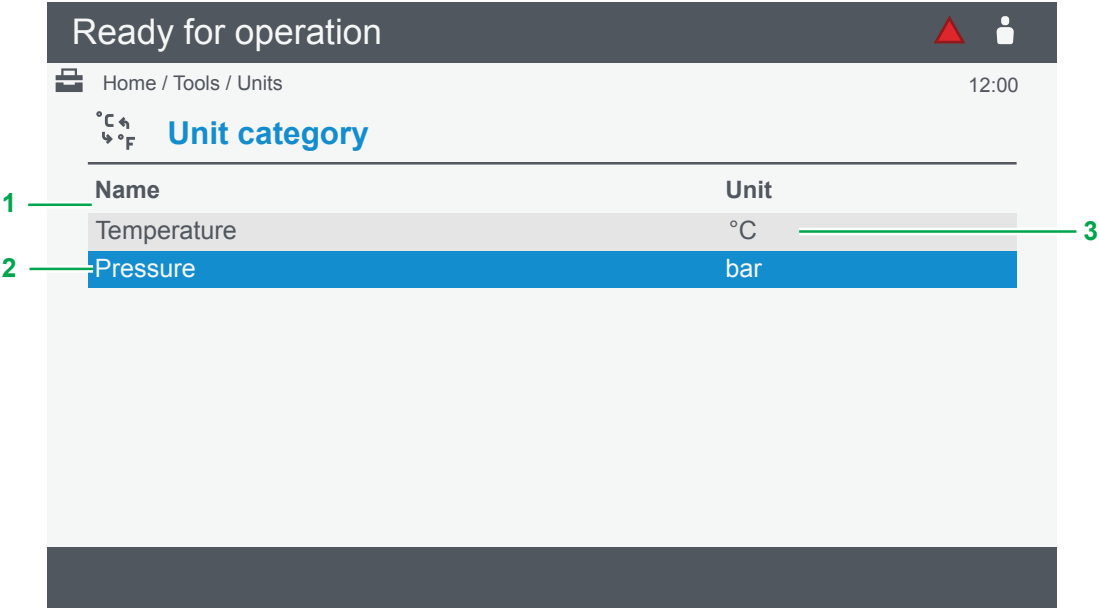

No.	Item	Notes
1	Units list	Shows the units you can configure.
2	Selected unit	Select  OK to configure the unit setting.
3	Unit setting	Shows the current unit of measure.

8.8 Communication

8.8.1 About communication

The controller or display must be powered off and powered on for communication changes to apply.

DANGER!

Power off and on

This must be done by authorised personnel who understand the risks involved in accessing the power supply or installation design. Take extreme care in the enclosure next to the ACM terminals. The controllers must not be in operation and the controlled breakers must be open.

8.8.2 Controller communication page

Ready for operation

Home / Tools / Communication

12:00

Controller communication

Name	Value
Controller ID	4
IPv6 address	fe80::226:77ff:fe01:7928
Label	DG 1
DNS preferred	10.10.103.2
DNS alternate	10.10.103.3
IP address mode	Static
IPv4 address	10.10.103.100
Subnet mask	255.255.255.0
Default gateway	10.10.103.1

Identify

Display

Write

3

4

5

No.	Item	Notes
1	Controller communication list	Shows the controller communication settings.
2	Selected setting	Select OK to configure the settings (not all settings are configurable).
3	Identify	Runs the controller rack identification feature. The Power status LED on the paired controller flashes.
4	Display page	Select to go to the display communication settings.
5	Write *	Writes the settings to the controller.

NOTE * For changes to communication settings to take effect, all controllers and displays in the same system **must** be powered off and powered on.

8.8.3 Display communication page

Ready for operation


Home / Tools / Communication12:00

Display unit communication

Name	Value
IPv6 address	fe80::226:77ff:fe02:6878
DNS preferred	10.10.103.2
DNS alternate	10.10.103.3
IP address mode	10.10.103.2
IP address	10.10.103.105
Subnet mask	255.255.255.0
Default gateway	10.10.103.1

Controller


Write




No.	Item	Notes
1	Display communication list	Shows the display communication settings.
2	Selected setting	Select  OK to configure the settings (not all settings are configurable).
3	Controller page	Select to go to the controller communication settings.
4	Write *	Writes the settings to the controller.

NOTE * For changes to communication settings to take effect, all controllers and displays in a system **must** be powered off and powered on.


9. Tools - Advanced

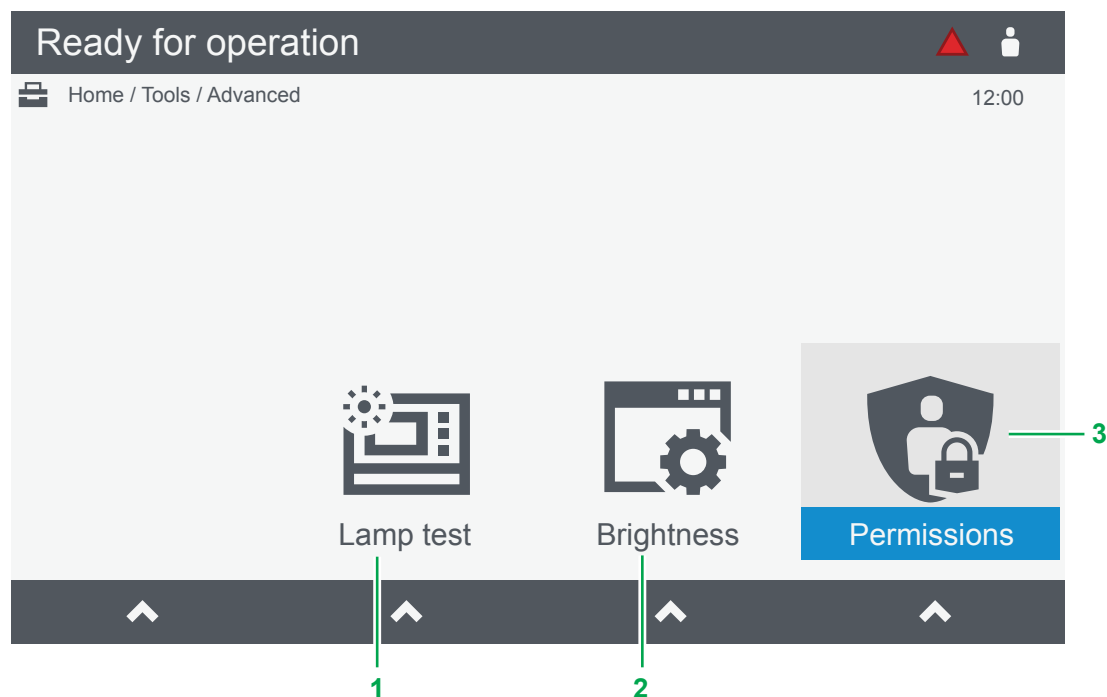

9.1 Tools advanced page




No.	Item	Notes
1	 Lamp test page	Run a lamp test of the display LEDs.
2	 Brightness menu	Shows the brightness menu.
3	 Permissions menu	Shows the permissions menu.

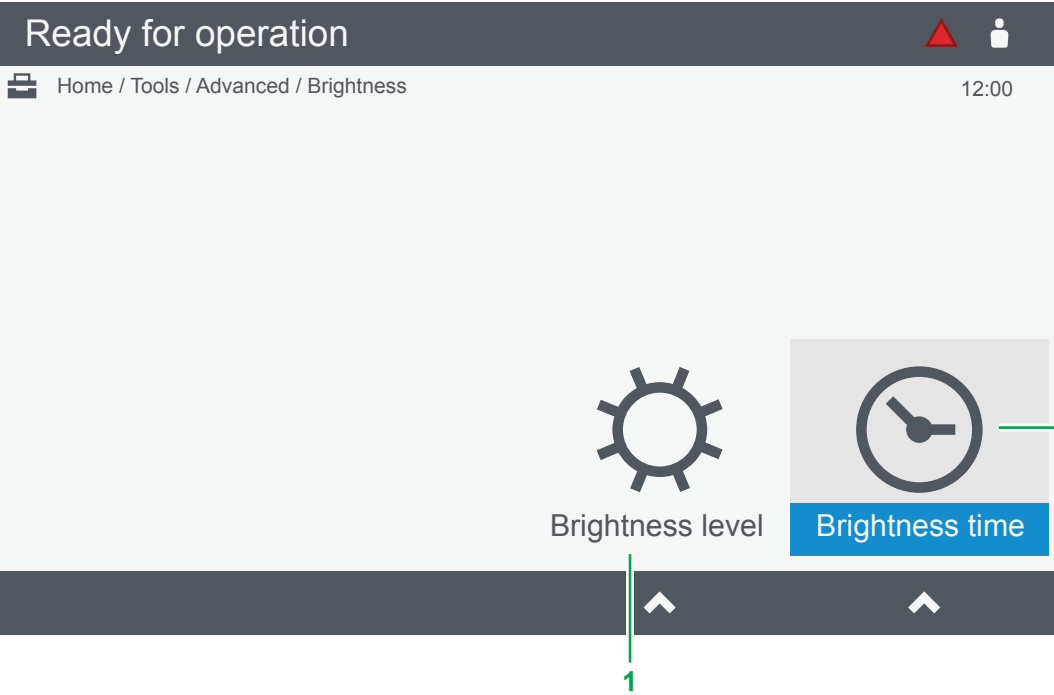
9.2 Brightness page




No.	Item	Notes
1	 Brightness level page	Change the brightness level settings.
2	 Brightness time page	Change the brightness time settings.


9.2.1 Brightness level page

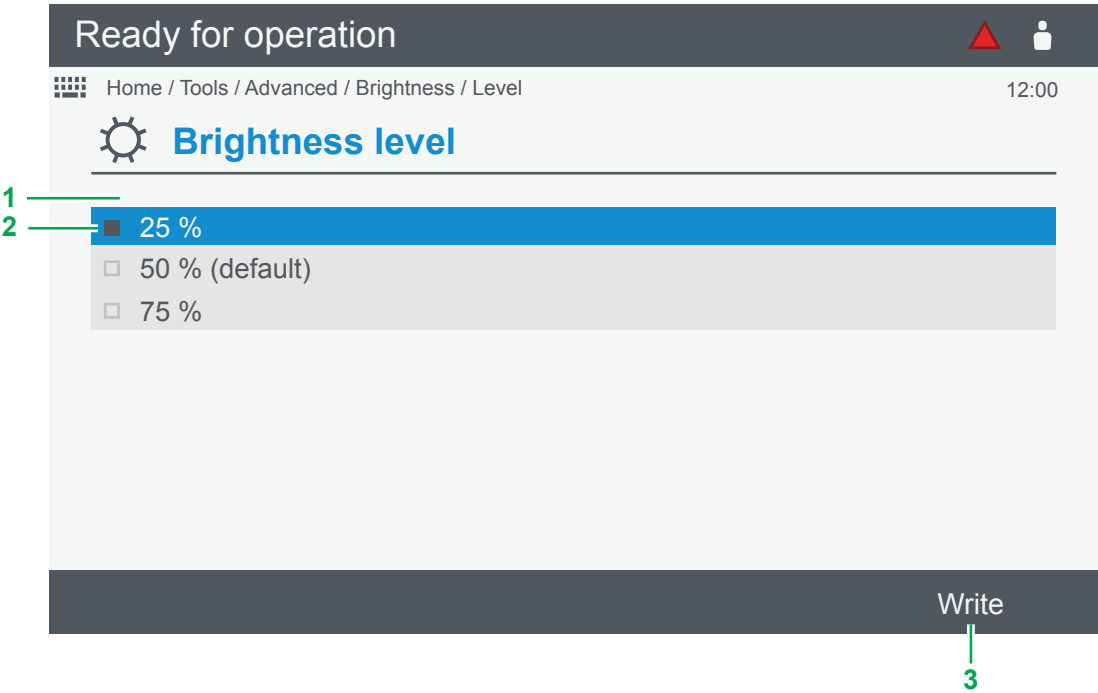


No.	Item	Notes
1	Brightness level list	Shows a list of the brightness levels in % the display is adjusted to.
2	Selected level	Select  OK to choose the brightness level:
		<input type="checkbox"/> Not selected . <input checked="" type="checkbox"/> Selected .
3	Write	Writes the setting to the controller.

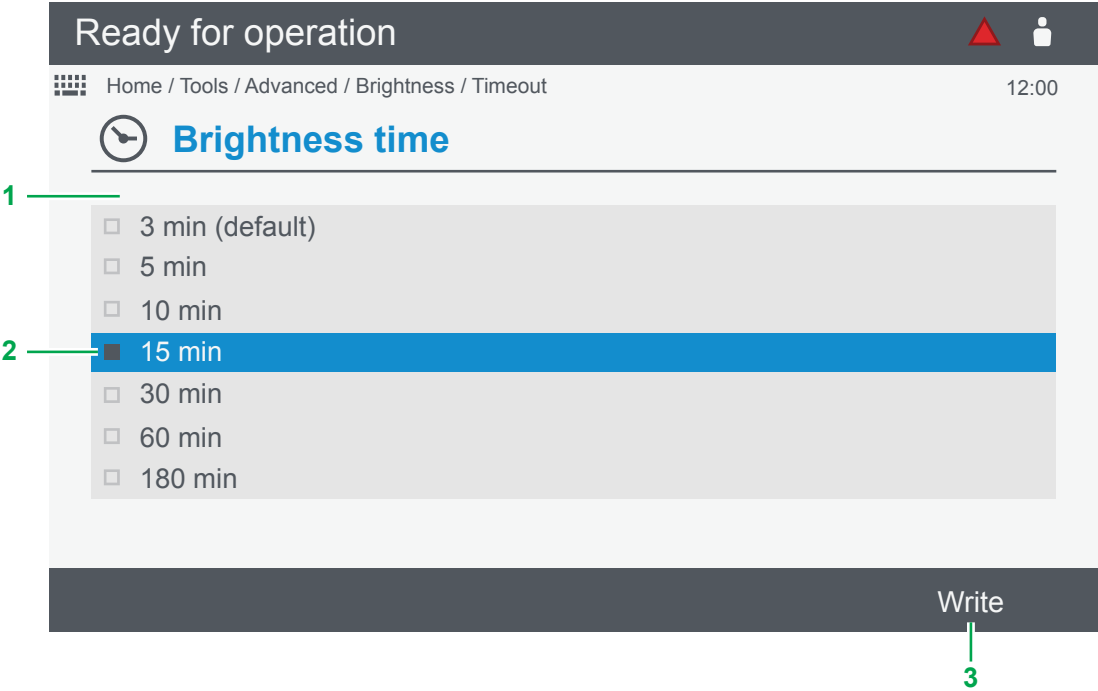

9.2.2 Brightness time page



No.	Item	Notes
1	Brightness time list	Shows a list of times in minutes before the display automatically adjusts the brightness level.
2	Selected time	Select  OK to choose the brightness time: <div><input type="checkbox"/> Not selected . <input checked="" type="checkbox"/> Selected .</div>
3	Write	Writes the setting to the controller.

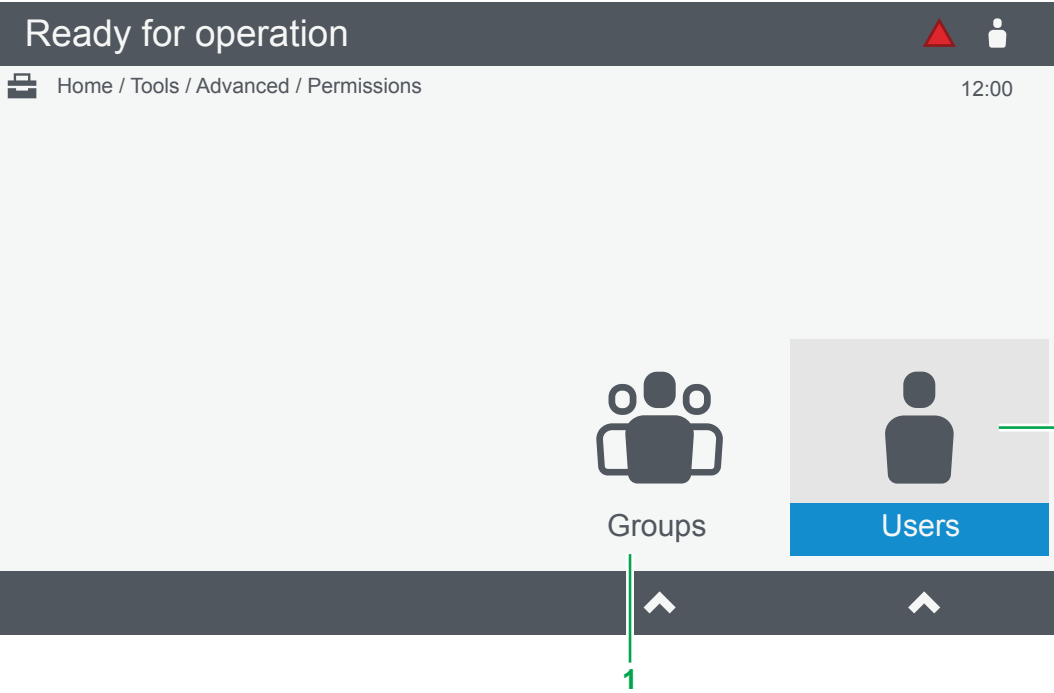9.3 Permissions page



No.	Item	Notes
1	 Groups page	Shows the groups page.
2	 Users page	Shows the users page.

9.3.1 Groups page


Ready for operation

Home / Tools / Advanced / Permissions / Groups

12:00

Groups

Name	Users	Last log on	Created
Display	0	-	2014-07-17
Operators	7	2020-09-03 02:17:50	2014-07-17
Service engineers	2	2018-12-23 04:46:35	2014-07-17
Designers	1	-	2014-07-17
Administrators	1	2020-09-02 13:36:55	2014-07-17

No.	Item	Notes
1	Groups list	Shows the permission groups. Highlight and select  OK to show more information.
2	Users	Shows how many users are in the group.

9.3.2 Users page


Ready for operation

Home / Tools / Advanced / Permissions / Users

12:00



Users

Name	Group	Last log on	Created
Admin	Administrators	2020-09-01 12:22:11	2014-07-17
Operator	Operators	2020-09-03 02:17:50	2014-07-17
Service	Service engineers	2018-12-23 04:46:35	2014-07-17
Designer	Designers	-	2014-07-17


No.	Item	Notes
1	User list	<div>Shows the users and their group permissions.</div> <div>Highlight and select  OK to show more information.</div>










10. Log

10.1 Log page


Ready for operation  

Home / Configure / IO configuration / Terminals 12:00

 **Log**

1	Time	Event name
2	 11:25:18 2020-09-02	EIM3.1 1 supply voltage low or missing
	 02:23:12 2020-09-01	DEIF network redundancy broken
	 01:56:01 2020-09-01	EIM3.1 1 supply voltage low or missing
	 17:24:42 2020-08-31	Value changed event
	 14:17:32 2020-08-31	Busbar voltage and frequency OK
	 14:17:32 2020-08-31	GB closed
	 01:03:27 2020-08-31	DEIF network redundancy broken
	 00:43:45 2020-08-31	Generator over-frequency 1
	 18:29:32 2020-08-30	Value changed event

3 DM2 log

No.	Item	Notes
1	List of log events	Shows all recorded events in the system. Test alarms are shown in green.
2	Selected event	Select  OK to show further information about the event.
3	DM2 log page	Shows the DM2 log of events if an ECU has been configured.

10.2 DM2 Log page

Ready for operation

Home / Log / DM2 log

12:00

DM2 Log (ECU)

SPN description	SPN	FMI
Engine speed	190	0
Engine oil pressure	100	5
Engine oil temperature	175	6
Engine coolant temperature	110	5
Coolant level	111	1
Fuel delivery pressure	94	5
Engine intake manifold 1 temperature	105	5
Battery potential voltage switched	158	16
Engine oil level	98	5

Clear

Refresh

1


2



3

No.	Item	Notes
1	List of DM2 log events	Shows all DM2 events from the ECU.
2	Clear	Clears the log list.
3	Refresh	Reloads the log list.

11. Info

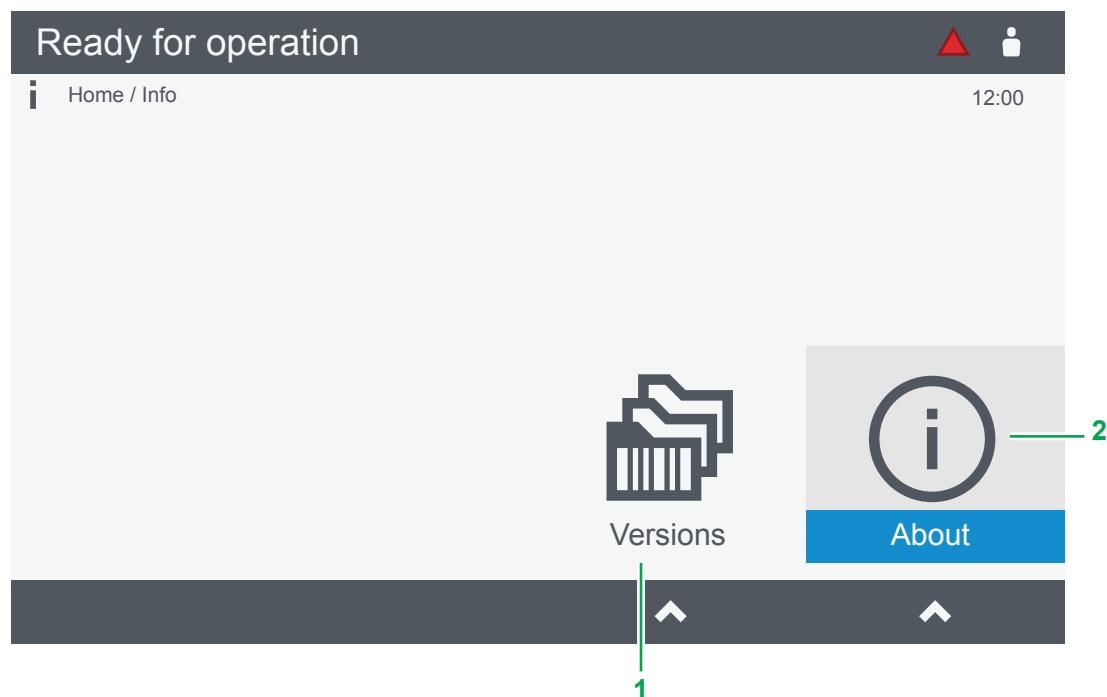
11.1 Info page



No.	Item	Notes
1	 Versions page	Shows version information for controller and display, including firmware versions. This information can be helpful for technical support.
2	 About page	Shows information about the controller, including IP address information.

12. Live data


12.1 Live data page

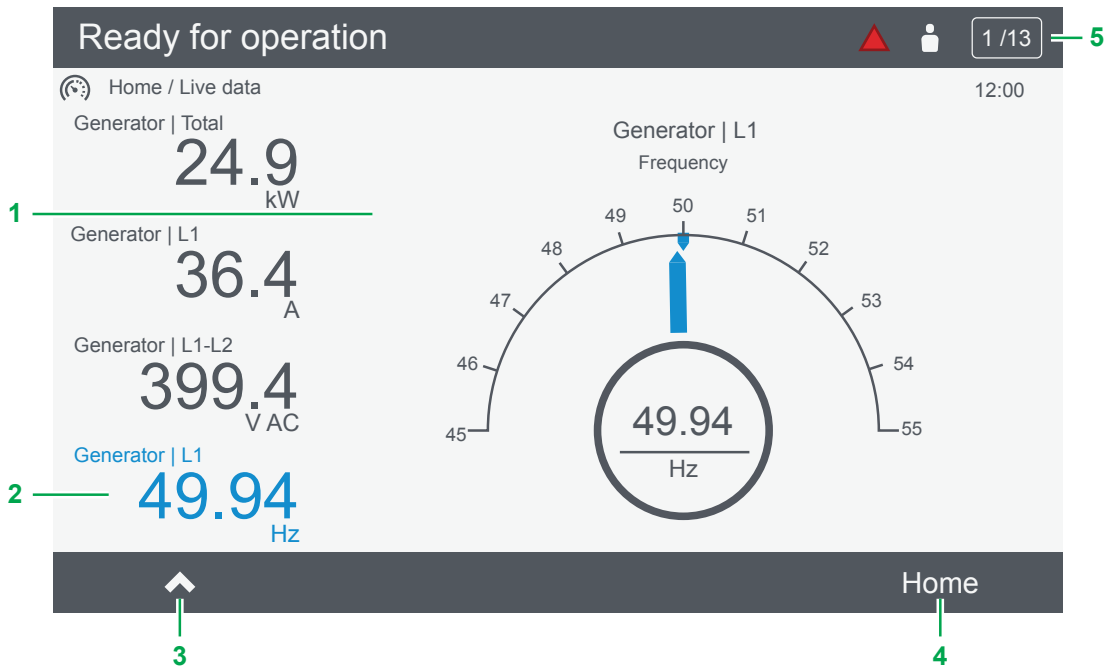

No.	Item	Notes
1	Live data information page	Shows the live data information. *
2	Selected measurement	Shows in blue the selected measurement (only available on some pages).
3	Select measurement	⬆ : Changes the selected measurement (only available on some pages).
4	Home page	Returns to the home page.
5	Page number	Shows the current page number.

NOTE * Values shown with "--" indicates the values are not available.
Values shown with "Err" indicates there are errors loading the values.


12.2 Visual synchronisation page

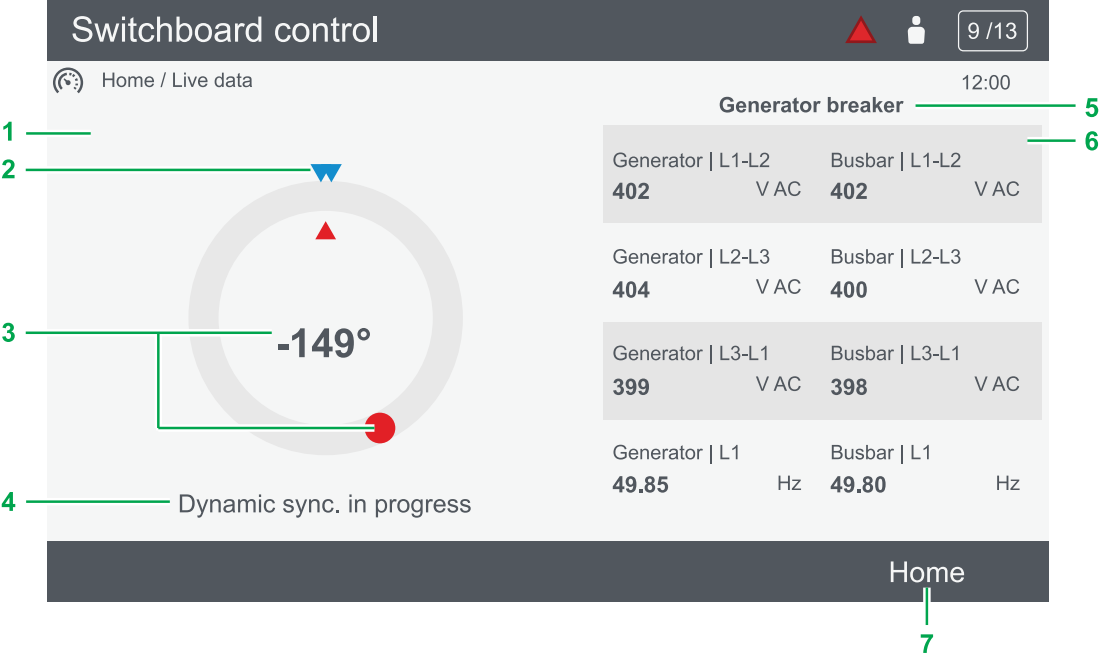

No.	Item	Notes
1	Visual synchronisation page	Shows the synchronisation progress and state.
2	Range	Shows the synchronisation window (minimum and maximum).
3	Phase difference	Shows the phase difference between the source and busbar.
4	Synchronisation status	Shows the status of the synchronisation.
5	Breaker	Shows which breaker is being synchronised.
6	Source and busbar values	Shows the phase values for the source and busbar.
7	Home page	Returns to the home page.

12.3 Exhaust aftertreatment dashboard (Tier4)

Exhaust aftertreatment dashboard is only visible if engine data is available. Not all engines support all the items shown. This page can be configured to automatically display on changes to the data with the View designer.

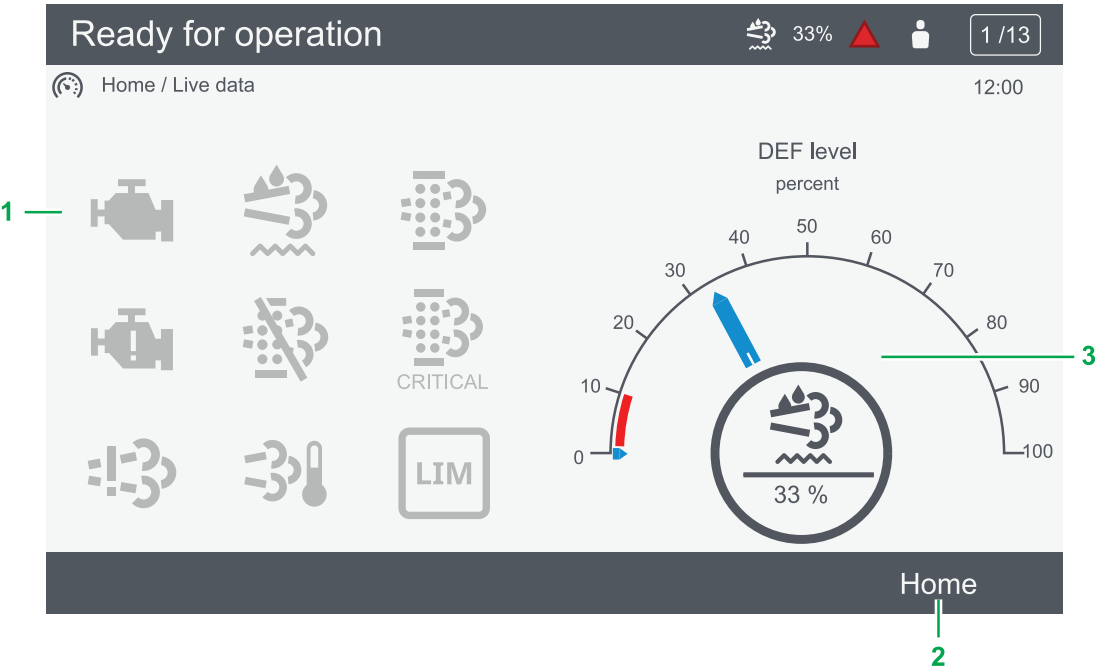

No.	Item	Notes	
1	Aftertreatment dashboard	: Shows an engine warning.	: Shows an engine shutdown.
		: Shows the DEF level is too low.	: Shows an emission failure or malfunction.
		: Shows that regeneration is needed.	: Shows that regeneration is inhibited.
		: Shows a high temperature and regeneration.	: Shows LIMIT lamp.
		: Shows HIGH severity failure level.	: Shows VHIGH severity failure level.
		: Shows CRITICAL severity failure level.	
2	Home page	Returns to the home page.	
3	Diesel Exhaust Fluid (DEF) % level	Shows the level (%) of the Diesel Exhaust Fluid.	
		Red mark shows the minimum low level for the Diesel Exhaust Fluid.	

NOTE Grey symbols show normal operation. Amber symbols show an item needs attention. Red symbols show a potentially serious problem or malfunction, refer to your engine manufacturer's manual.

13. Troubleshooting

13.1 Troubleshooting alarms

The system has many pre-configured and configurable alarm protections. An active alarm has an active alarm protection to protect the system and equipment. Activated alarms require action to resolve the problem in the system.




More information



See [Alarms](#) for more information about how to handle alarms.

13.2 Troubleshooting analogue input sensor failures

Alarm range	Analogue input type	Possible root cause
Below range alarm	Current	Wire break High resistance
	Voltage	Wire break Short circuit to ground
	Resistance	Short circuit
Above range alarm	Current	Short circuit
	Voltage	Short circuit to supply
	Resistance	Wire break

13.3 Troubleshooting communication

Problem	Cause	Solution
DEIF network redundancy broken	The system never had a redundant DEIF Ethernet network connection.	<ol style="list-style-type: none">1. Install a redundant DEIF Ethernet network connection (see Wiring the communication in the Installation instructions).2. Configure the DEIF network redundancy to Not enabled in the parameter: <code>Configure > Parameters > Communication > DEIF network > DEIF network redundancy broken</code> .
	The existing redundant DEIF network connection is unplugged or damaged.	<ol style="list-style-type: none">1. Plug in the Ethernet cable correctly.2. Replace the Ethernet cable.3. Make sure the Ethernet cable meets the specifications (see Hardware, Accessories, Ethernet cable in the Data sheet).
The display unit is stuck on the start screen, displaying the text DL mode	<ul style="list-style-type: none">• The power supply is too small to fully power the display unit, resulting in an incomplete start up.• The Ethernet cable is loose.• The display unit software is corrupt after an incomplete start up.	<ol style="list-style-type: none">1. Check the Ethernet cable.2. Update the display unit software.3. Remove the power, wait for at least 10 seconds, then restart the display unit.4. Ensure that the power supply is sufficient.5. If the problem persists, contact DEIF.
Pair to controller is lost	Display unit power was disconnected and reconnected.	<p>A pairing section screen is automatically shown on the display unit:</p> <ol style="list-style-type: none">1. Select the controller you wish to pair, and press OK .

Problem	Cause	Solution
		<div>2. You are now prompted to confirm your selection.</div> <div><div><div>• Press OK  to confirm.</div><div>• Press Back  to cancel.</div></div></div>

14. End-of-life

14.1 Disposal of waste electrical and electronic equipment

WEEE symbol



All products that are marked with the crossed-out wheeled bin (the WEEE symbol) are electrical and electronic equipment (EEE). EEE contains materials, components and substances that can be dangerous and harmful to people's health and to the environment. Waste electrical and electronic equipment (WEEE) must therefore be disposed of properly. In Europe, the disposal of WEEE is governed by the WEEE directive issued by the European Parliament. DEIF complies with this directive.

You must not dispose of WEEE as unsorted municipal waste. Instead, WEEE must be collected separately, to minimise the load on the environment, and to improve the opportunities to recycle, reuse and/or recover the WEEE. In Europe, local governments are responsible for facilities to receive WEEE. If you need more information on how to dispose of DEIF WEEE, please contact DEIF.