

# AGC 150 Stand-alone

4189341315D

Designer's handbook



Improve  
Tomorrow



## 1. Introduction

|  |           |
|--|-----------|
| <b>1.1 About</b>                         | <b>6</b>  |
| 1.1.1 Function overview                  | 6         |
| 1.1.2 Controller types                   | 7         |
| <b>1.2 About the Designer's handbook</b> | <b>8</b>  |
| 1.2.1 Software version                   | 9         |
| <b>1.3 Warnings and safety</b>           | <b>9</b>  |
| 1.3.1 Symbols for hazard statements      | 9         |
| 1.3.2 Symbols for general notes          | 9         |
| <b>1.4 Legal information</b>             | <b>10</b> |

## 2. Utility software

|  |           |
|--|-----------|
| <b>2.1 Download the utility software</b> | <b>11</b> |
| <b>2.2 Connection</b>                    | <b>11</b> |
| 2.2.1 USB connection                     | 11        |
| 2.2.2 TCP connection                     | 11        |
| <b>2.3 Using NTP</b>                     | <b>14</b> |
| <b>2.4 Utility software interface</b>    | <b>14</b> |
| 2.4.1 Top toolbar                        | 14        |
| 2.4.2 Left menu                          | 15        |
| <b>2.5 Setup of applications</b>         | <b>17</b> |
| 2.5.1 Applications in the controller     | 17        |
| 2.5.2 Setup of a stand-alone application | 18        |

## 3. Applications

|  |           |
|--|-----------|
| <b>3.1 Island operation</b>              | <b>20</b> |
| <b>3.2 AMF (Automatic Mains Failure)</b> | <b>22</b> |
| <b>3.3 Selecting the genset mode</b>     | <b>23</b> |

## 4. General functions

|                                    |           |
|------------------------------------|-----------|
| <b>4.1 Password</b>                | <b>24</b> |
| <b>4.2 AC measurement systems</b>  | <b>24</b> |
| 4.2.1 Three-phase system           | 25        |
| 4.2.2 Split-phase system           | 26        |
| 4.2.3 Single-phase system          | 26        |
| 4.2.4 AC measurement averaging     | 27        |
| 4.2.5 AC configuration             | 27        |
| <b>4.3 Nominal settings</b>        | <b>28</b> |
| 4.3.1 Default nominal settings     | 29        |
| 4.3.2 Alternative nominal settings | 30        |
| 4.3.3 Scaling                      | 30        |
| <b>4.4 Mode overview</b>           | <b>31</b> |
| 4.4.1 SEMI-AUTO mode               | 31        |
| 4.4.2 Test mode                    | 32        |
| 4.4.3 Manual mode                  | 33        |
| 4.4.4 Block mode                   | 34        |
| 4.4.5 Not in AUTO mode             | 34        |
| <b>4.5 Breakers</b>                | <b>35</b> |
| 4.5.1 Breaker types                | 35        |
| 4.5.2 Breaker spring load time     | 35        |

|   |           |
|---|-----------|
| 4.5.3 Breaker position failure.....                 | 36        |
| <b>4.6 Alarms.....</b>                              | <b>36</b> |
| 4.6.1 Fail classes.....                             | 36        |
| 4.6.2 Inhibits.....                                 | 37        |
| 4.6.3 Alarm list monitoring.....                    | 38        |
| <b>4.7 M-Logic.....</b>                             | <b>38</b> |
| 4.7.1 General shortcuts.....                        | 39        |
| 4.7.2 Oneshots.....                                 | 39        |
| 4.7.3 Virtual toggle events.....                    | 40        |
| Virtual toggle events.....                          | 40        |
| 4.7.4 Flip flop function.....                       | 40        |
| 4.7.5 Virtual switch events.....                    | 41        |
| 4.7.6 PLC mode control.....                         | 41        |
| 4.7.7 M-Logic event counters.....                   | 43        |
| 4.7.8 Display keypress events.....                  | 43        |
| <b>4.8 Timers and counters.....</b>                 | <b>44</b> |
| 4.8.1 Command timers.....                           | 44        |
| 4.8.2 Pulse input counters.....                     | 44        |
| 4.8.3 Diagnostics timer.....                        | 44        |
| <b>4.9 Interfaces.....</b>                          | <b>44</b> |
| 4.9.1 Additional operator panel, AOP-2.....         | 44        |
| 4.9.2 Access lock.....                              | 45        |
| 4.9.3 Language selection.....                       | 46        |
| 4.9.4 Translations.....                             | 46        |
| <b>5. Engine functions</b>                          |           |
| <b>5.1 Engine sequences.....</b>                    | <b>49</b> |
| <b>5.2 Engine start functions.....</b>              | <b>49</b> |
| 5.2.1 Start sequence.....                           | 49        |
| 5.2.2 Start sequence conditions.....                | 52        |
| 5.2.3 Start-up overview.....                        | 54        |
| 5.2.4 Start functions.....                          | 55        |
| 5.2.5 Digital feedbacks.....                        | 56        |
| 5.2.6 Analogue tacho feedback.....                  | 57        |
| 5.2.7 Oil pressure.....                             | 58        |
| <b>5.3 Running feedback.....</b>                    | <b>59</b> |
| 5.3.1 Start sequence running feedback.....          | 59        |
| 5.3.2 Not running delay time.....                   | 59        |
| 5.3.3 Interruption of the start sequence.....       | 60        |
| 5.3.4 MPU wire break.....                           | 60        |
| 5.3.5 D+ (Charger generator fail).....              | 61        |
| 5.3.6 Running output.....                           | 61        |
| <b>5.4 Engine stop functions.....</b>               | <b>62</b> |
| 5.4.1 Stop sequence.....                            | 62        |
| 5.4.2 Stop sequence commands for the generator..... | 63        |
| 5.4.3 Set points related to the stop sequence.....  | 63        |
| 5.4.4 Stop sequence flowchart.....                  | 64        |
| <b>5.5 Idle running.....</b>                        | <b>64</b> |
| 5.5.1 Temperature-dependent idle start-up.....      | 66        |

|   |           |
|---|-----------|
| 5.5.2 Inhibit.....                        | 67        |
| 5.5.3 Running signal.....                 | 67        |
| 5.5.4 Idle speed flowcharts.....          | 67        |
| <b>5.6 Engine protections.....</b>        | <b>69</b> |
| 5.6.1 Overspeed.....                      | 69        |
| 5.6.2 Underspeed.....                     | 70        |
| 5.6.3 EIC overspeed.....                  | 70        |
| <b>5.7 Engine communication.....</b>      | <b>70</b> |
| <b>5.8 Engine pre-heater.....</b>         | <b>71</b> |
| 5.8.1 Engine heater alarm.....            | 72        |
| <b>5.9 Ventilation.....</b>               | <b>72</b> |
| 5.9.1 Max. ventilation alarms.....        | 72        |
| <b>5.10 Pump logic.....</b>               | <b>73</b> |
| 5.10.1 Fuel pump logic.....               | 73        |
| 5.10.2 DEF pump logic.....                | 74        |
| 5.10.3 Generic pump logic.....            | 75        |
| <b>5.11 SDU 104 integration.....</b>      | <b>76</b> |
| <b>5.12 Other functions.....</b>          | <b>76</b> |
| 5.12.1 Service timers.....                | 76        |
| 5.12.2 Keyswitch.....                     | 77        |
| 5.12.3 No governor regulation.....        | 77        |
| 5.12.4 Unsupported application.....       | 77        |
| <b>6. Generator functions</b>             |           |
| <b>6.1 Display, buttons and LEDs.....</b> | <b>79</b> |
| <b>6.2 Application modes.....</b>         | <b>80</b> |
| <b>6.3 Generator breaker.....</b>         | <b>80</b> |
| 6.3.1 Breaker settings.....               | 80        |
| 6.3.2 Breaker sequences.....              | 80        |
| 6.3.3 Flowcharts.....                     | 82        |
| 6.3.4 Breaker failures.....               | 83        |
| <b>6.4 Inputs and outputs.....</b>        | <b>84</b> |
| 6.4.1 Digital input functions.....        | 84        |
| 6.4.2 Relay output functions.....         | 87        |
| <b>6.5 Other functions.....</b>           | <b>87</b> |
| 6.5.1 Demand of peak currents.....        | 87        |
| 6.5.2 No AVR regulation.....              | 88        |
| <b>7. Mains functions</b>                 |           |
| <b>7.1 Mains breaker.....</b>             | <b>89</b> |
| 7.1.1 Breaker settings.....               | 89        |
| 7.1.2 Breaker sequences.....              | 89        |
| 7.1.3 Flowcharts.....                     | 93        |
| 7.1.4 Digital mains breaker control.....  | 94        |
| 7.1.5 Breaker failures.....               | 94        |
| <b>8. AC protections</b>                  |           |
| <b>8.1 About protections.....</b>         | <b>96</b> |
| 8.1.1 Protections in general.....         | 96        |
| 8.1.2 Phase-neutral voltage trip.....     | 96        |

|   |            |
|---|------------|
| 8.1.3 Phase sequence error and phase rotation.....          | 97         |
| <b>8.2 Generator protections.....</b>                       | <b>97</b>  |
| 8.2.1 Over-voltage (ANSI 59).....                           | 98         |
| 8.2.2 Under-voltage (ANSI 27).....                          | 98         |
| 8.2.3 Voltage unbalance (ANSI 47).....                      | 99         |
| 8.2.4 Over-current (ANSI 50TD).....                         | 99         |
| 8.2.5 Fast over-current (ANSI 50/50TD).....                 | 100        |
| 8.2.6 Unbalance current (ANSI 46).....                      | 100        |
| 8.2.7 Voltage dependent over-current (ANSI 50V).....        | 101        |
| 8.2.8 Neutral inverse time over-current (ANSI 50N).....     | 102        |
| 8.2.9 Earth fault inverse time over-current (ANSI 50G)..... | 103        |
| 8.2.10 Neutral over-current (4th CT).....                   | 104        |
| 8.2.11 Earth fault over-current (4th CT).....               | 105        |
| 8.2.12 Over-frequency (ANSI 81O).....                       | 105        |
| 8.2.13 Under-frequency (ANSI 81U).....                      | 106        |
| 8.2.14 Overload (ANSI 32).....                              | 106        |
| 8.2.15 Low power.....                                       | 107        |
| 8.2.16 Reverse power (ANSI 32R).....                        | 107        |
| 8.2.17 Reactive power export (ANSI 40O).....                | 108        |
| 8.2.18 Reactive power import (ANSI 40U).....                | 108        |
| <b>8.3 Busbar standard protections.....</b>                 | <b>109</b> |
| 8.3.1 Busbar over-voltage (ANSI 59).....                    | 109        |
| 8.3.2 Busbar under-voltage (ANSI 27).....                   | 110        |
| 8.3.3 Busbar voltage unbalance (ANSI 47).....               | 110        |
| 8.3.4 Busbar over-frequency (ANSI 81O).....                 | 111        |
| 8.3.5 Busbar under-frequency (ANSI 81U).....                | 111        |
| <b>8.4 Mains protections.....</b>                           | <b>112</b> |
| 8.4.1 Over-current (4th CT).....                            | 112        |
| 8.4.2 Overload (4th CT).....                                | 113        |
| 8.4.3 Reverse power (4th CT).....                           | 113        |
| <b>8.5 Additional protections.....</b>                      | <b>113</b> |
| 8.5.1 AC average.....                                       | 114        |
| <b>9. Inputs and outputs</b>                                |            |
| <b>9.1 Digital inputs.....</b>                              | <b>116</b> |
| 9.1.1 Standard digital inputs.....                          | 116        |
| 9.1.2 Configuring digital inputs.....                       | 116        |
| 9.1.3 Custom alarms.....                                    | 117        |
| <b>9.2 DC relay outputs.....</b>                            | <b>118</b> |
| 9.2.1 Configure a relay output.....                         | 119        |
| <b>9.3 Analogue inputs.....</b>                             | <b>119</b> |
| 9.3.1 Introduction.....                                     | 119        |
| 9.3.2 Application description.....                          | 120        |
| 9.3.3 Configuring multi-inputs.....                         | 120        |
| 9.3.4 Alarms.....   | 121        |
| 9.3.5 Wire break.....                                       | 122        |
| 9.3.6 RMI sensor types.....                                 | 123        |
| 9.3.7 Differential measurement.....                         | 124        |
| <b>9.4 Using an analogue output as a transducer.....</b>    | <b>125</b> |

# 1. Introduction

## 1.1 About

The AGC 150 Stand-alone (Genset) controller provides flexible protection and control for one genset in non-synchronising applications. The controller contains all the functions needed to protect and control the genset, the genset breaker, and also a mains breaker.

The AGC 150 is a compact, all-in-one controller. Each AGC 150 contains all necessary 3-phase measuring circuits.

The values and alarms are shown on the LCD display screen, which is sunlight-readable. Operators can easily control the genset and breakers from the display unit. Alternatively, use the communication options to connect to an HMI/SCADA system.

### 1.1.1 Function overview

This is an overview of the most important functions.

#### Operation modes

- Island operation
- Automatic Mains Failure (AMF)

#### Engine control

- Start and stop sequences
- Run and stop coil

#### Generator protections

- 2 x reverse power (ANSI 32R)
- 5 x overload (ANSI 32F)
- 4 x over-current (ANSI 50TD)
- 2 x over-voltage (ANSI 59P)
- 3 x under-voltage (ANSI 27P)
- 3 x over-frequency (ANSI 81O)
- 3 x under-frequency (ANSI 81U)
- Voltage dependent over-current (ANSI 50V)
- Unbalanced voltage (ANSI 47)
- Unbalanced current (ANSI 48)
- Under-excitation (ANSI 32RV)
- Over-excitation (ANSI 32FV)
- Multi-inputs (digital, 4-20 mA, 0-10 V DC, Pt100, RMI or binary/digital)
- Digital inputs

#### Busbar/mains protections

- 3 x over-voltage (ANSI 59P)
- 4 x under-voltage (ANSI 27P)
- 3 x over-frequency (ANSI 81O)
- 3 x under-frequency (ANSI 81U)
- Unbalanced voltage (ANSI 47)

#### Display

- Prepared for remote mounting

- Buttons for start and stop
- Buttons for breaker operations
- Status texts
- Measurement readings
- ECU data
- Alarm indication

## M-Logic

- Simple logic configuration tool
- Selectable input events
- Selectable output commands

## 1.1.2 Controller types

| Parameter | Setting                  | Controller type                               | Minimum software |
|-----------|--------------------------|---|------------------|
| 9101      | DG unit                  | Generator controller                          | S2               |
|           | DG unit                  | Generator Stand-alone controller              | S1               |
|           | Mains unit               | Mains controller                              | S2               |
|           | BTB unit                 | BTB controller                                | S2               |
|           | DG HYBRID unit           | Genset-Solar hybrid controller                | S2               |
|           | ENGINE DRIVE unit        | Engine drive controller                       | S1               |
|           | Remote unit              | Remote display                                | None             |
|           | ENGINE DRIVE MARINE unit | Engine drive controller for marine use        | S1               |
|           | DG MARINE unit           | Stand-alone genset controller for marine use  | S1               |
|           | ASC 150 Storage*         | Battery storage controller                    | S3               |
|           | ASC 150 Solar*           | Solar controller                              | S3               |
|           | ATS unit                 | Automatic transfer switch (open transition)   | S1               |
|           | ATS unit                 | Automatic transfer switch (closed transition) | S2               |
|           | DG PMS LITE              | PMS lite controller                           | S2               |

## Software packages and controller types

The controller software package determines which functions the controller can use.

- S1 = Stand-alone
  - You can change the controller type to any other controller that uses S1 software.
- S2 = Core
- S3 = Extended
  - You can change the controller type to any other controller type\*.
    - \* To change to an ASC 150, the controller must have the sustainability option (S10).
- S4 = Premium
  - You can change the controller type to any other controller type\*.
    - \* To change to an ASC 150, the controller must have the sustainability option (S10).
  - All functions are supported.

You can select the controller type under `Basic settings > Controller settings > Type`.

## 1.2 About the Designer's handbook

### General purpose

This document gives information about the controller's functionality and its applications, and for configuring the controller.



#### CAUTION



#### Installation errors

Read this document before working with the controller. Failure to do this may result in human injury or damage to the equipment.

### Intended users of the Designer's handbook

This Designer's handbook is primarily intended for the panel designer in charge. Based on this document, the panel designer can give the electrician the necessary information to install the controller, for example detailed electrical drawings.

The Designer's handbook can also be used during commissioning to check the parameters, and operators may find it useful for understanding the system and for troubleshooting.

### List of technical documentation

| Document                  | Contents   |
|---------------------------|--|
| Product sheet             | <ul style="list-style-type: none"><li>• Short description</li><li>• Controller applications</li><li>• Main features and functions</li><li>• Technical data</li><li>• Protections</li><li>• Dimensions</li></ul>  |
| Data sheet                | <ul style="list-style-type: none"><li>• General description</li><li>• Functions and features</li><li>• Controller applications</li><li>• Controller types and variants</li><li>• Protections</li><li>• Inputs and outputs</li><li>• Technical specifications</li></ul> |
| Designer's handbook       | <ul style="list-style-type: none"><li>• Principles</li><li>• General controller sequences, functions and protections</li><li>• Protections and alarms</li><li>• Regulation</li><li>• Hardware characteristics</li><li>• Communication</li></ul>                        |
| Installation instructions | <ul style="list-style-type: none"><li>• Tools and materials</li><li>• Mounting</li><li>• Minimum wiring for the controller</li><li>• Wiring information and examples</li></ul>   |
| Operator's manual         | <ul style="list-style-type: none"><li>• Controller equipment (buttons and LEDs)</li><li>• Operating the system</li></ul>   |


| Document      | Contents   |
|---------------|--|
|               | <ul style="list-style-type: none"><li>Alarms and log</li></ul>   |
| Modbus tables | <ul style="list-style-type: none"><li>Modbus address list<ul style="list-style-type: none"><li>PLC addresses</li><li>Corresponding controller functions</li></ul></li><li>Descriptions for function codes, function groups</li></ul> |

1.2.1 Software version


This document is based on the AGC 150 software version 1.20.

1.3 Warnings and safety


1.3.1 Symbols for hazard statements




**DANGER!**




**This shows dangerous situations.**  
If the guidelines are not followed, these situations will result in death, serious personal injury, and equipment damage or destruction.




**WARNING**




**This shows potentially dangerous situations.**  
If the guidelines are not followed, these situations could result in death, serious personal injury, and equipment damage or destruction.




**CAUTION**



**This shows low level risk situation.**  
If the guidelines are not followed, these situations could result in minor or moderate injury.




**NOTICE**




**This shows an important notice**  
Make sure to read this information.

1.3.2 Symbols for general notes

**NOTE** This shows general information.

 **More information**  
This shows where you can find more information.



**Example**  
This shows an example.



#### How to ...

This shows a link to a video for help and guidance.

## Safety during installation and operation

Installing and operating the controller may require work with currents and voltages. The installation must only be carried out by authorised personnel who understand the risks involved in working with electrical equipment.

## Factory settings

The controller is delivered pre-programmed from the factory with a set of default settings. These settings are based on typical values and may not be correct for your system. You must therefore check all parameters before using the controller.

## Electrostatic discharge

Electrostatic discharge can damage the controller terminals. You must protect the terminals from electrostatic discharge during the installation. When the controller is installed and connected, these precautions are no longer necessary.

## Data security

To minimise the risk of data security breaches:

- As far as possible, avoid exposing controllers and controller networks to public networks and the Internet.
- Use additional security layers like a VPN for remote access, and install firewall mechanisms.
- Restrict access to authorised persons.

## 1.4 Legal information

### Third party equipment

DEIF takes no responsibility for the installation or operation of any third party equipment, including the **genset**.

### Warranty

#### NOTICE



#### Warranty

The controller is not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

### Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

### Copyright

© Copyright DEIF A/S. All rights reserved.

## 2. Utility software

### 2.1 Download the utility software


The **Multi-line 2 Utility Software v.3.x** is the software interface between a PC and the controller. The software is free of charge. Download it from [www.deif.com](http://www.deif.com)

### 2.2 Connection


#### 2.2.1 USB connection

You need a USB cable (USB A to B) to connect the controller to a PC.

1. Install the utility software on a PC.
2. Use the USB cable to connect the controller service port to the PC.
3. Start the utility software.

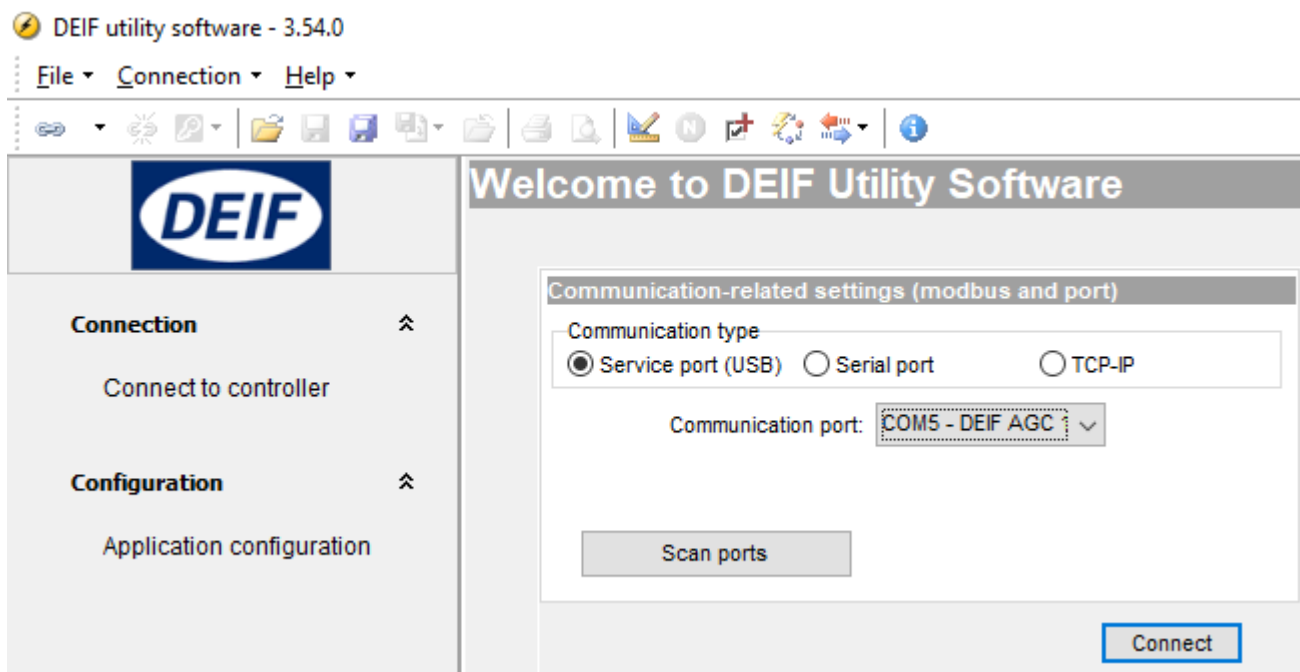

4. Select a service port option.
5. When prompted, select the access level, enter the password, and select OK.

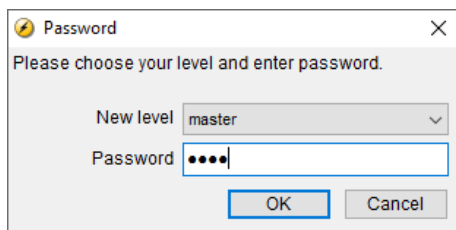

#### More information

See **General functions**, **Password** for the default passwords.

#### 2.2.2 TCP connection

You can use TCP/IP communication to connect to the controller. This requires an Ethernet cable, or a connection to the network that includes the controller.

## Default controller network address

- IP: 192.168.2.2
- Gateway: 192.168.2.1
- Subnet mask: 255.255.255.0

## Configuring the controller IP address using the display unit or a USB connection

When connecting to a controller using TCP/IP, you must know the controller's IP address. Find the IP address on the display under: `Communication > Ethernet setup`.

**You can use the display to change the controller's IP address.**

Alternatively, you can use a USB connection or an Ethernet connection and the utility software to change the controller IP address.


## Point-to-point Ethernet connection to the controller

If you do not want to use the display unit or a USB connection to change the IP address, you can use a point-to-point Ethernet connection. The PC must have a static IP address. For the default controller network address, the PC static IP address must be 192.168.2.xxx, where xxx is a free IP-address in the network (note: xxx cannot be 2 (the controller IP address) or 1 (the gateway)).

If you change the controller address (for example, from 192.168.2.yyy to 192.168.47.yyy) the connection is lost. A new static IP for the PC is needed. In this case, 192.168.47.zzz, where zzz is a free IP-address in the network. The PC address, IP address, and gateway must be in the same subnet.

When the PC has the correct static IP address:

1. Use an Ethernet cable to connect the PC to the controller.
2. Start the utility software.
3. Select *TCP-IP*, and enter the controller IP address.

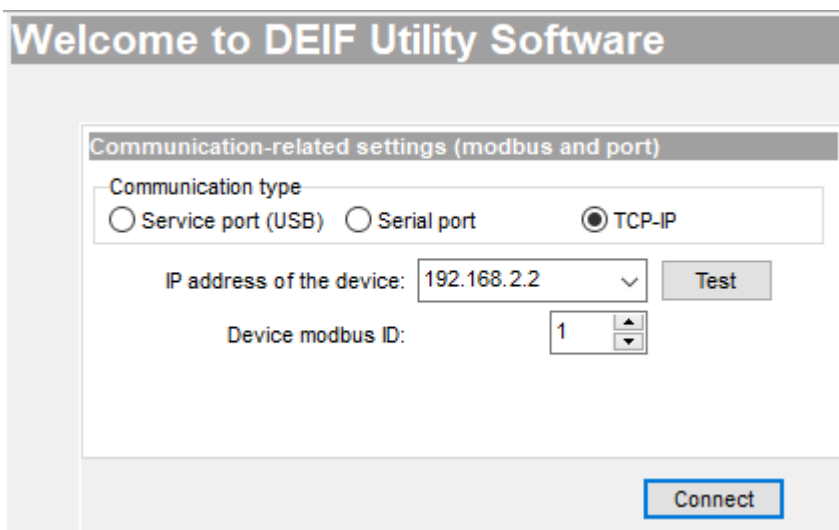


4. You can use the *Test* button to check if the connection is successful.
5. Select *Connect* to connect to the controller using TCP-IP.


## Configuring the controller IP address using the utility software

1. Select *Connect* to connect to the controller using TCP-IP.
2. Select *Ethernet setting (TCP/IP)*.

The *Network Parameters* window opens:

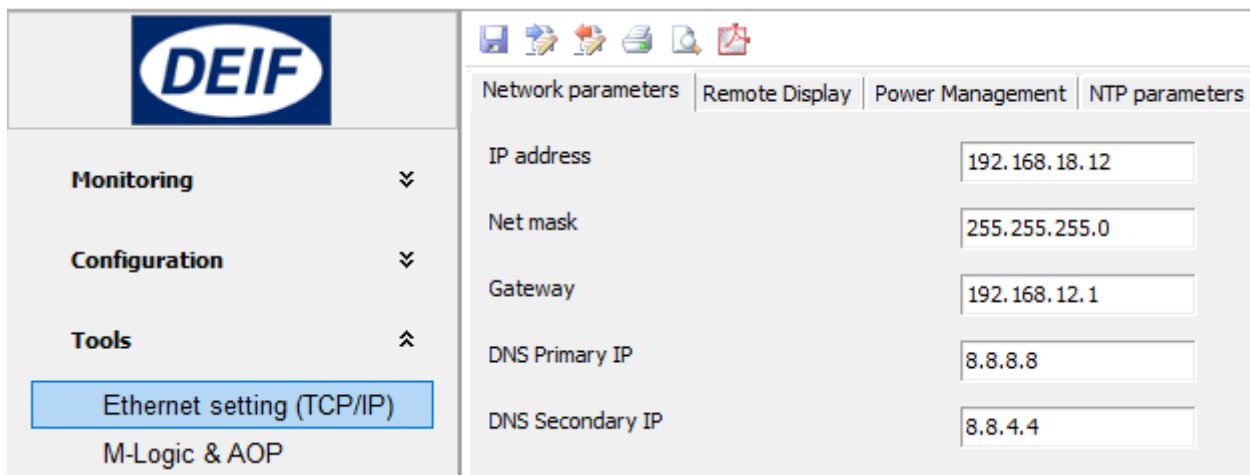

The screenshot shows the DEIF utility software interface. On the left is a sidebar with a menu containing 'Monitoring', 'Configuration', and 'Tools'. Under 'Tools', 'Ethernet setting (TCP/IP)' is selected and highlighted in blue, with 'M-Logic & AOP' listed below it. The main area on the right has a tabbed interface with four tabs: 'Network parameters' (active), 'Remote Display', 'Power Management', and 'NTP parameters'. Below the tabs, there are five input fields for network configuration: 'IP address' (192.168.18.12), 'Net mask' (255.255.255.0), 'Gateway' (192.168.12.1), 'DNS Primary IP' (8.8.8.8), and 'DNS Secondary IP' (8.8.4.4). At the top of the main area, there is a toolbar with icons for file operations and a 'Write to device' button (represented by a red arrow icon).

When the controller network parameters have been changed, press the *Write to device*  button.

The controller receives the new network parameters and reboots the network hardware.

To connect to the controller again, use the new controller IP address (and a correct PC static IP address).

### Using a switch

For a system with multiple controllers, all controllers can be connected to a switch. Create a unique IP address for each controller in the network before connecting the controllers to a switch.


The PC can then be connected to the switch, and the Ethernet cable can be in the same port of the switch at all times. You can enter the controller IP address in the utility software.

The TCP-IP connection is faster than other connections. It also allows the user to shift between controllers in the application supervision window in the utility software.

## 2.3 Using NTP

To ensure that the controller always has the right time, you can use the network time protocol (NTP) function.

Select *Ethernet setting (TCP/IP)* in the Utility software, then select the *NTP parameters* tab in the *Network Parameters* window:

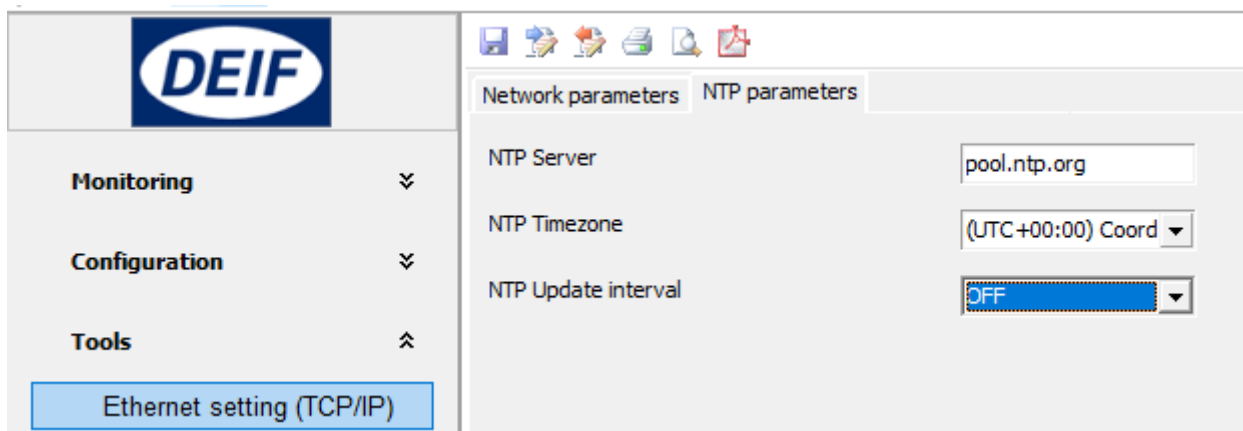


You can select an NTP server, a time zone and an update interval. Write the changes to the controller to activate the NTP function.

**NOTE** The selected NTP server must be available in the network.

## 2.4 Utility software interface


### 2.4.1 Top toolbar

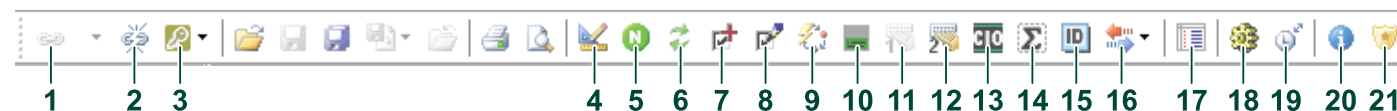

1. Connect to a controller.
2. Disconnect from a controller.
3. Permission level.
4. Application settings.
5. Configure the network parameters.
6. Configure Modbus and Profibus.
7. Upgrade options (create an option code and send it to [support@deif.com](mailto:support@deif.com)).
8. Write new options (received from DEIF support).
9. Update the controller firmware.
10. Configure the display views.
11. Not used for the controller.
12. Configure the AOP-2 buttons and LEDs (Additional Operator Panel).
13. Configure the CIO modules.
14. Read the controller counters.
15. Information on the controller and the software.
16. Read, write, backup and restore the device.
17. Data tracing (shows the max./min. of a value, as long as the data tracer window is open).
18. Send commands to the controller.
19. Synchronise the controller clock with the connected PC.

- 20. Information about the utility software.
- 21. Configure the permissions.

### 2.4.2 Left menu

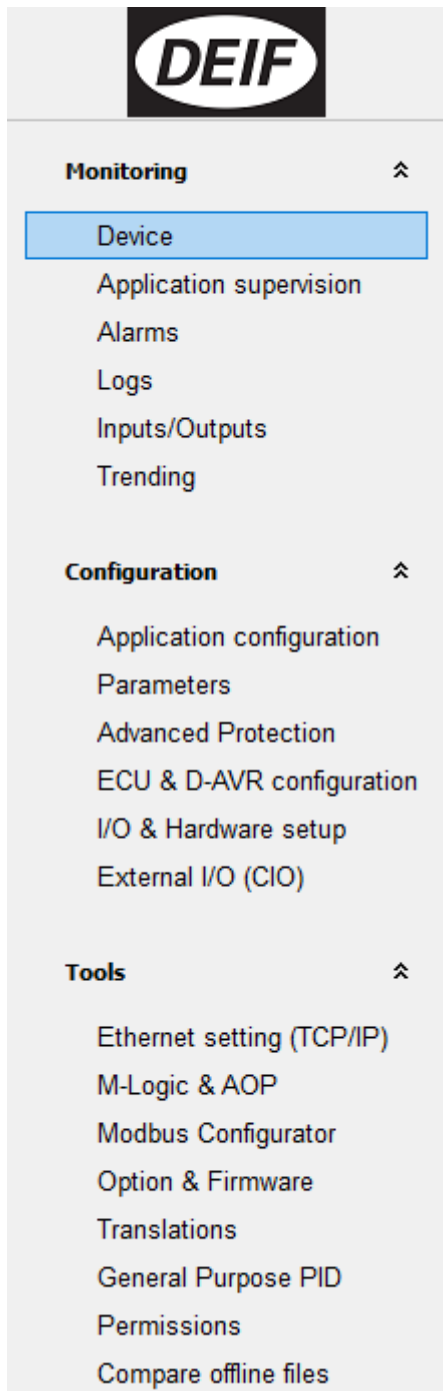

- **DEIF**
  - Link to [www.deif.com](http://www.deif.com)
- **Monitoring**
  - Device
    - See operating information for the connected controller.
  - Application supervision
    - See the plant operation, including how much power each genset produces.
  - Alarms
    - An overview of the active alarms.
    - See the history for the alarms that are activated while the PC is connected.
  - Logs
    - See the alarms and events logs from the controller.
  - Inputs/Outputs
    - The controller input and output status.
  - Trending
    - See real-time operation.
    - Trending is possible when a PC is connected and the trending window is open. The controller cannot save the data.
- **Configuration**
  - Application configuration
    - Create the application single-line drawing(s).
  - Parameters
    - Configure and view parameters. You can view the parameters as a list or in a tree structure.
  - Advanced protection
    - Advanced protection settings, such as capability curves, droop, and more.
  - ECU & D-AVR configuration
    - EIC general configuration, for example Engine I/F and EIC start/stop.
    - ECU alarms
    - ECU regeneration
    - SPN ignore list
    - DAVR configuration
    - DAVR alarms
  - I/O & Hardware setup
    - Configure the inputs and outputs.
  - External I/O (CIO)
    - Detect and configure the external inputs and outputs.
- **Tools**
  - Ethernet setting (TCP/IP)
    - Configure Ethernet settings and communication.
  - M-Logic & AOP
    - Configure M-Logic and additional operator panels.


- Modbus Configurator
  - Configure the configurable Modbus addresses.
- Option & Firmware
  - See available options.
- Translations
  - Customise or translate the text in the controller.
- General Purpose PID
  - Configure the general purpose PID settings.
- Permissions
  - See and change the user permissions.
- Compare the offline files
  - Compare files.

## 2.5 Setup of applications

### 2.5.1 Applications in the controller

| Application type | Plant type        | Configuration characteristics   |
|------------------|-------------------|---|
| Stand-alone      | Single controller | In a stand-alone application setup, the controller cannot communicate with other controllers. In a stand-alone application, a genset controller can operate one genset, one GB and one MB. There must be no other gensets or power sources. |

The controller includes 4 pre-configured standard applications.

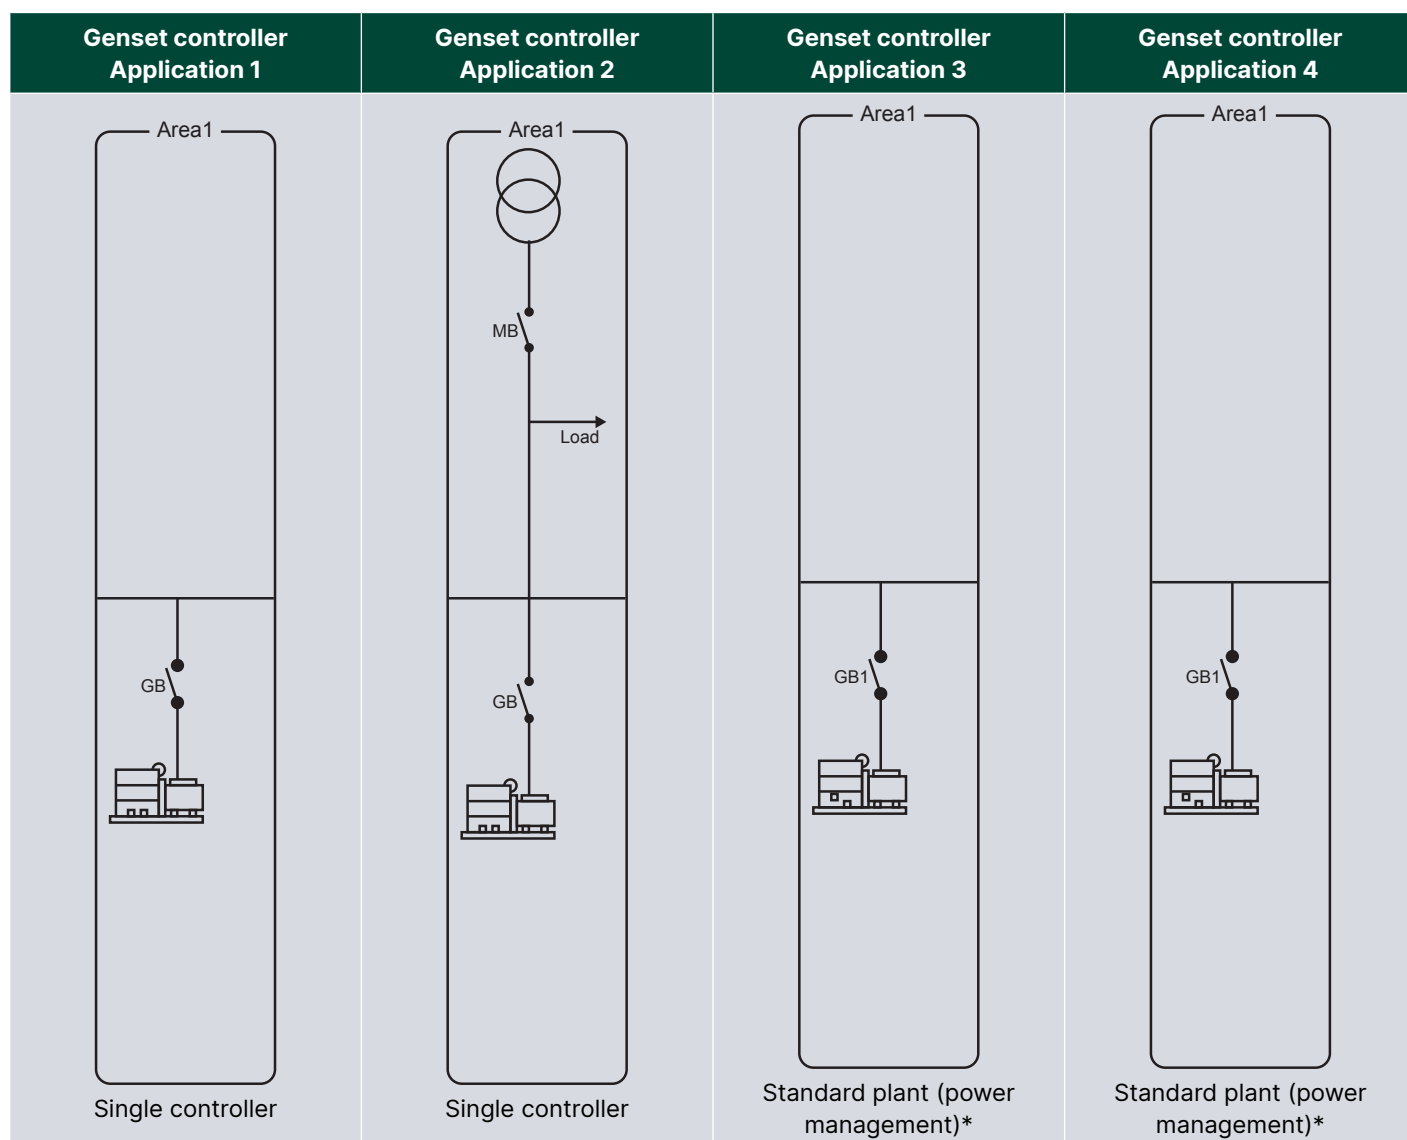

**NOTE** \* Not relevant for AGC 150 Stand-alone.

Basic settings > Application type > Standalone or PM > Application select


| Parameter | Text               | Range  | Default |
|-----------|--------------------|--------|---------|
| 9161      | Active application | 1 to 4 | -       |
| 9162      | Viewed application | 1 to 4 | -       |


The standard applications can be changed with the utility software.

## 2.5.2 Setup of a stand-alone application

In a stand-alone application, the generator controller can control one genset, one generator breaker (GB), and one mains breaker (MB).

When connected to a controller with the utility software:

1. Select *Application configuration*
2. Select *New plant configuration* 
3. The *Plant options* window opens.

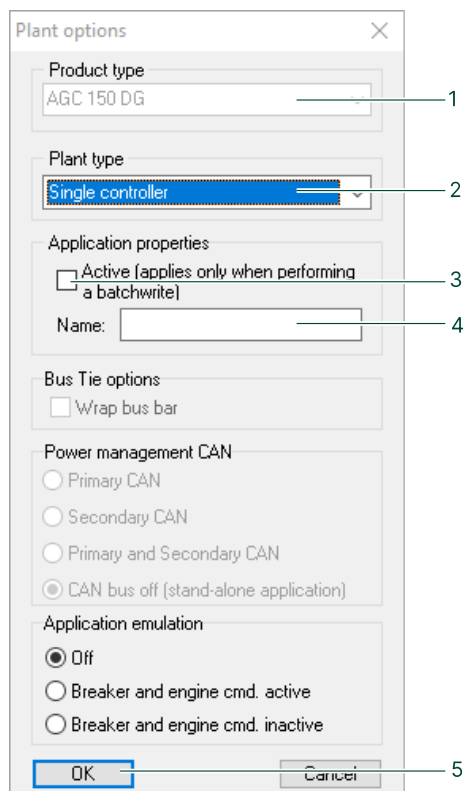


The **Plant options** dialog box is shown with the following fields and options:

- Product type:** AGC 150 DG (indicated by line 1)
- Plant type:** Single controller (indicated by line 2)
- Application properties:**
  - ☐ Active (applies only when performing a batchwrite) (indicated by line 3)
  - Name:** (empty text field, indicated by line 4)
- Bus Tie options:**
  - ☐ Wrap bus bar
- Power management CAN:**
  - ☐ Primary CAN
  - ☐ Secondary CAN
  - ☐ Primary and Secondary CAN
  - ☒ CAN bus off (stand-alone application)
- Application emulation:**
  - ☒ Off
  - ☐ Breaker and engine cmd. active
  - ☐ Breaker and engine cmd. inactive
- Buttons:** OK (indicated by line 5) and Cancel

Select the plant options:

1. Select the *Product (controller) type*
  - Greyed out when already connected to a controller.
2. Select the *Plant type: Single controller*
3. Select to activate the application when it is written to the controller.
4. Write a name for the application.
5. Select OK to save the application.

### Example

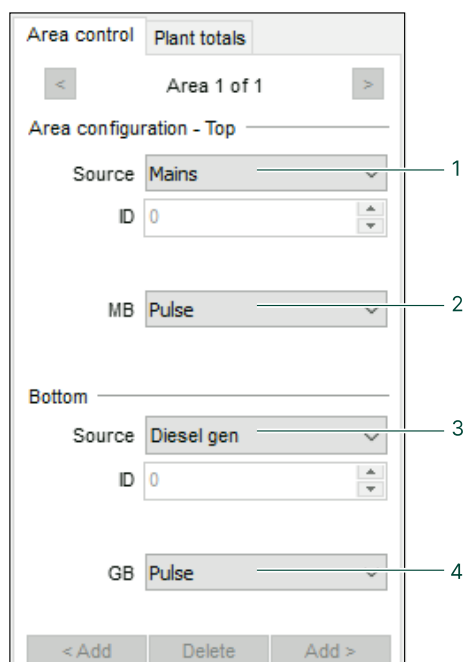


The **Area configuration** dialog box is shown with the following fields and options:

- Area control:** Plant totals (selected)
- Area 1 of 1:** (indicated by line 1)
- Area configuration - Top:**
  - Source:** Mains (indicated by line 1)
  - ID:** 0
  - MB:** Pulse (indicated by line 2)
- Bottom:**
  - Source:** Diesel gen (indicated by line 3)
  - ID:** 0
  - GB:** Pulse (indicated by line 4)
- Buttons:** < Add, Delete, Add >

1. Select one of these types of power source to show in the top area:
  - None
  - Mains
  - Diesel genset
2. Select the breaker type for the mains breaker:
  - Pulse
  - Continuous NE
  - Compact
  - Ext\*
  - None
  - Continuous ND
3. Select the power source to show in the bottom area:
  - None
  - Mains
  - Diesel genset
4. Select the breaker type for the generator breaker:
  - Pulse

- Continuous NE
- Compact
- Ext\*
- None

**NOTE** \* External breaker

After the application drawing is created, press *Write plant configuration to device*  to send the configuration to the connected controller.

### **Stand-alone application without a breaker**

If you created a stand-alone application without a genset breaker, reset any GB feedback in the I/O setup list:

1. In the utility software, select *I/O setup*.
2. Change the function to *Not used* for the relevant I/Os, for example:




**Digital Input 39**

Function

## 3. Applications

### 3.1 Island operation

#### Single-line diagram

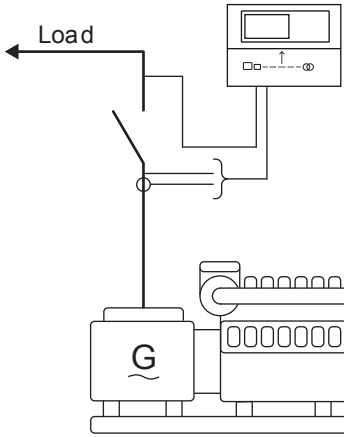

**NOTE** If island operation is selected, the *MB closed* digital input must not be activated.


#### **AUTO mode**

The controller automatically starts the genset and closes the generator breaker at a digital start command. When the stop command is given, the generator breaker is tripped, and the genset is stopped after a cooling down period. The start and stop commands are used by activating and deactivating a digital input or with the time-dependent start/stop commands. If time-dependent start/stop commands are used, then AUTO mode must also be used. The display buttons cannot be used in AUTO mode.

#### **SEMI-AUTO mode**


The operator can use the display buttons to start the genset, close the generator breaker, open the generator breaker, and stop the genset.

### Island operation flowchart (AUTO mode)

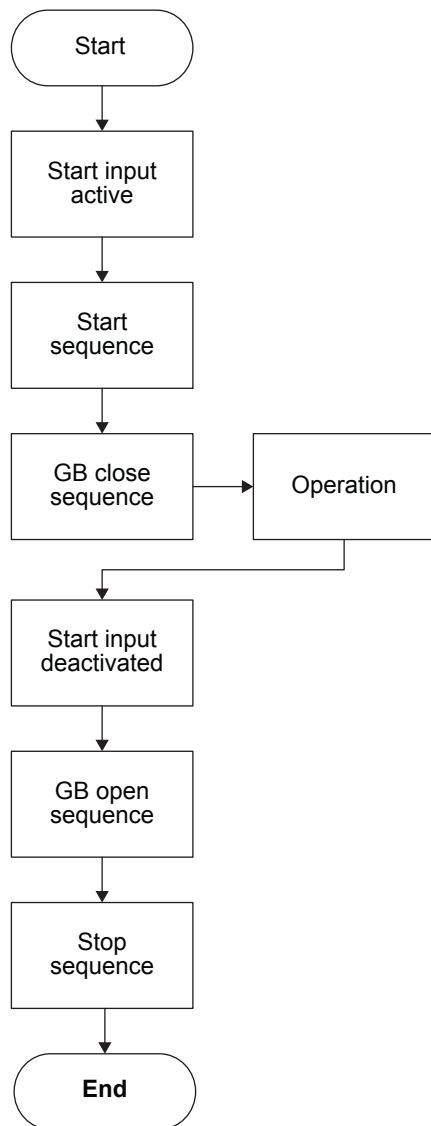

## 3.2 AMF (Automatic Mains Failure)

### Single-line diagram

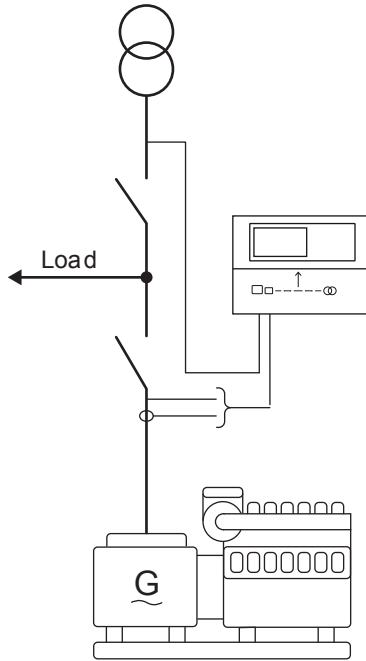

### AUTO mode

The controller automatically starts the genset and switches to generator supply at a mains failure after an adjustable delay time. You can adjust the controller to change to genset operation in these ways:


1. The mains breaker is opened at genset start-up.
2. The mains breaker remains closed until the genset is running, and the genset voltage and frequency is OK.

In both cases, the generator breaker is closed when the generator voltage and frequency is OK, and the mains breaker is open.

### SEMI-AUTO mode

When the operator presses the engine start button, the controller starts the engine. When the operator presses the generator breaker close button, the controller opens the mains breaker and closes the generator breaker.

### Automatic Mains Failure flowchart

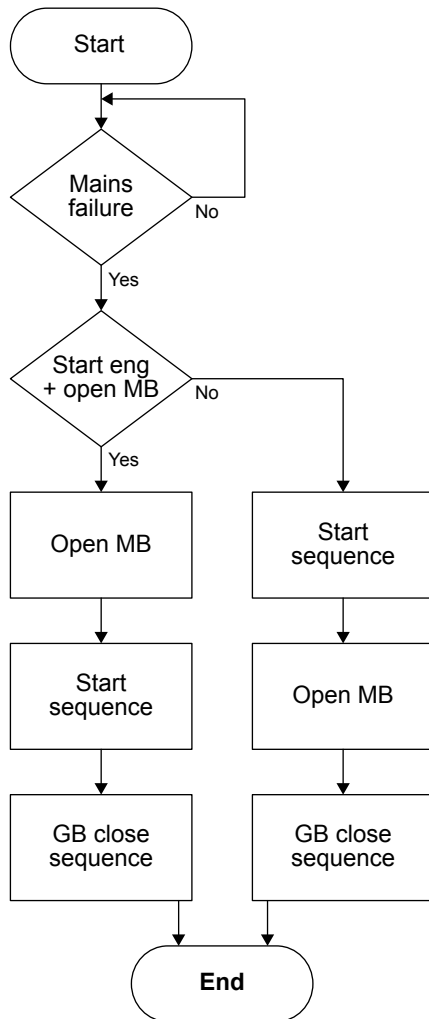

### 3.3 Selecting the genset mode

In *Genset Mode* (parameter 6070):

- For island operation: Select **Island operation**
- For automatic mains failure: Select **Auto. Mains Failure**


## 4. General functions

### 4.1 Password

The controller has three password levels that can be configured on the controller or from the utility software. Parameter settings cannot be changed with a lower ranking password, but are shown on the display.

| Password level | Default password | Customer access | Service access | Master access |
|----------------|------------------|-----------------|----------------|---------------|
| Customer       | 2000             | ●               |                |               |
| Service        | 2001             | ●               | ●              |               |
| Master         | 2002             | ●               | ●              | ●             |

With the utility software it is possible to protect each parameter with a specific password level. Enter the parameter and select the correct password level.

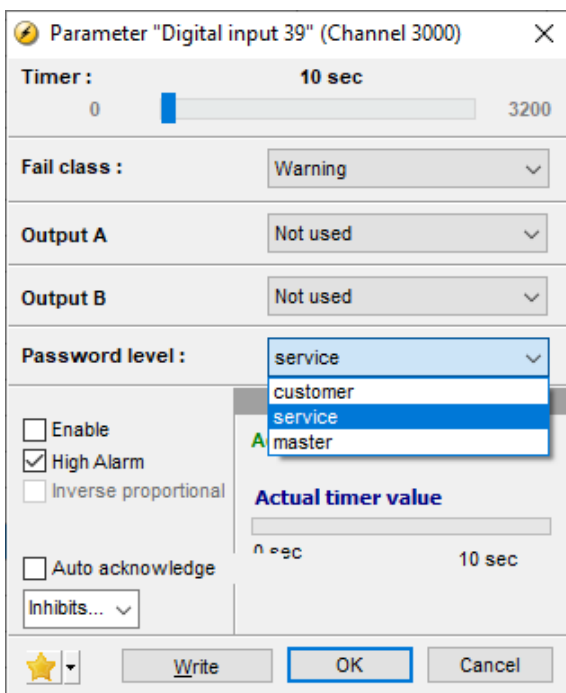

The password level can also be changed from the parameter view in the Level column:

1. Right-click the appropriate field in the Level column.
2. Select *Change access level*.
3. Select the required access level.
  - Customer
  - Service
  - Master

You can see and edit permissions in the utility software on the *Tools > Permissions* page.

### 4.2 AC measurement systems

The controller is designed for measurement of voltages in systems with nominal voltages between 100 and 690 V AC. The AC system can be three-phase, single-phase, or split phase.

**More information**

See the **Installation instructions** for how to wire the different systems.

**CAUTION****Incorrect configuration is dangerous**

Configure the correct AC configuration. If in doubt, contact the switchboard manufacturer for information.

**Basic settings > Measurement setup > Wiring connection > AC configuration**

| Parameter | Text                | Range   | Default     |
|-----------|---------------------|---|-------------|
| 9131      | AC configuration    | 3 phase 3W4<br>3 phase 3W3<br>2 phase L1/L3*<br>2 phase L1/L2*<br>1 phase L1* | 3 phase 3W4 |
| 9132      | AC configuration BB | 3 phase 3W4<br>3 phase 3W3  | 3 phase 3W4 |

**NOTE** \* If this is selected, the same system is used for the busbar, and parameter 9132 is disabled.

### 4.2.1 Three-phase system

The three-phase system is the default setting for the controller. When this is used, all three phases must be connected to the controller.

The following configuration is required for three-phase measuring.

**Basic settings > Nominal settings > Voltage > Generator/Mains nominal U**

| Parameter | Text                      | Range          | Adjust to value  |
|-----------|---------------------------|----------------|------------------|
| 6004      | Generator/Mains nominal U | 100 to 25000 V | $U_{\text{NOM}}$ |

**Basic settings > Measurement setup > Voltage transformer > Generator/Mains VT**

| Parameter | Text          | Range          | Adjust to value |
|-----------|---------------|----------------|-----------------|
| 6041      | U primary G   | 100 to 25000 V | Primary VT      |
| 6042      | U secondary G | 100 to 690 V   | Secondary VT    |

**Basic settings > Nominal settings > Voltage > Busbar nominal U**

| Parameter | Text           | Range          | Adjust to value  |
|-----------|----------------|----------------|------------------|
| 6053      | Busbar voltage | 100 to 25000 V | $U_{\text{NOM}}$ |

**Basic settings > Measurement setup > Voltage transformer > Busbar VT**

| Parameter | Text           | Range          | Adjust to value |
|-----------|----------------|----------------|-----------------|
| 6051      | U primary BB   | 100 to 25000 V | Primary VT      |
| 6052      | U secondary BB | 100 to 690 V   | Secondary VT    |

**NOTE** The controller has two sets of busbar transformer settings, which can be enabled individually in this measurement system.

## 4.2.2 Split-phase system

The split-phase system is a special application, where two phases and neutral are connected to the controller. The controller shows phases L1 and L2/L3 in the display. The phase angle between L1 and L3 is 180 °. Split-phase is possible between L1-L2 or L1-L3.

The following configuration is required for the split phase measuring (example 240/120 V AC).

**Basic settings > Nominal settings > Voltage > Generator nominal U**

| Parameter | Text                | Range          | Adjust to value |
|-----------|---------------------|----------------|-----------------|
| 6004      | Generator nominal U | 100 to 25000 V | 120 V AC        |

**Basic settings > Measurement setup > Voltage transformer > Generator VT**

| Parameter | Text          | Range          | Adjust to value  |
|-----------|---------------|----------------|------------------|
| 6041      | U primary G   | 100 to 25000 V | $U_{\text{NOM}}$ |
| 6042      | U secondary G | 100 to 690 V   | $U_{\text{NOM}}$ |

**Basic settings > Nominal settings > Voltage > Busbar nominal U**

| Parameter | Text           | Range          | Adjust to value  |
|-----------|----------------|----------------|------------------|
| 6053      | Busbar voltage | 100 to 25000 V | $U_{\text{NOM}}$ |

**Basic settings > Measurement setup > Voltage transformer > Busbar VT**

| Parameter | Text           | Range          | Adjust to value  |
|-----------|----------------|----------------|------------------|
| 6051      | U primary BB   | 100 to 25000 V | $U_{\text{NOM}}$ |
| 6052      | U secondary BB | 100 to 690 V   | $U_{\text{NOM}}$ |

The measurement  $U_{\text{L3L1}}$  shows 240 V AC. The voltage alarm set points refer to the nominal voltage 120 V AC, and  $U_{\text{L3L1}}$  does not activate any alarm.

**NOTE** The controller has two sets of busbar transformer settings, which can be enabled individually in this measurement system.

## 4.2.3 Single-phase system

The single-phase system consists of one phase and the neutral.

The following configuration is required for the single-phase measuring (example 230 V AC).

**Basic settings > Nominal settings > Voltage > Generator nominal U**

| Parameter | Text              | Range          | Adjust to value |
|-----------|-------------------|----------------|-----------------|
| 6004      | Generator voltage | 100 to 25000 V | 230 V AC        |

**Basic settings > Measurement setup > Voltage transformer > Generator VT**

| Parameter | Text          | Range          | Adjust to value                  |
|-----------|---------------|----------------|----------------------------------|
| 6041      | U primary G   | 100 to 25000 V | $U_{\text{NOM}} \times \sqrt{3}$ |
| 6042      | U secondary G | 100 to 690 V   | $U_{\text{NOM}} \times \sqrt{3}$ |

| Parameter | Text           | Range          | Adjust to value                  |
|-----------|----------------|----------------|----------------------------------|
| 6053      | Busbar voltage | 100 to 25000 V | $U_{\text{NOM}} \times \sqrt{3}$ |

| Parameter | Text           | Range          | Adjust to value                  |
|-----------|----------------|----------------|----------------------------------|
| 6051      | U primary BB   | 100 to 25000 V | $U_{\text{NOM}} \times \sqrt{3}$ |
| 6052      | U secondary BB | 100 to 690 V   | $U_{\text{NOM}} \times \sqrt{3}$ |


**NOTE** The voltage alarms refer to  $U_{\text{NOM}}$  (for example, 230 V AC).  
The controller has two sets of busbar transformer settings, which can be enabled individually in this measurement system.

#### 4.2.4 AC measurement averaging

You can use the utility software to set up averaging for a number of AC measurements. The averaged values are then shown on the display unit and in the Modbus values. However, the controller continues to use real-time measurements.

In the utility software, under *I/O & Hardware setup*, select the *AC meas AVG* tab. For each measurement, you can select no averaging (0 ms), averages calculated over 200 ms, or averages calculated over 800 ms.

From the *AC meas AVG* tab, you can also set up averaging for load-sharing using active power (P) and reactive power (Q) measurements. Set *LS using avg P and Q* to ON, and select 200 ms or 800 ms for the *Active power (P)* and *Reactive power (Q)* measurements.

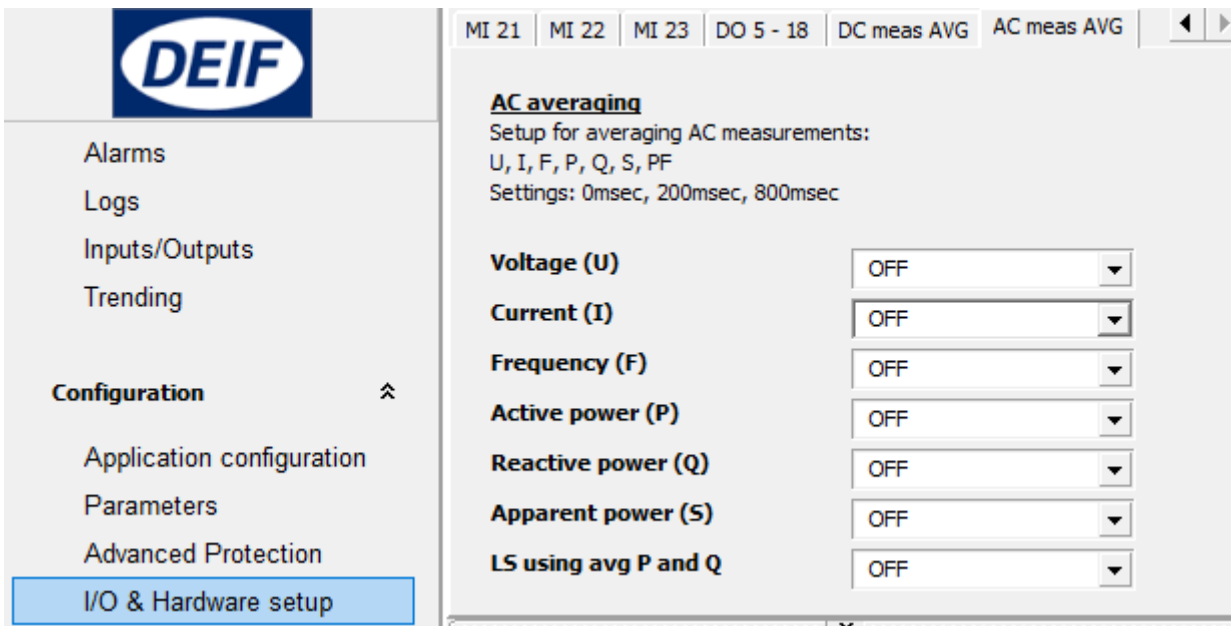

#### 4.2.5 AC configuration

##### Current transformer scaling

You can use the utility software to set up current transformer (CT) scaling for AC current measurements. You can select the scaling for each of the four sets of nominal settings. Use this function for CTs with more than one configuration.

In the utility software, under *I/O & Hardware setup*, select the *AC config* tab. You need to set the *CT scaling enable* to *Enable* to enable the CT scaling function. The range for each set is 0.5 to 2.5.

## Inverting 3-phase current transformers

Use the utility software to invert 3-phase current transformers. It is only possible to invert all three phases, not individual phases. To invert the current transformers, go to the *I/O & Hardware setup*, and select the *AC config* tab. Select *Enable* from the drop-down menu next to **3phi CT invert enable** to enable this function.

## 4.3 Nominal settings

The controller has four sets of nominal settings for the generator and two sets for the busbar. The four sets of nominal generator settings can be individually configured.

### Alternative configuration > Generator nominal settings

| Parameter | Text            | Range                    | Default           |
|-----------|-----------------|--------------------------|-------------------|
| 6006      | Enable nom. set | Nominal setting [1 to 4] | Nominal setting 1 |

### Switch between the nominal settings

You can use the following to switch between the four sets of nominal settings:

1. **Digital input:** M-Logic is used when a digital input is needed to switch between the four sets of nominal settings. Select the required input among the input events, and select the nominal settings in the outputs. For example:

M-Logic AOP 2 - ID1 AOP 2 - ID2 AOP 2 - ID3 AOP 2 - ID4 AOP 2 - ID5

**Logic 1** Digital input 23 on activates parameter set 1

NOT Operator

Event A ☐ Dig. Input 23: Inputs ☐ OR ☐ Delay (sec.) 0

Event B ☐ Not used ☐ OR ☐ Output Set parameter 1: Command Parameter

Event C ☐ Not used ☐ OR ☐ Enable this rule ☒

**Logic 2** Digital input 23 off activates parameter set 2

NOT Operator

Event A ☒ Dig. Input 23: Inputs ☐ OR ☐ Delay (sec.) 0

Event B ☐ Not used ☐ OR ☐ Output Set parameter 2: Command Parameter

Event C ☐ Not used ☐ OR ☐ Enable this rule ☒

2. **AOP:** M-Logic is used when the AOP is used to switch between the four sets of nominal settings. Select the required AOP button among the input events, and select the nominal settings in the outputs. For example:

AOP 2 - ID1 (Button 7) Activate parameter set 1

**Line 1** AOP button 7 activates parameter set 1

NOT Operator

Event A ☐ Button: AOP Buttons ☐ OR ☐ Delay (sec.) 0

Event B ☐ Not used ☐ OR ☐ Output Set parameter 1: Command Parameter

Event C ☐ Not used ☐ OR ☐ Enable this rule ☒

AOP 2 - ID1 (Button 8) Activate parameter set 2

**Line 1** AOP button 8 activates parameter set 2

NOT Operator

Event A ☐ Button: AOP Buttons ☐ OR ☐ Delay (sec.) 0

Event B ☐ Not used ☐ OR ☐ Output Set parameter 2: Command Parameter

Event C ☐ Not used ☐ OR ☐ Enable this rule ☒

3. **Menu settings:** On the controller or with the utility software.

**Block nominal settings change**

Use the *block nom chang* function to stop the nominal settings for the generator and busbar being changed. Go to parameter 6017 and change the set point to ON to enable the function.

**4.3.1 Default nominal settings**

The default nominal settings are settings 1.

**Basic settings > Nominal settings**

| Parameter | Text                | Range           | Default  |
|-----------|---------------------|-----------------|----------|
| 6001      | Frequency Nom. f    | 48.0 to 62.0 Hz | 50 Hz    |
| 6002      | Power Nom. P        | 10 to 20000 kW  | 480 kW   |
| 6003      | Current Nom. I      | 0 to 9000 A     | 867 A    |
| 6004      | Generator nominal U | 100 to 25000 V  | 400 V    |
| 6005      | Setpoint Nom. rpm   | 100 to 4000 RPM | 1500 RPM |
| 6007      | 4th current Nom. I  | 0 to 9000 A     | 867 A    |
| 6053      | Busbar nominal U    | 100 to 25000 V  | 400 V    |
| 6055      | 4th current Nom. P  | 10 to 9000 kW   | 480 kW   |

### 4.3.2 Alternative nominal settings

Alternative config. > Generator nominal settings > Nominal settings [2 to 4] > Basic settings

| Parameter          | Text                | Range           | Default  |
|--------------------|---------------------|-----------------|----------|
| 6011, 6021 or 6031 | Frequency Nom. f    | 48.0 to 62.0 Hz | 50 Hz    |
| 6012, 6022 or 6032 | Power Nom. P        | 10 to 20000 kW  | 480 kW   |
| 6013, 6023 or 6033 | Current Nom. I      | 0 to 9000 A     | 867 A    |
| 6014, 6024 or 6034 | Generator nominal U | 100 to 25000 V  | 400 V    |
| 6015, 6025 or 6035 | Setpoint Nom. rpm   | 100 to 4000 RPM | 1500 RPM |
| 6017, 6027 or 6037 | 4th current Nom. I  | 0 to 9000 A     | 867 A    |

#### Busbar nominal settings 2

The controller has two sets of nominal settings for the busbar. Each set consists of a nominal as well as a primary and secondary voltage value. The U primary and U secondary are used to define the primary and secondary voltage values, if any measurement transformers are installed.

Alternative config. > Busbar nominal settings > Nom. set. selection

| Parameter | Text                       | Range  | Default           |
|-----------|----------------------------|--|-------------------|
| 6054      | Nominal settings selection | Nominal setting 1<br>Nominal setting 2<br>BB Unom = G Unom | Nominal setting 1 |

If no voltage transformer is installed between generator and busbar, select BB  $U_{NOM} = G U_{NOM}$ . With this function activated, none of the busbar nominal settings will be considered. Instead, the nominal busbar voltage will be considered equal to nominal generator voltage.

Alternative config. > Busbar nominal settings > Nominal settings 2

| Parameter | Text               | Range          | Default |
|-----------|--------------------|----------------|---------|
| 6061      | Busbar primary U   | 100 to 25000 V | 400 V   |
| 6062      | Busbar secondary U | 100 to 690 V   | 400 V   |
| 6063      | BB nominal U       | 100 to 25000 V | 400 V   |
| 6064      | 4th CT Power       | 10 to 9000 kW  | 230 kW  |

### 4.3.3 Scaling

For applications above 25000 V and below 100 V, adjust the input range to match the actual value of the primary voltage transformer.

Changing the voltage scaling also affects the nominal power scaling.

Basic settings > Measurement setup > Scaling

| Parameter | Text    | Range  | Default        | Notes   |
|-----------|---------|--|----------------|---|
| 9031      | Scaling | 10 to 2500 V<br>100 to 25000 V<br>10 to 160000 V<br>0.4 to 75000 V | 100 to 25000 V | <b>10 to 2500 V:</b> This is recommended for generators up to 150 kVA. The nominal power must be less than 900 kW.<br><b>100 to 25000 V:</b> This is recommended for generators over 150 kVA. |

## NOTICE

### Incorrect configuration is dangerous

Correct all nominal values and the primary VT settings after the scaling (parameter 9030) is changed.

## 4.4 Mode overview

The controller has four running modes and one block mode:

- **AUTO:** The controller operates automatically, and the operator cannot initiate any sequences manually.
- **SEMI-AUTO:** The operator has to initiate all sequences. This can be done using the buttons, Modbus commands or digital inputs. When started, the genset runs at nominal values.
- **Test:** The test sequence starts.
- **Manual:** The digital increase/decrease inputs can be used (if they have been configured) as well as the *Start* and *Stop* buttons. When starting, the genset starts without any subsequent regulation.
- **Block:** The controller cannot initiate any sequences, for example the start sequence. Block mode must be selected when maintenance work is carried out on the genset.

## NOTICE



### Sudden genset stop

If block mode is selected while the genset is running, the genset shuts down.

### 4.4.1 SEMI-AUTO mode

The controller can be operated in SEMI-AUTO mode. This means that the controller will not initiate any sequences automatically, as is the case with the AUTO mode. It will only initiate sequences, if external signals are given.

An external signal may be given in three ways:


1. Buttons on the display are used
2. Digital inputs are used
3. Modbus command

**NOTE** The controller has a limited number of digital inputs. See **Digital inputs** for availability.

### SEMI-AUTO mode commands

| Command  | Description  |
|----------|--|
| Start    | The start sequence is initiated and continues until the genset starts or the maximum number of start attempts is reached.  |
| Stop     | The genset is stopped. Without the running signal, the stop sequence continues to be active in the Extended stop time period. The genset is stopped with cooling down time. The cooling down time is cancelled if the <i>Stop</i> button is activated twice. |
| Close GB | The controller closes the generator breaker if the mains breaker is open.  |
| Open GB  | The controller opens the generator breaker instantly.  |
| Close MB | The controller closes the mains breaker if the generator breaker is open.  |
| Open MB  | The controller opens the mains breaker instantly.  |

## 4.4.2 Test mode

The test mode function is activated by selecting test with the *Shortcut*  button on the display or by activating a digital input.

### Power set points > Test

| Parameter | Text        | Range  | Default     |
|-----------|-------------|--|-------------|
| 7041      | Set point   | 1 to 100   | 1           |
| 7042      | Timer       | 0.0 to 999.0 min   | 0.0 min     |
| 7043      | Return mode | <ul style="list-style-type: none"><li>SEMI-AUTO</li><li>AUTO</li><li>Manual</li><li>No mode change</li></ul> | No change   |
| 7044      | Type        | Simple test<br>Full test   | Simple test |

**NOTE** If the timer is set to 0.0 min., the test sequence is infinite.

If the genset controller is in the stop sequence in test mode and the mode is changed to SEMI-AUTO, the genset continues to run.

Test mode in island operation (genset mode selected to island mode) can only run Simple and Full test.

### Simple test

The simple test will only start the genset and run it at nominal frequency with the generator breaker open. The test will run until the timer expires.


### Load test

This is not possible for stand-alone.

### Full test

The full test starts the genset and runs it at nominal frequency. If possible, the generator breaker closes. When the test timer expires, the generator breaker is opened and the generator is stopped.

## Test sequence flowchart

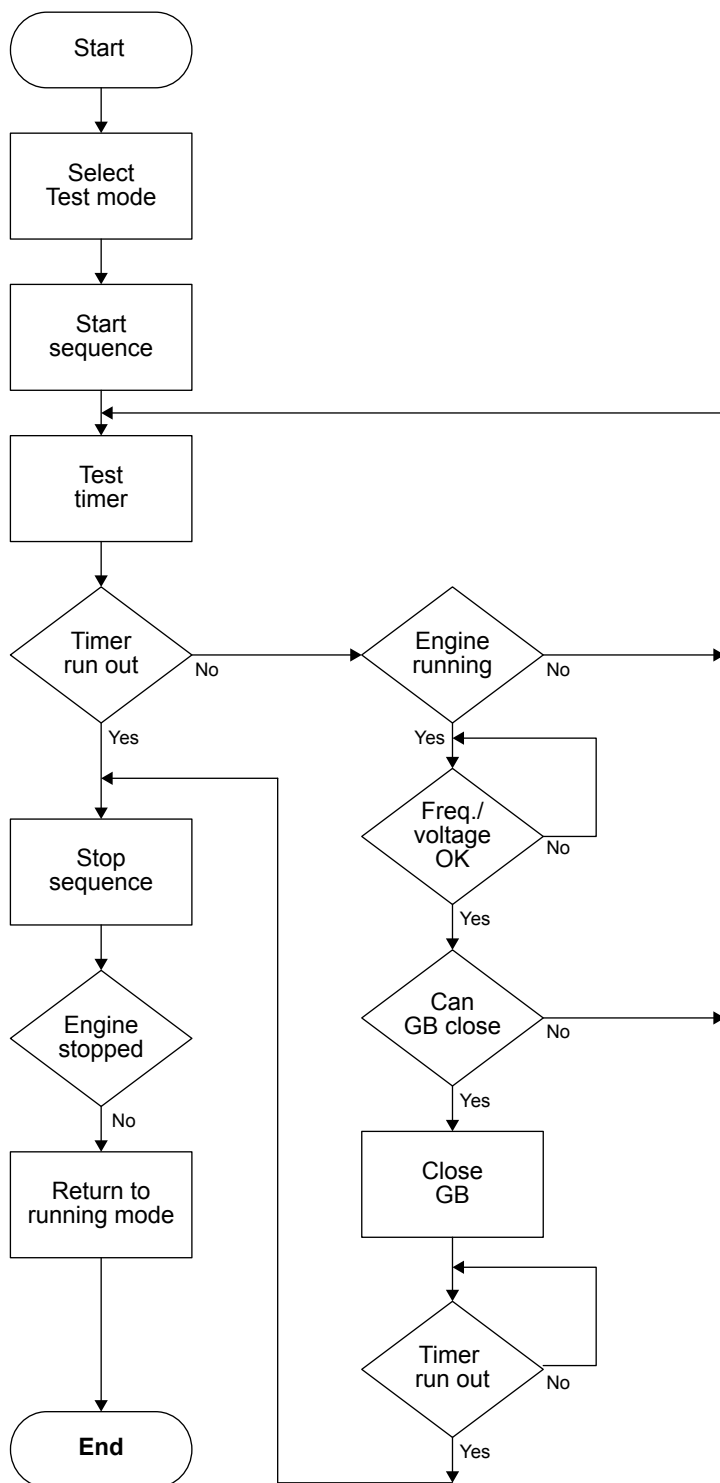

### 4.4.3 Manual mode

When manual mode is selected, the genset can be controlled from the display and with digital inputs.

#### Manual mode commands

| Command | Description   |
|---------|---|
| Start   | The start sequence is initiated and continues until the genset starts or the maximum number of start attempts are reached. Note: There is no automatic regulation.  |
| Stop    | The genset is stopped. Without the running signal, the stop sequence remains active in the extended stop time period. The genset is stopped with cooling down time. |

| Command  | Description   |
|----------|---|
| Close GB | If there is no voltage on the busbar, the controller closes the generator breaker (GB). |
|          | If there is voltage on the busbar, the operator cannot close the GB.                    |
| Open GB  | The controller opens the generator breaker instantly.                                   |
| Close MB | If there is no voltage on the busbar, the controller closes the mains breaker (MB).     |
|          | If there is voltage on the busbar, the operator cannot close the MB.                    |
| Open MB  | The controller opens the mains breaker instantly.                                       |

#### 4.4.4 Block mode

When the block mode is selected, the controller is locked for certain actions. This means that the controller cannot start the genset or do any breaker operations.



To change the running mode from the display, the user will be asked for a password before the change can be made. It is not possible to select Block mode when running feedback is present.

If the digital inputs are used to change the mode, it is important that the input configured to *Block mode* is a constant signal:

- When the signal is ON, the controller is blocked.
- When the signal is OFF, the controller returns to the mode selected before block mode.

If block mode is selected using the display after the digital block input is activated, the controller will stay in block mode after the block input is deactivated. The block mode must now be changed using the display. The block mode can only be changed locally by display or digital input. Alarms are not influenced by block mode selection.

**NOTE** The genset shuts down if block mode is selected while the genset is running.

|  |   |
|--|---|
|  <b>CAUTION</b> |   |
|                 | <p><b>Be careful when starting the genset</b></p> <p>Before the running mode is changed, check that people are clear of the genset and that the genset is ready for operation. If possible, start the genset from the local engine control panel (if installed), rather than local cranking and starting of the genset.</p> |

#### 4.4.5 Not in AUTO mode

This function activates an alarm if the system is not in AUTO mode.

##### Functions > Not in Auto

| Parameter | Text       | Range           | Default |
|-----------|------------|-----------------|---------|
| 6541      | Timer      | 10.0 to 900.0 s | 300.0 s |
| 6544      | Enable     | OFF<br>ON       | OFF     |
| 6545      | Fail class | Fail classes    | Warning |

## 4.5 Breakers

### 4.5.1 Breaker types

There are five breaker type settings. Set the breaker type with the utility software under *Application configuration*.



#### More information

See **Utility software** for how to set up applications.

#### Continuous NE and Continuous ND

*Continuous NE* is a normally energised signal, and *Continuous ND* is a normally de-energised signal. These settings are usually used in combination with a contactor.

The controller only uses the *Close breaker* output:

- Closed: This closes the contactor.
- Open: This opens the contactor.

The *Open breaker* output can be configured for another function.

#### Pulse

This setting is usually used in combination with a circuit breaker. The controller uses these outputs:

- To close the circuit breaker, the *Close breaker* output is activated (until there is breaker close feedback).
- To open the circuit breaker, the *Open breaker* output is activated (until there is breaker open feedback).

#### External/ATS no control

This setting is used to show the position of the breaker, but the breaker is not controlled by the controller.

#### Compact

This setting is usually used in combination with a direct controlled motor driven breaker. The controller uses these outputs:

- The *Close breaker* output closes briefly to close the compact breaker.
- The *Open breaker* output closes to open the compact breaker. The output stays closed long enough to recharge the breaker.

If the compact breaker is tripped externally, it is recharged automatically before next closing.

### 4.5.2 Breaker spring load time


To avoid breaker close failures in situations where the breaker close command is given before the breaker spring has been loaded, the spring load time can be adjusted.

#### Principle

You could have a close failure if:

1. A genset is in AUTO mode, the Auto start/stop input is active, the genset is running, and the GB is closed.
2. The Auto start/stop input is deactivated, the stop sequence is executed, and the GB is opened.
3. If the Auto start/stop input is activated again before the stop sequence is finished, the controller activates a GB close failure, since the GB needs time to load the spring before it is ready to close.

The diagram shows an example where a single genset in island mode is controlled by the Auto start/stop input.

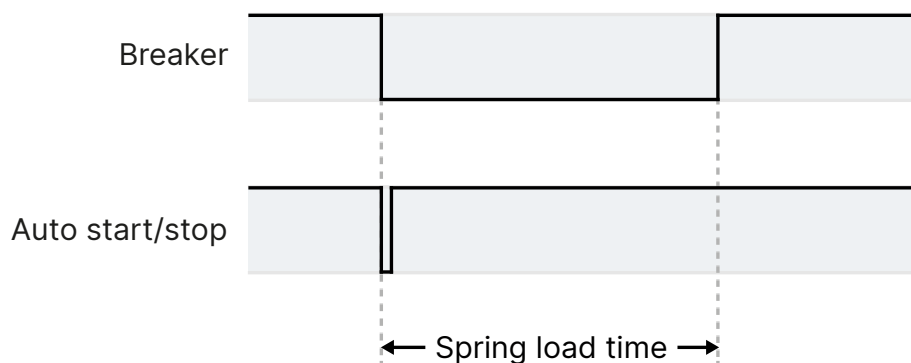

- When the Auto start/stop input deactivates, the GB opens.
- The Auto start/stop is re-activated immediately after the GB has opened, for example by the operator using a switch in the switchboard.
- The controller waits a while before sending the close signal again, because the spring load time must expire.

### Ensuring time to reload

If the breaker needs time to reload the spring after it has opened, the controller can take this delay into account. This can be controlled through timers in the controller or through digital feedbacks from the breaker, depending on the breaker type:

1. **Timer-controlled.** A load time set point for the GB and MB control for breakers with no feedback indicating that the spring is loaded. After the breaker has been opened it will not be allowed to close again before the delay has expired. When the timer is running, the remaining time is shown in the display.
2. **Digital input.** Two configurable inputs are used for feedbacks from the breakers: One for GB spring loaded and one for MB spring loaded. After the breaker has been opened it cannot close before the configured inputs are active.

If both a timer and breaker feedbacks are used, both requirements must be met before the breaker is allowed to close.

### 4.5.3 Breaker position failure

The breaker position failure alarm is activated if a controller has no breaker position feedback, or if both feedbacks from the breaker are high.

When a controller has a breaker position failure, it informs the other controllers in the application. The system then blocks the section with the breaker position failure. Sections that are not affected by the breaker position failure can continue to operate.

You can assign a fail class to try to trip the faulty breaker when the controller discovers a breaker position failure.

## 4.6 Alarms

### 4.6.1 Fail classes

All activated alarms must have a fail class. The fail classes define the category of the alarms and the subsequent alarm action.

The fail class can be selected for each alarm function, either from the controller or using the utility software.

To change the fail class using the utility software, open the alarm in the parameter list, then select the fail class from the list.

| Fail class/Action | Alarm horn relay | Alarm display | Trip GB | Trip MB | Cooling down genset | Stop genset |
|-------------------|------------------|---------------|---------|---------|---------------------|-------------|
| Block             | ●                | ●             |         |         |                     |             |
| Warning           | ●                | ●             |         |         |                     |             |

| Fail class/Action | Alarm horn relay | Alarm display | Trip GB | Trip MB | Cooling down genset | Stop genset |
|-------------------|------------------|---------------|---------|---------|---------------------|-------------|
| Trip GB           | ●                | ●             | ●       |         |                     |             |
| Trip + stop       | ●                | ●             | ●       |         | ●                   | ●           |
| Shutdown          | ●                | ●             | ●       |         |                     | ●           |
| Trip MB           | ●                | ●             |         | ●       |                     |             |
| Safety stop       | ●                | ●             |         |         | ●                   | ●           |
| Trip MB/GB        | ●                | ●             | (●)     | ●       |                     |             |
| Controlled stop   | ●                | ●             | ●       |         | ●                   | ●           |

The table shows the action of the fail classes. For example, if an alarm is configured with the *Shutdown* fail class, the following occurs:

- The alarm horn relay activates.
- The alarm is displayed on the alarm info screen.
- The generator breaker opens instantly.
- The genset is stopped instantly.
- The genset cannot be started from the controller (see next table).

In stand-alone applications, *Safety stop* has no effect.

*Trip MB/GB* only trips the generator breaker if the genset controller controls a mains breaker. This means that a genset controller can only trip a mains breaker in a stand-alone application that contains a mains breaker. Otherwise, the fail class always trips the generator breaker.

#### When the engine is stopped

| Fail class/Action | Block engine start | Block MB sequence | Block GB sequence |
|-------------------|--------------------|-------------------|-------------------|
| Block             | ●                  |                   | ●                 |
| Warning           |                    |                   |                   |
| Trip GB           | ●                  |                   | ●                 |
| Trip + stop       | ●                  |                   | ●                 |
| Shutdown          | ●                  |                   | ●                 |
| Trip MB           |                    | ●                 |                   |
| Trip MB/GB*       | ●                  | ●                 | (●)               |
| Controlled stop   | ●                  |                   | ●                 |

**NOTE** \*The fail class *Trip MB/GB* does not block *Start* and *Block GB* sequences if the genset controller is in a stand-alone application with a mains breaker.

### 4.6.2 Inhibits

You can use the utility software to configure inhibits for each alarm. Open the alarm in the parameter list, then select the inhibit(s) from the list.

Only alarms can be inhibited. Function inputs such as running feedback, remote start or access lock are never inhibited.

| Function                 | Notes  |
|--------------------------|--|
| Inhibit 1                | M-Logic outputs: Conditions are programmed in M-Logic. |
| Inhibit 2                |  |
| Inhibit 3                |  |
| GB ON                    | The generator breaker is closed.                       |
| GB OFF                   | The generator breaker is open.                         |
| Run status               | Running detected and the timer has expired*.           |
| Not run status           | Running not detected or the timer has not expired*.    |
| Generator voltage > 30 % | Generator voltage is above 30 % of nominal.            |
| Generator voltage < 30 % | Generator voltage is below 30 % of nominal.            |
| MB ON                    | The mains breaker is closed.                           |
| MB OFF                   | The mains breaker is open.                             |
| Shutdown override        | The shutdown override input is activated.              |

**NOTE** \* The run status timer is configured under `Functions > Run status > Timer`. With binary running feedback the timer is not used.

### 4.6.3 Alarm list monitoring

Alarm list monitoring allows you to view all active alarms using Modbus, which is useful for remote monitoring and touch screen devices, for example AGI and SCADA/BMS systems. The alarms are in Modbus addresses 28000 to 28099 and these are not listed in the *Input register (04)*.

The Modbus address for an active alarm corresponds to the address value in the utility software. For example, Modbus address 103 is equal to parameter 2180 GB Pos fail as the address in the utility for this parameter is 103.

| <div> All groups Protection Synchronisation Regulation Digital In Analogue In Outputs General Mains C </div> |         |                    |         |       |      |       |  |
|--|---------|--------------------|---------|-------|------|-------|--|
| Drag a column header here to group by that column  |         |                    |         |       |      |       |  |
| Category   | Channel | Text               | Address | Value | Unit | Timer |  |
| Synchronisation  | 2112    | Blackout / f>      | 94      | 3     | Hz   |       |  |
| Synchronisation  | 2114    | Blackout / U>      | 95      | 5     | %    |       |  |
| Synchronisation  | 2150    | Phase seq error DG | 100     | N/A   |      |       |  |
| Synchronisation  | 2160    | GB Open fail       | 101     | N/A   |      |       |  |
| Synchronisation  | 2170    | GB Close fail      | 102     | N/A   |      |       |  |
| Synchronisation  | 2180    | GB Pos fail        | 103     | N/A   |      |       |  |

## 4.7 M-Logic

The main purpose of M-Logic is to give the operator/designer more flexibility.

M-Logic is used to execute different commands at predefined conditions. M-Logic is not a PLC but substitutes one, if only very simple commands are needed.

M-Logic is a simple tool based on logic events. One or more input conditions are defined, and at the activation of those inputs, the defined output will occur. A great variety of inputs can be selected, such as digital inputs, alarm conditions and running conditions. A variety of the outputs can also be selected, such as relay outputs, change of modes.

You can configure M-Logic in the utility software.

4.7.1 General shortcuts

You can configure your own shortcuts with M-Logic in the utility software. You can see the configured shortcuts when you push the *Shortcut* button and select *General shortcuts*. If you have not configured a shortcut, then the *General shortcuts* menu is empty.

For a pulse shortcut, the command is sent each time you select the shortcut and press OK in the display menu.

For a switch shortcut, the switch is toggled (on/off) each time you select the shortcut.

Use the *Translations* interface to rename the shortcut.

Example of shortcut pulse

Logic 1

Shortcut to reset horn

Event A

NOT

☐

Shortcut - Pulse 1: Shortcut - Pulse

X

Event B

☐

Not used

X

Event C

☐

Not used

X

Operator

OR

OR

Delay (sec.)

0

Output

Reset horn: Command

X

Enable this rule

☒

Rename SC Pulse 1 to Reset horn.

Example of shortcut switch

Logic 2

Shortcut to select parameter set 1

Event A

NOT

☐

Shortcut - Switch 2: Shortcut - Switch

X

Event B

☐

Not used

X

Event C

☐

Not used

X

Operator

OR

OR

Delay (sec.)

0

Output

Set parameter 1: Command Parameter set

X

Enable this rule

☒

Logic 3

Shortcut to select parameter set 2

Event A

NOT

☒

Shortcut - Switch 2: Shortcut - Switch

X

Event B

☐

Not used

X

Event C

☐

Not used

X

Operator

OR

OR

Delay (sec.)

0

Output

Set parameter 2: Command Parameter set

X


Enable this rule

☒

Rename SC Switch 2 on to Use parameter set 1. Rename SC Switch 2 off to Use parameter set 2.


4.7.2 Oneshots

| Description        | Notes   |
|--------------------|---|
| Oneshot set [1-16] | The oneshot is activated for a short time (about 100 ms) when the logic is true. If the logic remains true, the oneshot is not activated again. When the logic is false, the function is reset. |

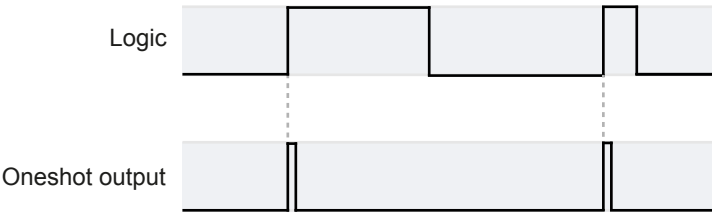

4.7.3 Virtual toggle events

Virtual toggle events are used to expand the number of events in a logic sequence. For example, the output of Logic 1 can be used to continue the sequence in Logic 2.

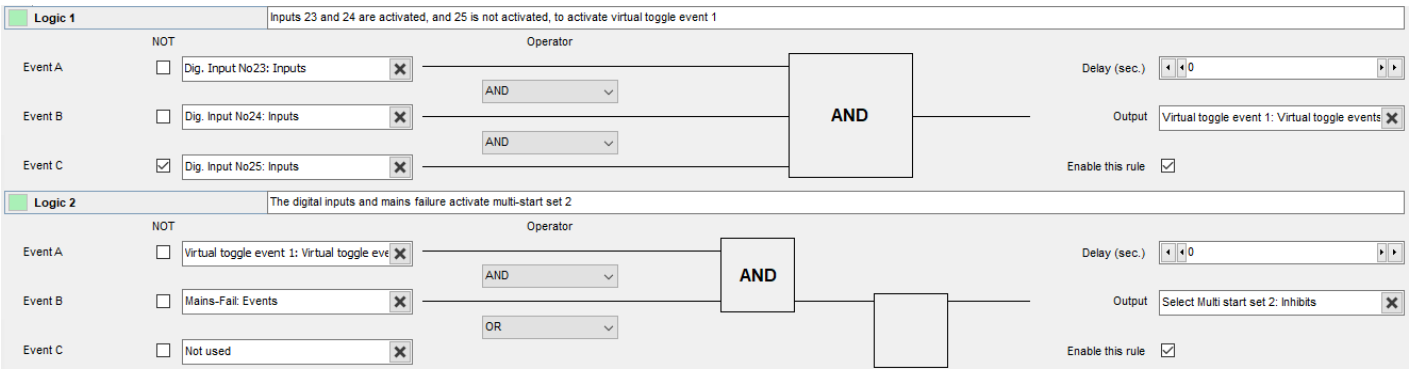

- The *Logic 1* output is set to *Virtual toggle event 1*.
- *Event A* in *Logic 2* is *Virtual toggle event 1*.

Up to five events that can be used in this logic sequence (A + B + C in Logic 1 and B + C in Logic 2).

Virtual toggle events

| Description                  | Notes   |
|------------------------------|---|
| Virtual toggle event [1-96]* | Virtual toggle events 1 to 96 can be activated by Modbus. They can also be used in multiple lines of logic to increase the number of events possible in one sequence. |

**NOTE** \* Previously *Virtual event* [1-96].

4.7.4 Flip flop function

The flip flop function makes it easy for a pulse input to latch an output, for example a relay.

The Event selects a flip flop output [1-16], and the Output selects the output function:

- Flip flop set [1-16] = Change the flip flop output state to High.
- Flip flop reset [1-16] = Change the flip flop output state to Low.
- Flip flop toggle [1-16] = Shift the flip flop output state from Low to High or from High to Low.

Example

Logic 1

Item description (optional and saved in project file only)

NOT

Event A

☐

Flip flop output 1: Flip flops

✕

Operator

OR

▼

Event B

☐

Not used

✕

Event C

☐

Not used

✕

Delay (sec.)

◀

0

▶

Output

Relay 8: Relays

✕

Enable this rule

☒

Logic 2

Item description (optional and saved in project file only)

NOT

Event A

☐

Dig. Input No23: Inputs

✕

Operator

OR

▼

Event B

☐

Not used

✕

Event C

☐

Not used

✕

Delay (sec.)

◀

0

▶

Output

Flip flop set 1: Flip flops

✕

Enable this rule

☒

Logic 3

Item description (optional and saved in project file only)

NOT

Event A

☐

Dig. Input No24: Inputs

✕

Operator

OR

▼

Event B

☐

Not used

✕

Event C

☐

Not used

✕

Delay (sec.)

◀

0

▶

Output

Flip flop reset 1: Flip flops

✕

Enable this rule

☒

Logic 4

Item description (optional and saved in project file only)

NOT

Event A

☐

Dig. Input No25: Inputs

✕

Operator

OR

▼

Event B

☐

Not used

✕

Event C

☐

Not used

✕

Delay (sec.)

◀

0

▶

Output

Flip flop toggle 1: Flip flops

✕

Enable this rule

☒

The example shows how flip flop set 1 could be configured to set relay 8:

- Logic 1: Flip flop output 1 is selected to set the relay output.
- Logic 2: Digital input 23 is used to trigger flip flop set 1 and thus sets the relay output active.
- Logic 3: Digital input 24 is used to deactivate the relay output by triggering flip flop reset 1.
- Logic 4: Digital input 25 is used to toggle the flip flop output state.
- Relay 8 must be set to *M-Logic / Limit relay*.

If reset and set are active at the same time, the flip flop will prioritise the reset command. The set or reset function may not be active when the toggle function is used.

The flip flops are also accessible from Modbus.

4.7.5 Virtual switch events


| Description                 | Notes   |
|-----------------------------|---|
| Virtual switch event [1-32] | Virtual switch events 1 to 32 can be activated by Modbus. They can also be used in multiple lines of logic to increase the number of events possible in one sequence. |

4.7.6 PLC mode control

The *PLC mode control* function allows you to remotely control an AGC 150 in AUTO mode using a PLC. When the PLC mode is activated with M-Logic commands, you can control an AGC 150 using a PLC, for example with digital inputs.

Example: How to configure and use PLC mode control


1. Use the application configuration in the utility software to set up an application, for example a generator and mains application.

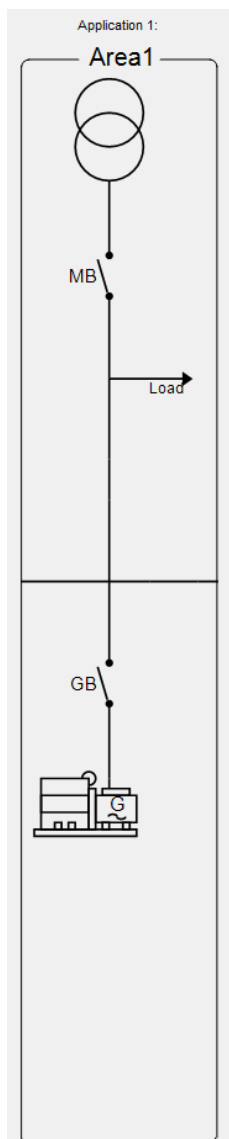




2. Go to the *M-Logic & AOP* tab.
3. Configure these two events in M-Logic:

| Logic 1 |   | Item description (optional and saved in project file only) |  |
|---------|---|--|--|
| Event A | <input type="checkbox"/> TRUE: Logic                            | Operator   | Delay (sec.) 0                                       |
| Event B | <input type="checkbox"/> Not used                               | OR   | Output Enable local/remote control: PLC mode con     |
| Event C | <input type="checkbox"/> Not used                               | OR   | Enable this rule <input checked="" type="checkbox"/> |
| Logic 2 |   | Item description (optional and saved in project file only) |  |
| Event A | <input type="checkbox"/> Local (F) / Remote (T): PLC mode contr | Operator   | Delay (sec.) 0                                       |
| Event B | <input type="checkbox"/> Not used                               | OR   | Output Not used                                      |
| Event C | <input type="checkbox"/> Not used                               | OR   | Enable this rule <input checked="" type="checkbox"/> |

This allows a PLC to remotely control an AGC 150 in AUTO mode.

4. Click the  icon to write the M-Logic settings to the controller.
5. Go to the *I/O & Hardware* tab.
6. Configure digital inputs to control the AGC 150, for example:

| DI 39 - 50   MI 20   MI 21   MI 22   MI 23   DO 5 - 18   DC meas AVG   AC meas AVG   AC config |               |              |                     |       |            |          |          |                  |          |             |                |              |              |
|--|---------------|--------------|---------------------|-------|------------|----------|----------|------------------|----------|-------------|----------------|--------------|--------------|
| Preconfigured function   | Alarm         | Display text | Alarm when input is | Timer | Fail class | Output A | Output B | Auto acknowledge | Inhibits | Password    | Modbus address | Value actual | Timer actual |
| Digital Input 39   | Remote Start  | Enable       | Digital input 39    | High  | 10 s       | Warning  | Not used | Not used         | OFF      | Inhibits... | Service        | 185          | 0            |
| Digital Input 40   | Remote MB OFF | Enable       | Digital input 40    | High  | 10 s       | Warning  | Not used | Not used         | OFF      | Inhibits... | Service        | 186          | 0            |
| Digital Input 41   | Remote Stop   | Enable       | Digital input 41    | High  | 10 s       | Warning  | Not used | Not used         | OFF      | Inhibits... | Service        | 187          | 0            |

- Click the *write parameters to the device*  icon to write the settings to the controller.
- To emulate the digital inputs, go to the *Application supervision* tab and click the *Emulation stimuli*  icon.
- Select the digital input (s) you want to activate, and click the  icon to write the settings to the controller.

Plant emulation: Breaker and engine cmd. active

DG

Set emulation settings for DG (AGC 150 DG)

Load

Mains

Fuel

DG

GB

MB

Dig

Ain

Ext

☐ Input 39
Remote start

☒ Input 40
Remote MB OFF

☐ Input 41
Remote stop

☐ Input 42
Digital input 42

☐ Input 43
Digital input 43

☐ Input 44
Digital input 44

☐ Input 45
Digital input 45

☐ Input 46
Digital input 46

☐ Input 47
MB pos feedback ON

Write to DG

Close

### 4.7.7 M-Logic event counters

| Description                       | Notes  |
|-----------------------------------|--|
| M-logic event counter limit [1-8] | The event counter has reached the limit selected in the <i>Counters &gt; M-logic event counter</i> window.           |
| M-logic event reset counter [1-8] | The event counter has been reset. The reset conditions are in the <i>Counters &gt; M-logic event counter</i> window. |

### 4.7.8 Display keypress events

Use the display keypress events to activate an output with the display buttons. For example, you can configure the *UP* button to acknowledge all alarms when you push it.

Logic 2

Item description (optional and saved in project file only)

NOT

Event A

☐ Up: Display keypress events

Event B

☐ Not used

Event C

☐ Not used

Operator

OR

OR

Delay (sec.)

0

Output

Ack. all alarms: Command

Enable this rule

☒

The function can also be used to detect when a button is pushed.

## 4.8 Timers and counters

### 4.8.1 Command timers

Command timers are used to execute a command at a specific time. For example, to start and stop the genset automatically at specific times on certain weekdays.


Up to four command timers can be configured with M-Logic. Each command timer can be set for the following time periods:

- Individual days (MO, TU, WE, TH, FR, SA, SU)
- MO, TU, WE, TH
- MO, TU, WE, TH, FR
- MO, TU, WE, TH, FR, SA, SU
- SA, SU

To start in AUTO mode, the Auto start/stop command can be programmed in M-Logic or in the input settings. The time-dependent commands are flags that are activated when the command timer is in the active period.

### 4.8.2 Pulse input counters

Two configurable digital inputs can be used for counter inputs. The two counters can for example be used for fuel consumption or heat flow. The two digital inputs can only be configured for pulse inputs using M-Logic, as shown in the example below.

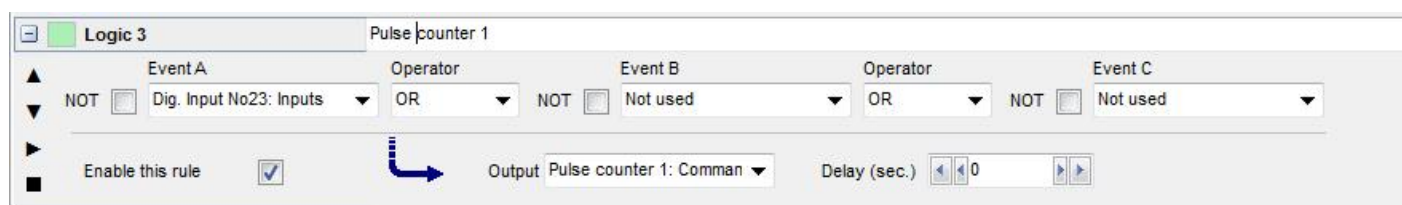

#### Functions > Pulse counters

| Parameter    | Text         | Range  | Default     |
|--------------|--------------|--|-------------|
| 6851 or 6861 | Value        | 0 to 1000  | 1           |
| 6852 or 6862 | Unit type    | Unit/pulse<br>Pulse/unit                                     | Unit/pulse  |
| 6853 or 6863 | Decimal type | No decimals<br>One decimal<br>Two decimals<br>Three decimals | No decimals |


### 4.8.3 Diagnostics timer

Diagnostics mode is activated when the diagnostics timer expires. Use diagnostics to read ECU data without starting the engine. To configure the timer and enable diagnostics, go to *Parameters* in the utility software, and select parameter 6701.

## 4.9 Interfaces

### 4.9.1 Additional operator panel, AOP-2

The AOP-2 is an additional operator panel that can be connected to the controller using a CAN bus communication port. It can be used as an interface to the controller for indication of status and alarms together, and with buttons for, for example, alarm acknowledge and mode selection.

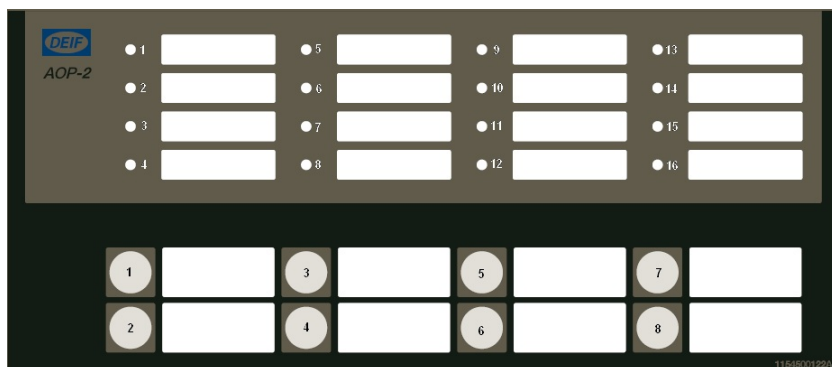

The configurable LEDs are named 1 to 16, and the buttons are named 1 to 8.

## CAN Node ID configuration

The CAN Node ID for the AOP-2 can be set to 1-9:

1. Press buttons 7 and 8 simultaneously to activate the CAN ID change menu. The LED for the present CAN ID number is ON, and LED 16 is flashing.
2. Use button 7 (increase) and button 8 (decrease) to change the CAN ID according to the table below.
3. Press button 6 to save the CAN ID and return to normal operation.

| CAN ID | Indication of CAN ID selection               |
|--------|--|
| 0      | LED 16 flashes (CAN bus OFF)                 |
| 1      | LED 1 ON.<br>LED 16 flashes (default value). |
| 2      | LED 2 ON.<br>LED 16 flashes.                 |
| 3      | LED 3 ON.<br>LED 16 flashes.                 |
| 4      | LED 4 ON.<br>LED 16 flashes.                 |
| 5      | LED 5 ON.<br>LED 16 flashes.                 |

## Programming

Use the utility software to program the AOP-2. See the **Help** in the utility software.

### 4.9.2 Access lock

With the access lock on, the operator cannot change controller parameters or running modes. The input to be used for the access lock function is defined in the utility software.

Access lock is typically activated from a key switch installed behind the door of the switchboard cabinet. As soon as access lock is activated, changes from the display cannot be made.

Access lock only locks the display and does not lock any AOP or digital input. AOP can be locked by using M-Logic. It is still possible to read all parameters, timers and the state of inputs in the service menu.

You can read alarms, but not acknowledge them when access lock is activated. Nothing can be changed from the display.

This function is ideal for rental or critical equipment. The operator cannot change anything. If there is an AOP-2, the operator is still able to change up to 8 different predefined things.

**NOTE** The *Stop* button is not active in SEMI-AUTO mode when the access lock is activated. For safety reasons, an emergency stop switch is recommended.

### 4.9.3 Language selection

The controller can show several languages. The default master language is English, which cannot be changed. Different languages can be configured with the utility software.


**Basic settings > Controller settings > Language**


| Parameter | Text               | Range                         | Default |
|-----------|--------------------|-------------------------------|---------|
| 6081      | Language selection | English<br>Language [1 to 11] | English |


### 4.9.4 Translations


You can translate and customise the text in the controller with the utility software.

#### Translate the text in the controller


1. Go to the *Translations* tab in the left toolbar.
2. Click the *Import translations from file*  icon.
3. From the pop-up window, select the language file you want to import.
4. Select the language to import (lang1), and select the column to import the translations to.

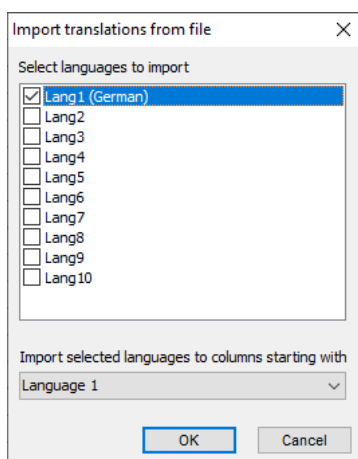


5. Once the translations are imported, you might get a warning stating that *Some translations were not imported*. Click *OK*.
6. To write the imported translations to the controller, click the *Write to controller*  icon.
7. In the pop-up window, select the language you want to write to the controller.

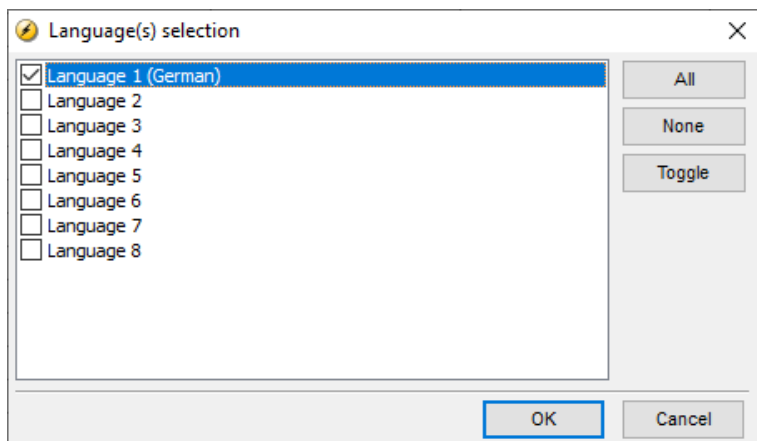


8. Click **OK**.
9. Select **Yes** to confirm you want to continue the writing procedure.

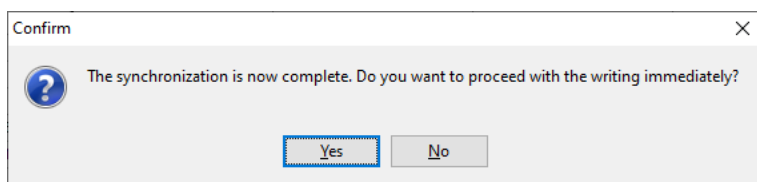

10. In the pop-up window, select the language you want to activate and click **OK**.

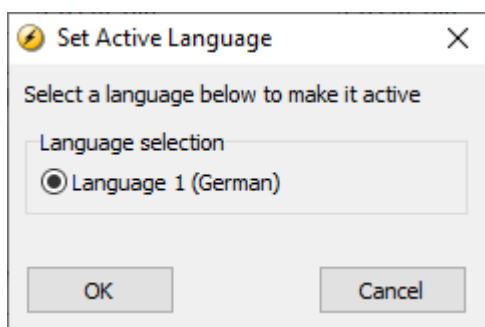

11. Click the **OK** button on the information message and if necessary, restart the utility software.

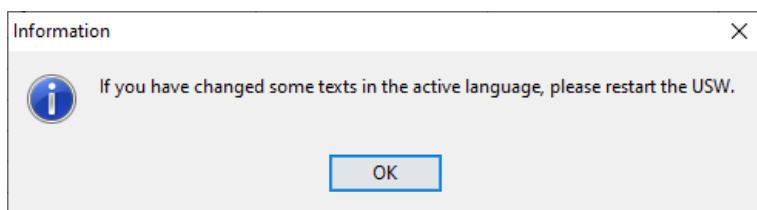


12. The text in the controller is now updated.


## Customise the translations

To customise the translations, click on the cell with the text you want to edit. You can now edit the text. The text is automatically saved when you have finished editing.

You can also double-click on the phrase or word you want to edit in the *Master language* column. In the pop-up window, you can edit that particular phrase for all the language columns.

## Change the placement of the translations

1. Select the *Edit language sequence*  icon.

2. From the list on the left, select the language you want as the first in the sequence (after the master language), and click the  button to move the selected language.
3. Repeat step 2 for the remaining languages in the current sequence.
4. To change the position of a language in the new sequence, click on the language you want to move, and use the *Up* and *Down* buttons to move the language.
5. Click *OK* when you have finished.

**NOTE** You cannot edit the Master language.

## 5. Engine functions

### 5.1 Engine sequences

The engine START and STOP sequences are started automatically if:


- AUTO mode is selected.
- SEMI-AUTO mode: The command is selected.
  - Only the selected sequence is started. For example, when the *START* button is pressed, the engine starts.

### 5.2 Engine start functions

#### 5.2.1 Start sequence

Normal start prepare or extended start prepare are the possible start sequences for the engine. In both cases, the running coil is activated 1 s before the start relay (starter).

##### Normal start prepare sequence

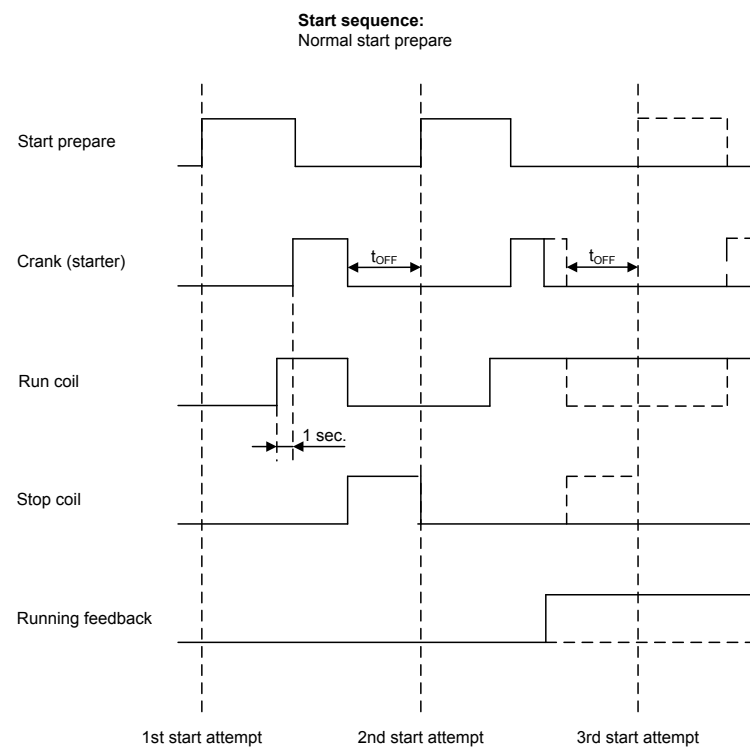

The run coil opens between the start attempts, because the run coil type is set to pulse. When the engine receives running feedback, the run coil is closed until the stop sequence is started. If the run coil type is set to continuous, the run coil is closed between the start attempts until start failure, or the stop sequence opens it.

##### Engine > Start sequence > Before crank > Run coil

| Parameter | Text           | Range               | Default |
|-----------|----------------|---------------------|---------|
| 6151      | Run coil timer | 0.0 to 600.0 s      | 1.0 s   |
| 6152      | Run coil type  | Pulse<br>Continuous | Pulse   |

## Engine > Start sequence > Before crank > Start prepare

| Parameter | Text          | Range          | Default |
|-----------|---------------|----------------|---------|
| 6181      | Start prepare | 0.0 to 600.0 s | 5.0 s   |
| 6182      | Ext. prepare  | 0.0 to 600.0 s | 0.0 s   |

### Double starter

In some emergency installations, the prime mover is equipped with an extra start motor. Dependent on the configuration, the double starter function can toggle between the two starters or try several attempts with the standard starter before switching to the *double starter*. The function is set up in parameters 6191 and 6192, and a relay for cranking with the alternative starter is chosen in the *I/O & Hardware setup*.

|           |                  |                         |   |            |      |     |
|-----------|------------------|-------------------------|---|------------|------|-----|
| Output 13 | Double starter ▼ | M-Logic / Limit relay ▼ | 5 | Customer ▼ | 5060 | 325 |
|-----------|------------------|-------------------------|---|------------|------|-----|

## Engine > Start sequence > Crank > Start attempts

| Parameter | Text                    | Range    | Default |
|-----------|-------------------------|----------|---------|
| 6191      | Single starter attempts | 1 to 100 | 3       |
| 6192      | Double starter attempts | 0 to 10  | 0       |


Choose a value that is more than zero in parameter 6192. This value determines the amount of attempts on each starter before switching to the next. The standard starter has first priority. When the maximum allowed number of attempts is reached, the start attempts stop and the alarm Start failure appears. Select the maximum number of attempts with parameter 6191.

- A value of 1 in parameter 6192 results in a toggle function with 1 attempt on each starter between toggling.
- A value of 2 in parameter 6192 results in a toggle function with 2 attempt on each starter between toggling.

## Engine > Start sequence > Crank > Crank timers

| Parameter | Text           | Range          | Default |
|-----------|----------------|----------------|---------|
| 6183      | Start ON time  | 1.0 to 600.0 s | 5.0 s   |
| 6184      | Start OFF time | 1.0 to 99.0 s  | 5.0 s   |


## Extended start prepare sequence

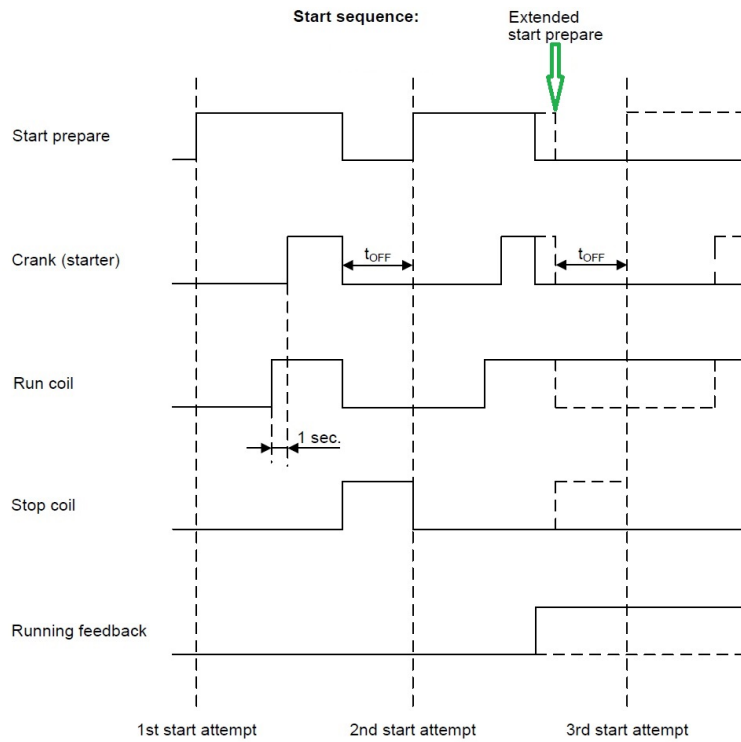

You can activate the run coil 0 to 600 s before crank (starter) is executed. In this example, the timer is set to 1.0 s.

The extended start prepare function keeps the start prepare relay closed until remove starter or running detection is reached. This function is helpful if booster pumps for start fuel are used, because they are kept on until the engine is running.

## Start sequence flowchart

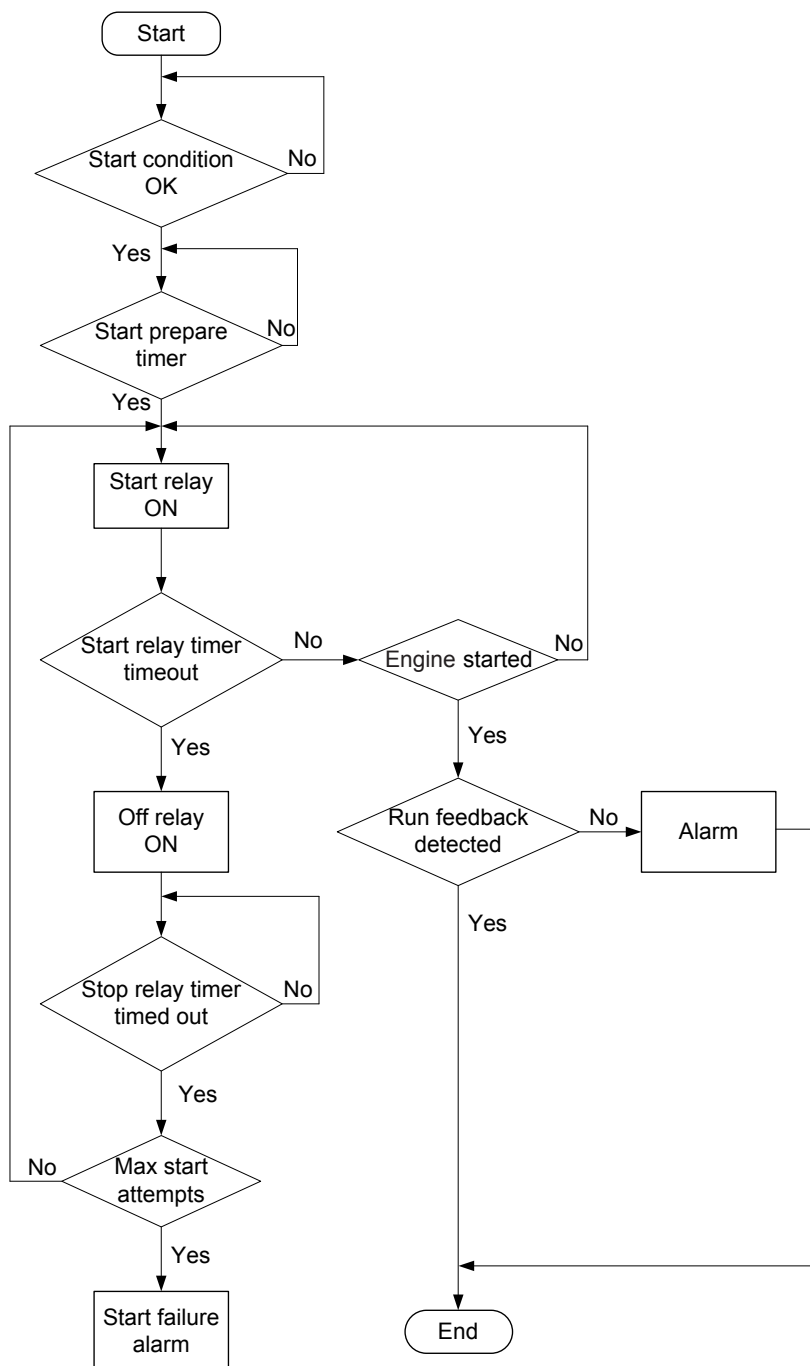

### 5.2.2 Start sequence conditions

The start sequence initiation is controlled by these multi-input conditions:

- RMI oil pressure
- RMI water temperature
- RMI fuel level
- RMI Custom
- Binary input

This means that if, for example, the oil pressure is not primed to the sufficient value, the crank relay will not engage the starter motor.

You can only configure these multi-input conditions with the utility software.




## More information

See [Inputs and outputs](#) for how to configure the inputs.

If the binary start threshold is used, the input is chosen from the I/O list in the utility software.

The diagram below shows an example where the RMI oil pressure signal builds up slowly and starting is initiated at the end of the third start attempt.

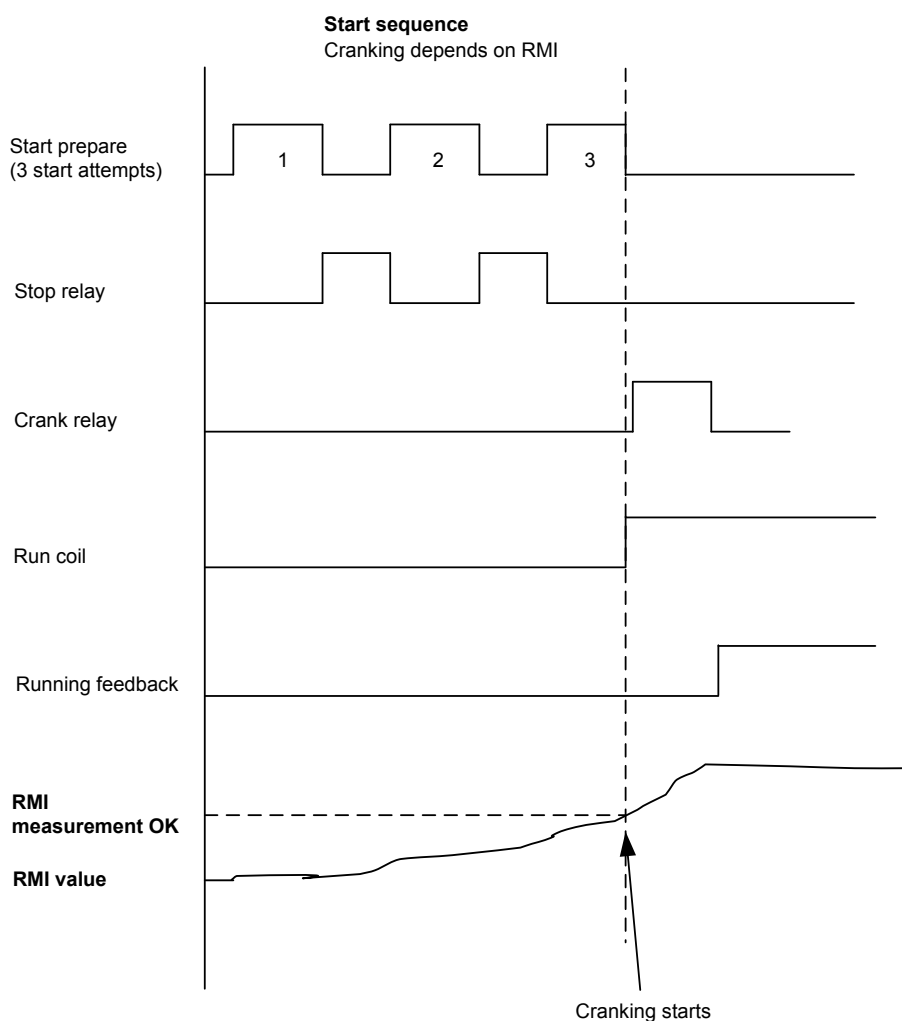


The start is initiated as soon as the start threshold limit is reached. By default, the controller waits until the start prepare timer is over and the start threshold conditions are correct before the crank relay/start is initiated. You can configure this in parameter 6185. You can change the start prepare type to interrupt start prepare, which means the controller is permitted to interrupt the start prepare and initiate the start when the start threshold conditions are correct.

### Engine > Start sequence > Before crank > Start threshold

| Parameter | Text                       | Range  | Default        |
|-----------|----------------------------|--|----------------|
| 6185      | Start threshold input type | Multi-input 20<br>Multi-input 21<br>Multi-input 22<br>Multi-input 23 | Multi-input 20 |
| 6186      | Start threshold set point  | 0.0 to 300.0   | 0.0            |

### 5.2.3 Start-up overview

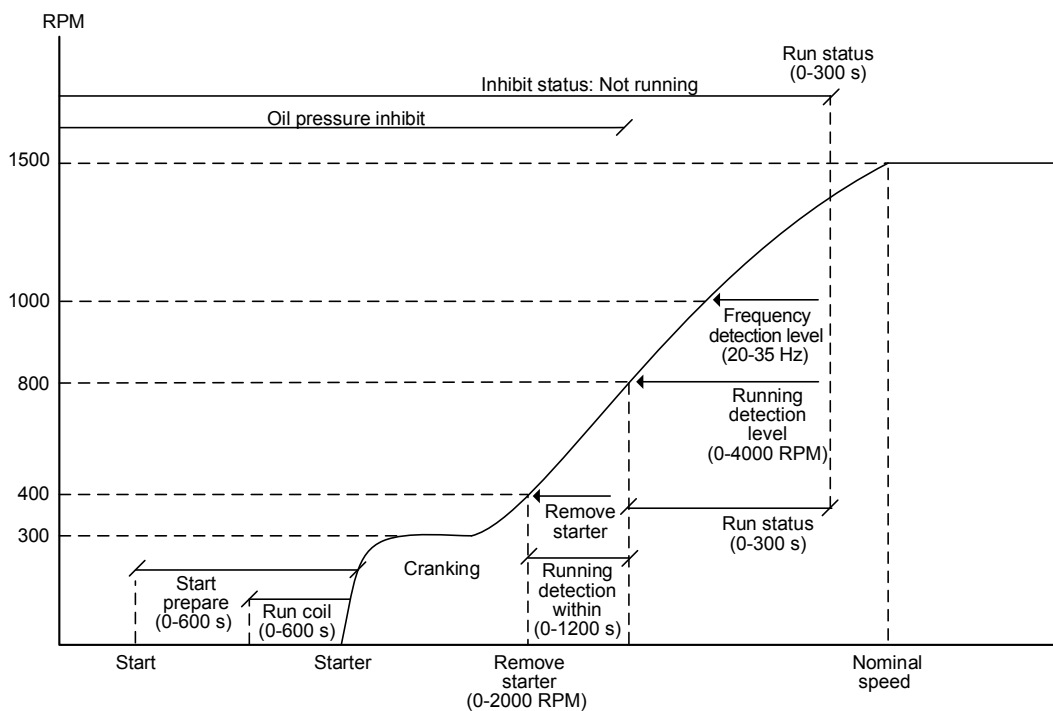

#### Set points related to the start sequence


| Parameter | Text                        | Description  |
|-----------|-----------------------------|--|
| 6181      | Start prepare               | Start prepare is used for start preparation, for example pre-lubrication or pre-glowing. The start prepare relay is activated when the start sequence is initiated, and deactivated when the start relay is activated. If the timer is set to 0.0 s, the start prepare function is deactivated.  |
| 6182      | Extended prepare            | Extended prepare activates the <i>Start prepare</i> relay when the start sequence is initiated. The relay is activated until the specified time has expired. If the extended prepare time exceeds the <i>Start ON time</i> , the <i>Start prepare</i> relay is deactivated when the start relay deactivates. If the timer is set to 0.0 s, the extended prepare function is deactivated.   |
| 6183      | Start ON time               | The starter is activated for this period when cranking.  |
| 6184      | Start OFF time              | The pause between two start attempts.  |
| 6151      | Run coil timer              | The timer for the run coil is a set point for how long the run coil will be activated before cranking the engine. This gives the ECU time to start up before cranking.   |
| 6174      | Remove starter              | The starter is removed, when the RPM set point is reached. This function is only active if the running detection type is configured as either MPU or EIC RPM. For MPU, if the configured number of teeth is 0, the controller calculates the genset speed from the frequency.  |
| 6173      | Running detection RPM level | The set point defines the running detection level in RPM (only when the running detection type is configured as either MPU or EIC RPM).  |
| 6351      | Run detection               | This timer is set to make sure that the engine goes from the RPM level, Remove starter and Running detection level (only when the running detection type is configured as either MPU or EIC RPM). If other running detection types than MPU or EIC RPM are used, the starter is ON until the frequency detection level is reached. If the timer is exceeded, and the level is not reached, the start sequence is repeated, using a start attempt. If all start attempts are used, the <i>Start failure</i> alarm is activated. |
| 6160      | Run status                  | The timer starts when the running detection/frequency detection level is reached.  |

| Parameter | Text | Description  |
|-----------|------|--|
|           |      | When the timer runs out, the <i>Not running</i> inhibit is deactivated, and the running alarms and failures are enabled. |


### Alarms related to the start sequence

| Parameter | Text                       | Description   |
|-----------|----------------------------|---|
| 4530      | Crank failure alarm        | This alarm is activated, if MPU is configured as the primary running feedback and the specified RPM is not reached before the delay has expired.  |
| 4540      | Run feedback failure alarm | This alarm is activated, if there is a failure on the primary running feedback. For example, if the primary running feedback is configured to digital input without running detection, and an active secondary running feedback detects the engine to be running.<br>The delay to be set is the time from the secondary running detection until the alarm is activated. |
| 4560      | Hz/V failure alarm         | This alarm is activated, if the frequency and voltage are not within the limits configured in Blackout df/dUmax, after the running feedback is received.  |
| 6352      | Engine externally stopped  | This alarm is activated, if the running sequence is active and the engine is below the running detection and frequency detection level without any command from the controller.   |

### Start up overview with idle run

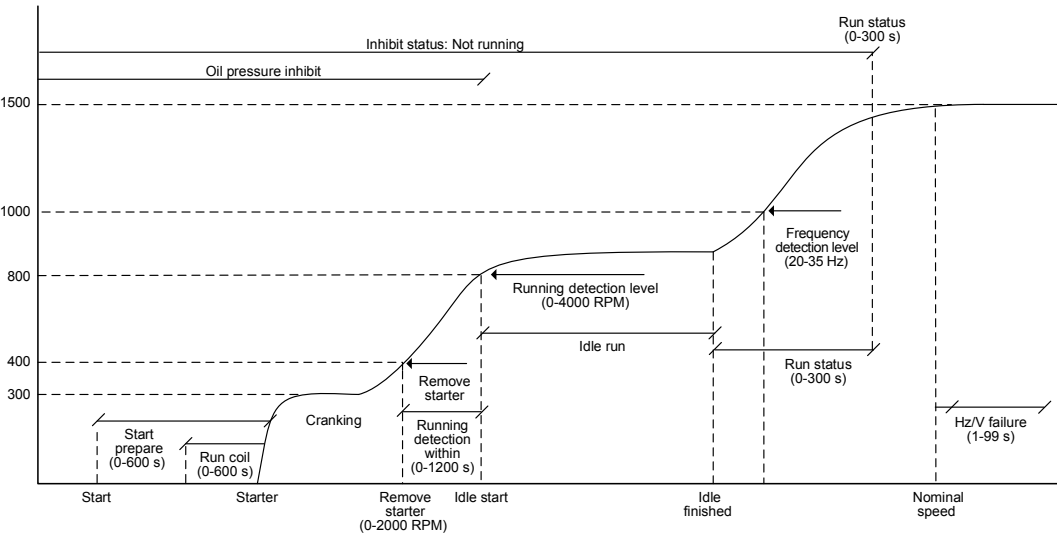

The set points and alarms are the same as above, except for the idle run function.



**More information**  
 See [Idle running](#).

### 5.2.4 Start functions


The controller starts the engine when the start command is given. The start sequence is deactivated when the remove starter event occurs or when the running feedback is present.

The reason for having two possibilities to deactivate the start relay is to be able to delay the alarms with run status.

If it is not possible to activate the run status alarms at low revolutions, the remove starter function must be used.

An example of a critical alarm is the oil pressure alarm. Normally, it is configured according to the shutdown fail class. However, if the starter motor has to disengage at 400 RPM, and the oil pressure does not reach a level above the shutdown

set point before 600 RPM, then the engine shuts down if the specific alarm is activated at the preset 400 RPM. In that case, the running feedback must be activated at a higher number of revolutions than 600 RPM.

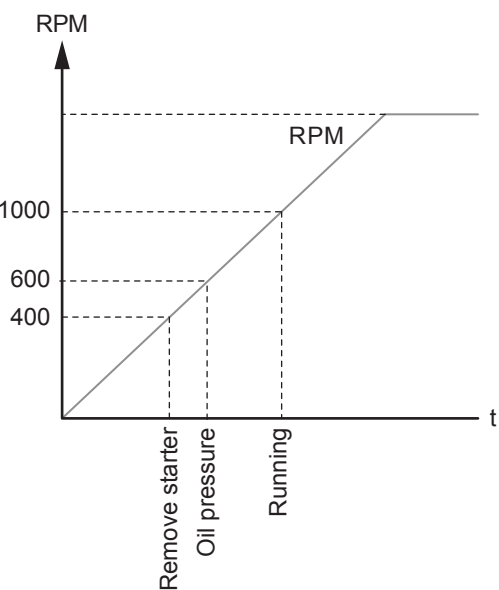


5.2.5 Digital feedbacks

If an external running relay is installed, then the digital control inputs for running detection or remove starter can be used.

Running feedback


When the digital running feedback is active, the start relay is deactivated and the starter motor will be disengaged.

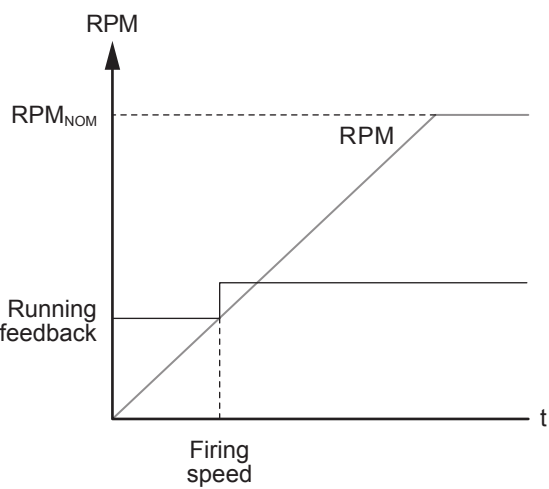

The diagram shows how the digital running feedback is activated when the engine has reached its firing speed.

Remove starter

When the digital remove starter input is present, the start relay is deactivated and the starter motor will be disengaged.

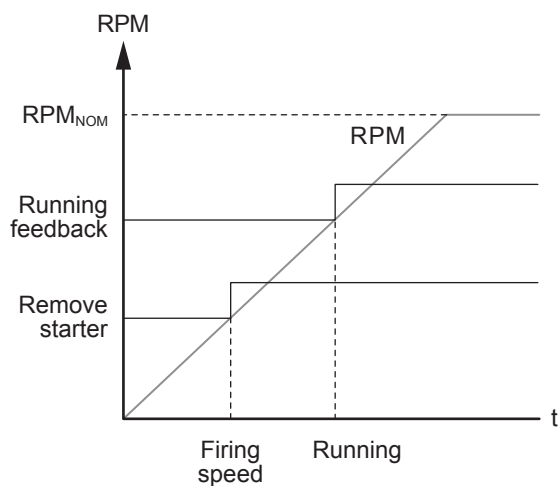

The diagram shows how the remove starter input is activated when the engine has reached its firing speed. At the running speed, the digital running feedback is activated.


**NOTE** The remove starter input must be configured from a number of available digital inputs.

## 5.2.6 Analogue tacho feedback

When a magnetic pickup (MPU) is being used, the specific level of revolutions for deactivation of the start relay can be adjusted.

### Running feedback

The diagram shows how the running feedback is detected at the firing speed level. The factory setting is 1000 RPM.

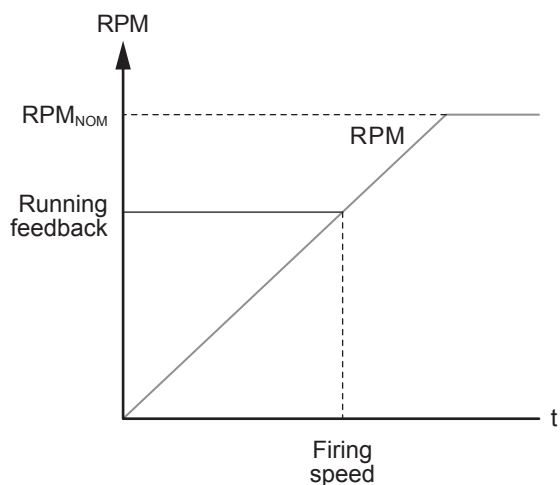

### CAUTION




#### Caution

The factory setting of 1000 RPM is higher than the RPM level of typical starter motors. Adjust the setting to a lower value to avoid damage of the starter motor.

### Remove starter input

The diagram shows how the set point of the remove starter is detected at the firing speed level. The factory setting is 400 RPM.

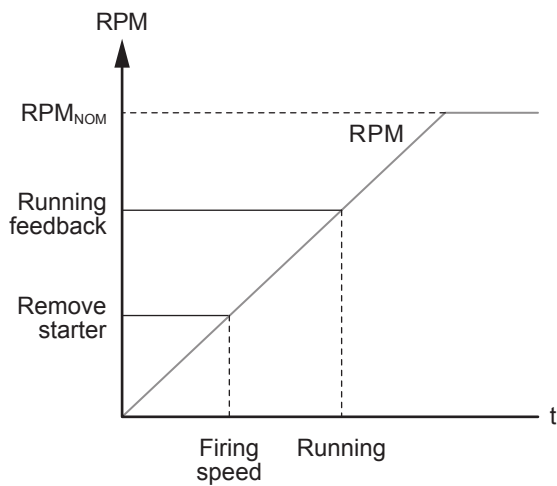

The number of teeth on the flywheel must be configured when the MPU input is used. If zero, for the remove starter function, the controller calculates the speed from the genset frequency.

#### Engine > Start sequence > After crank > Remove starter

| Parameter | Text         | Range         | Default |
|-----------|--------------|---------------|---------|
| 6174      | Remove start | 1 to 2000 RPM | 400 RPM |

**NOTE** The *Remove starter* function can use the MPU or a digital input.


### 5.2.7 Oil pressure

The multi-inputs on terminals 20, 21, 22 and 23 can be used for the detection of running feedback. The terminal in question must be configured as an RMI input for oil pressure measurement. This is done with the utility software:

1. Select *I/O & Hardware setup* tab.
2. Select the relevant multi-input tab.
3. For *Input type*, select *RMI oil pressure*.

When the oil pressure increases above the adjusted value, running is detected, and the start sequence is ended.

#### Running feedback

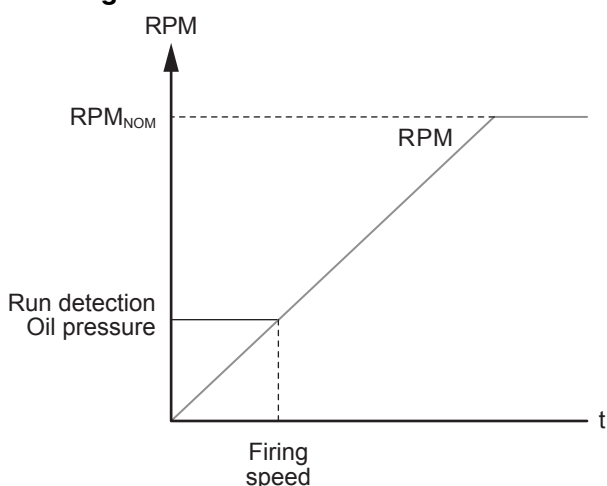

#### More information

See **Running feedback** for how to configure the parameters.


## 5.3 Running feedback

The controller uses running feedback to detect whether the engine is running:

- A digital input
- RPM, measured by magnetic pick-up (set point 0 to 4000 RPM)
- EIC
- Frequency measurement (20 to 35 Hz)


The selected running feedback is the primary feedback. However, all available running feedback is used for running detection. If the primary running feedback does not detect any running feedback, the starter relay stays activated for one additional second.

### 5.3.1 Start sequence running feedback

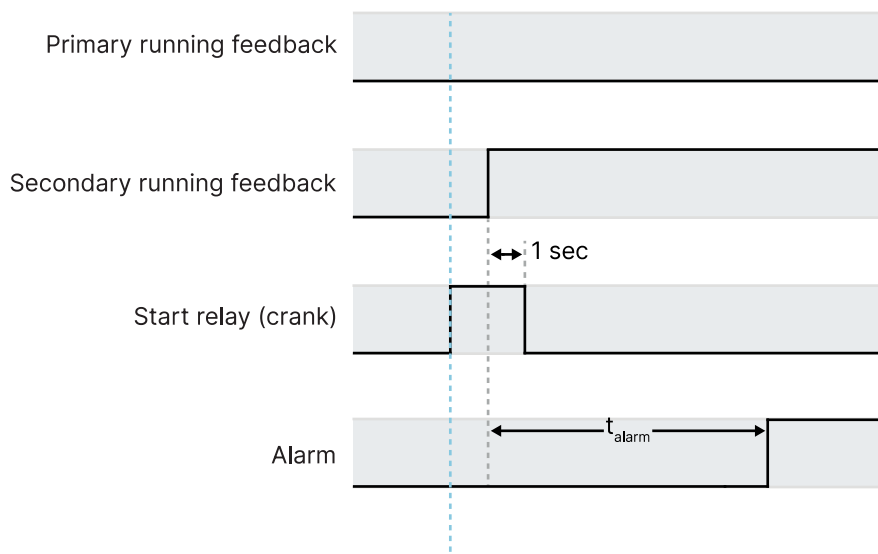

- If a running feedback is detected based on one of the secondary choices, the engine will start.
- If no running feedback is detected, the start sequence is interrupted.
- In parameter 6176 you can configure a delay time, before the start sequence is stopped.

### 5.3.2 Not running delay time

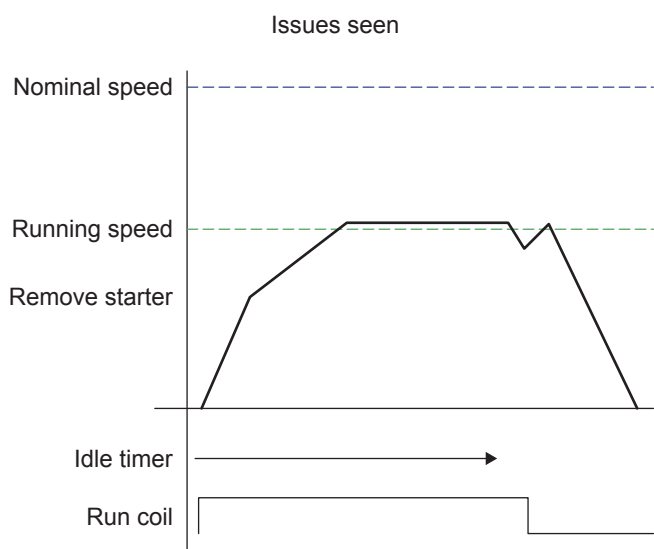

The engine will still be functional, even though a tacho sensor is damaged or dirty.

As soon as the engine is running, the running detection will be based on all available types.

### 5.3.3 Interruption of the start sequence

The start sequence is interrupted in the following situations:

| Event                          | Notes   |
|--------------------------------|---|
| Stop signal                    |   |
| Start failure                  |   |
| Remove starter feedback        | Tacho set point.  |
| Running feedback               | Digital input.  |
| Running feedback               | Tacho set point.  |
| Running feedback               | Frequency measurement is between 30.0 and 35.0 Hz.<br>The frequency measurement requires a voltage measurement of 30 % of $U_{NOM}$ .<br>The running detection based on the frequency measurement can replace the running feedback based on tacho or digital input or engine communication. |
| Running feedback               | Oil pressure set point.   |
| Running feedback               | EIC (engine communication).   |
| Emergency stop                 |   |
| Alarm                          | Alarms with Shutdown or Trip and stop fail class.   |
| Stop button on the display     | Only in SEMI-AUTO or Manual mode.   |
| Modbus stop command            | SEMI-AUTO or Manual mode.   |
| Digital stop input             | SEMI-AUTO or Manual mode.   |
| Deactivate the Auto start/stop | AUTO mode in island operation.  |
| Running mode                   | It is not possible to change the running mode to Block as long as the genset is running.  |

#### Engine > Running detection

| Parameter | Text                                      | Range  | Default   |
|-----------|---|--|-----------|
| 6171      | Number of teeth for MPU running detection | 0 to 500 teeth   | 0 teeth*  |
| 6172      | Primary running detection type            | Digital input<br>MPU input<br>Frequency<br>EIC<br>Multi-input 20 to 23 | Frequency |
| 6173      | Running detection                         | 0 to 4000 RPM  | 1000 RPM  |
| 6175      | Oil pressure                              | 0.0 to 150.0 bar   | 0.0 bar   |
| 6176      | Not running delay                         | 0.0 to 5.0 s   | 0.0 s     |

**NOTE** \* If there is no MPU (that is, parameter 6171 is 0), the controller calculates the genset speed from the frequency. This value is used for the remove starter function, and the overspeed and underspeed protections.

### 5.3.4 MPU wire break

The MPU wire break function is only active when the engine is not running. In this case, an alarm is activated if the wire connection between the controller and the MPU breaks. The MPU wire alarm is activated, when there is more than 400 kΩ.

#### Engine > Running detection > MPU wirebreak

| Parameter | Text         | Range                        | Default      |
|-----------|--------------|------------------------------|--------------|
| 4551      | Tacho sensor | Tacho sensor<br>Hall sensor* | Tacho sensor |
| 4552      | Output A     | Relays and M-Logic           | Not used     |
| 4553      | Output B     | Relays and M-Logic           | Not used     |
| 4554      | Enable       | OFF<br>ON                    | OFF          |
| 4555      | Fail class   | Fail classes                 | Warning      |

**NOTE** \* There is no wire break on a Hall sensor.

### 5.3.5 D+ (Charger generator fail)

When the D+ function is enabled, the start relay is deactivated. The D+ turns off when the start disengages. The alarm is activated if there is no D+ feedback from the charging alternator after the delay time runs out.

#### Engine > Running detection > Charger Gen fail

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 4991      | Set point  | 5.50 to 30.00 V    | 6.00 V   |
| 4992      | Timer      | 0.0 to 999.0 s     | 10.0 s   |
| 4993      | Output A   | Relays and M-Logic | Not used |
| 4994      | Output B   | Relays and M-Logic | Not used |
| 4995      | Enable     | OFF<br>ON          | OFF      |
| 4996      | Fail class | Fail classes       | Warning  |

#### Engine > Start sequence > After crank > Remove starter

| Parameter | Text         | Range         | Default |
|-----------|--------------|---------------|---------|
| 6174      | Remove start | 1 to 2000 RPM | 400 RPM |

### 5.3.6 Running output


The run status timer can be configured to activate a digital output when the engine is running.

Configure the run status under `Functions > Run status` (parameter 6160). Configure the timer for the time that running detection must be present before *Run status* is activated. If the timer for run status is changed, it also affects the alarm inhibit for *Not run status*.


5.4 Engine stop functions

5.4.1 Stop sequence

Stop sequence: Run coil

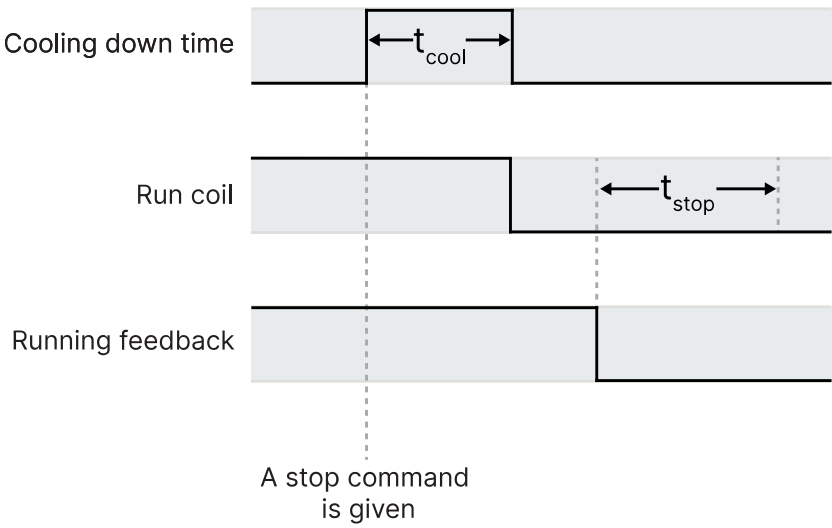

Stop sequence: Stop coil

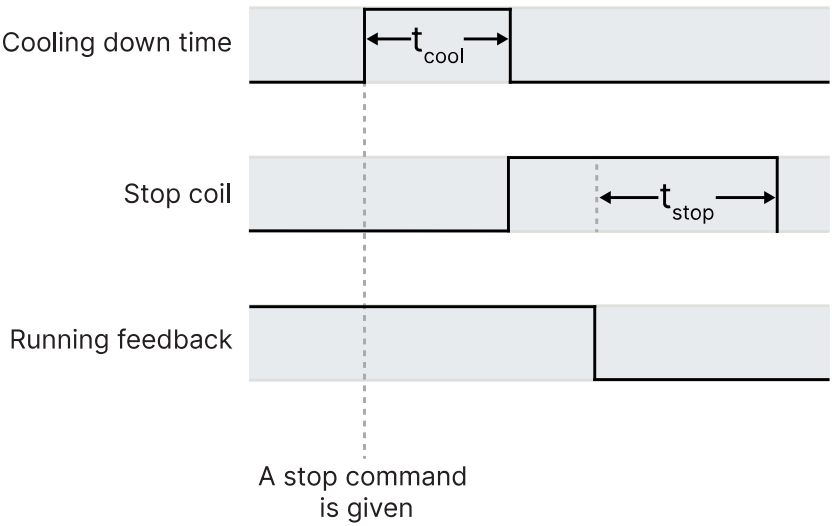

The stop sequence is activated if a stop command is given. The stop sequence includes the cooling down time if the stop is a normal or controlled stop.

Engine > Stop sequence > Cooldown

| Parameter | Text          | Range       | Default |
|-----------|---------------|-------------|---------|
| 6211      | Cooldown time | 0 to 9900 s | 240 s   |

## 5.4.2 Stop sequence commands for the generator

| Description                | Cooling down | Stop | Notes  |
|----------------------------|--------------|------|--|
| AUTO mode stop             | ●            | ●    |  |
| Trip and stop alarm        | ●            | ●    |  |
| Stop button on the display | (●)          | ●    | SEMI-AUTO or Manual mode. Cooling down is interrupted if the Stop button is activated twice. |
| Remove Auto start/stop     | ●            | ●    | AUTO mode: Island operation  |
| Emergency stop             |              | ●    | GB opens and engine shuts down.  |

Interruption of the stop sequence can only occur during the cooling down period. If the status of the genset is engine stopping, then starting a new start sequence is only possible when the genset is stopped.

Interruption of the cool down period can occur in these situations:

| Event  | Notes   |
|--|---|
| Mains failure                                      | AMF mode selected (or mode shift selected ON) and AUTO mode selected. |
| Start button is pressed/remote command is given    | SEMI-AUTO mode: Engine will run at idle/nominal speed.                |
| Digital start input                                | AUTO mode: Island operation.  |
| GB close button is pressed/remote command is given | SEMI-AUTO and Manual modes only.                                      |

## 5.4.3 Set points related to the stop sequence

### Engine > Stop sequence > Stop failure

| Parameter | Text                                 | Range              | Default  |
|-----------|--------------------------------------|--------------------|----------|
| 4581      | Stop failure timer                   | 10.0 to 120.0 s    | 30.0 s   |
| 4582      | Stop failure, Output A               | Relays and M-Logic | Not used |
| 4583      | Stop failure, Output B               | Relays and M-Logic | Not used |
| 4584      | Activation of the stop failure alarm | OFF<br>ON          | ON       |
| 4585      | Stop failure alarm fail class        | Fail classes       | Shutdown |

### Engine > Stop sequence > Extended stop


| Parameter | Text                | Range        | Default |
|-----------|---------------------|--------------|---------|
| 6212      | Extended stop timer | 0 to 300.0 s | 5.0 s   |

### Engine > Stop sequence > Stop threshold

| Parameter | Text                      | Range   | Default        |
|-----------|---------------------------|---|----------------|
| 6213      | Input type                | Multi input 20 to 23<br>M-Logic<br>EIC temp. inputs | Multi input 20 |
| 6214      | Threshold value/set point | 0 to 482 °  | 0 °            |

**NOTE** If the cooling down timer is set to 0.0 s, the cooling down sequence will be infinite.

#### 5.4.4 Stop sequence flowchart

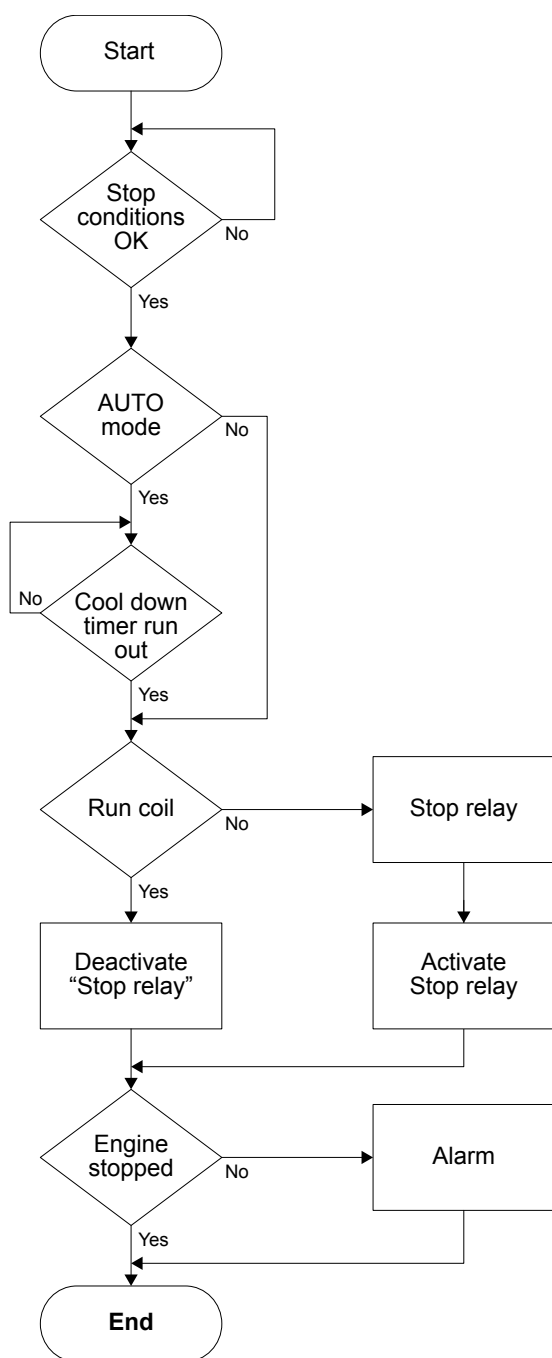


### 5.5 Idle running

Idle running changes the start and stop sequences so the engine can run at low temperature conditions.

The function is typically used in installations where the engine has to operate at low temperatures. This can cause starting problems or damage the engine. You can also use the function when the engine has to run at low RPM until a specified temperature is reached.

It is possible to use the idle run function with or without timers. Two timers are available, one timer is used in the start sequence, and one timer is used in the stop sequence. The timers make the function flexible.

You must prepare the speed governor for the idle run function using a digital signal from the controller.

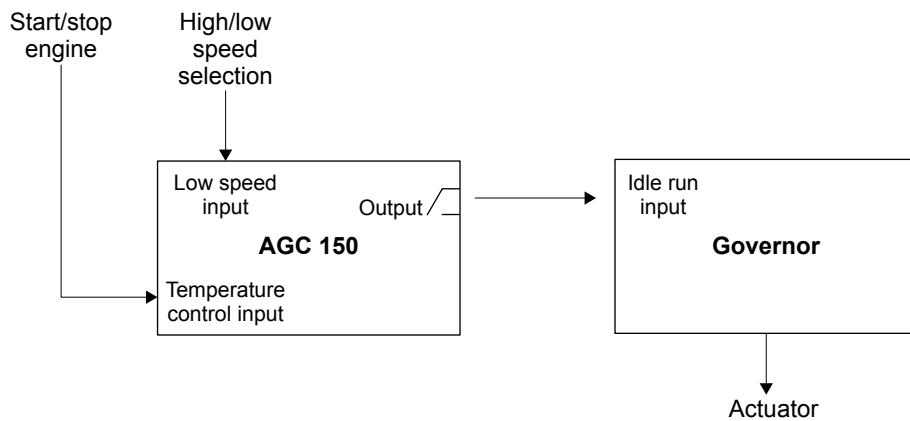

When the function is enabled, two digital inputs are used for control purposes:

1. Low speed input. This input is used to change between idle speed and nominal speed. This input does not prevent the engine from stopping. It is only a selection between idle and nominal speed.
2. Temperature control input. When this input is activated, the engine starts. It is not able to stop as long as this input is activated.

You can use the low speed input together with a timer to select the idle run function. If an input and a timer are used at the same time, the digital input is prioritised. For example, if the idle run function is activated with the low speed input and the start timer is enabled, the idle run function is still active if the timer expires before the digital input is deactivated.

**NOTE** Turbo chargers not originally prepared for operating in the low speed area can be damaged if the engine is running in idle run for too long.

#### Engine > Start sequence > Idle run

| Parameter | Text              | Range              | Default   |
|-----------|-------------------|--------------------|-----------|
| 6291      | Idle start timer  | 0.0 to 999.0 min   | 300.0 min |
| 6292      | Idle start enable | OFF<br>ON          | OFF       |
| 6295      | Output A          | Relays and M-Logic | Not used  |
| 6296      | Enable idle run   | OFF<br>ON          | OFF       |


#### Engine > Stop sequence > Idle stop

| Parameter | Text        | Range            | Default   |
|-----------|-------------|------------------|-----------|
| 6293      | Stop timer  | 0.0 to 999.0 min | 300.0 min |
| 6294      | Enable stop | OFF<br>ON        | OFF       |

### Examples


#### Idle speed during starting and stopping

- Both the start and the stop timers are activated.
- The start and stop sequences are changed to let the engine stay at the idle level before speeding up.
- It also decreases the speed to the idle level for a specified delay time before stopping.

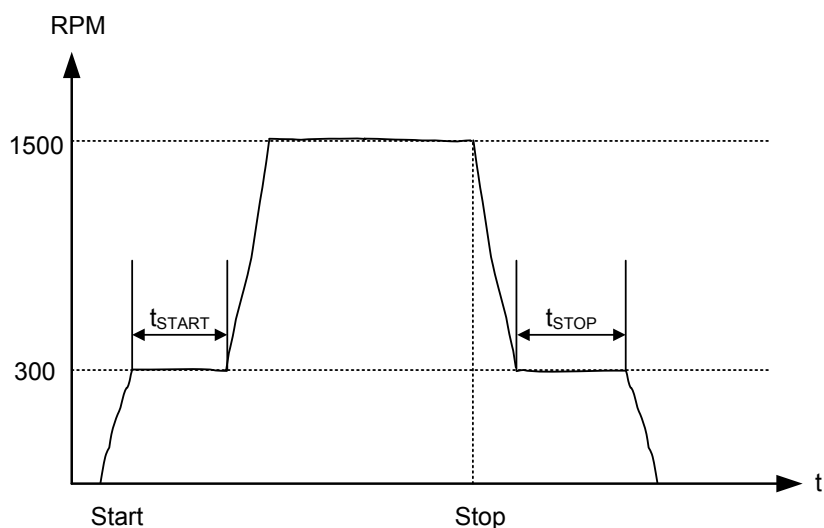

#### Idle speed with a digital input configured to low speed

- The idle speed with low speed activated runs in idle speed until the low speed input is deactivated, and then the engine regulates to nominal values.
- To prevent the engine from stopping, then the digital input *Temp control* must be left ON at all times. The engine speed-time curve then looks like this:

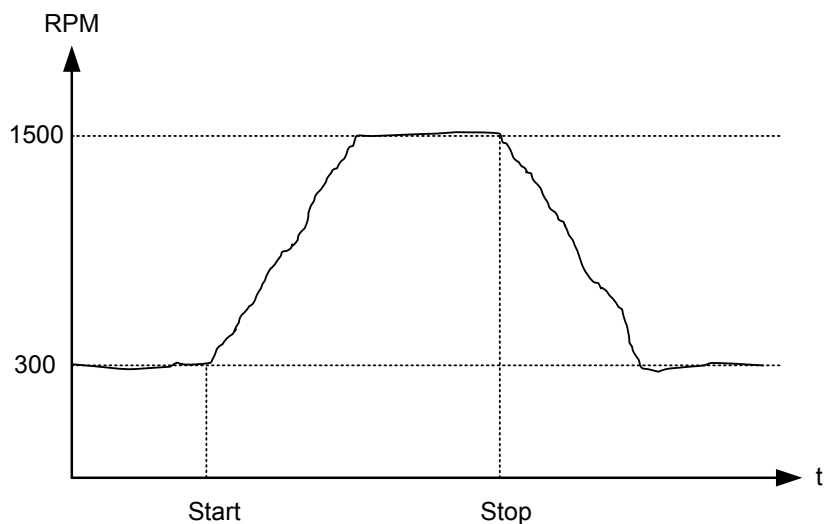

**NOTE** The oil pressure alarm (RMI oil) is enabled during idle run if set to ON.

### 5.5.1 Temperature-dependent idle start-up

This is an example of a system that will start up in idle run, if the coolant temperature is below a specified value. When the temperature exceeds the specified value, the engine will ramp up to nominal values.

For this function to work, you must turn idle running ON and configure the digital output.

#### Engine > Start sequence > Idle run

| Parameter | Text         | Range     | Set value to |
|-----------|--------------|-----------|--------------|
| 6296      | Idle running | OFF<br>ON | ON           |

## Example

The function uses delta analogue 1 (parameters 4601, 4602 and 4610) and one M-Logic line. After starting, when the coolant temperature is below 110 °C, the controller idles. Once the temperature reaches 110 °C, the controller automatically ramps up to full speed.

The screenshot shows a configuration window for a parameter named "Delta ana1 1". It includes a set point slider at 1, a timer set to 5 seconds, and various output and password level settings. A commissioning section shows an actual value of 0 and an actual timer value of 0 seconds. The window also has checkboxes for Enable, High Alarm, Inverse proportional, and Auto acknowledge, along with an Inhibits dropdown set to "Shutdown".



## 5.5.2 Inhibit

The alarms that are deactivated by the inhibit function are inhibited in the usual manner, except for the oil pressure alarms, RMI oil 20, 21, 22 and 23. These alarms are active during Idle run as well.


## 5.5.3 Running signal

You must activate the running feedback when the engine is running in idle mode.


## 5.5.4 Idle speed flowcharts

The flowcharts show the start and stop of the engine by the inputs *Temp control* and *Low speed*.

## Start flowchart

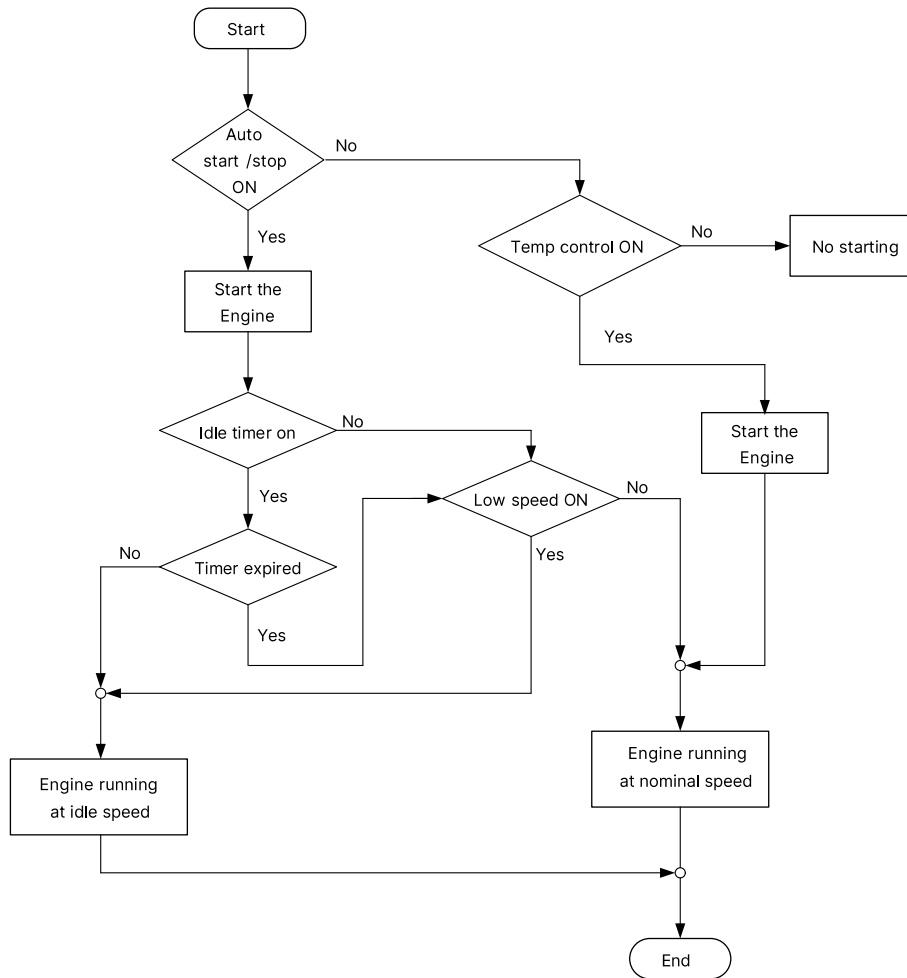

Stop flowchart

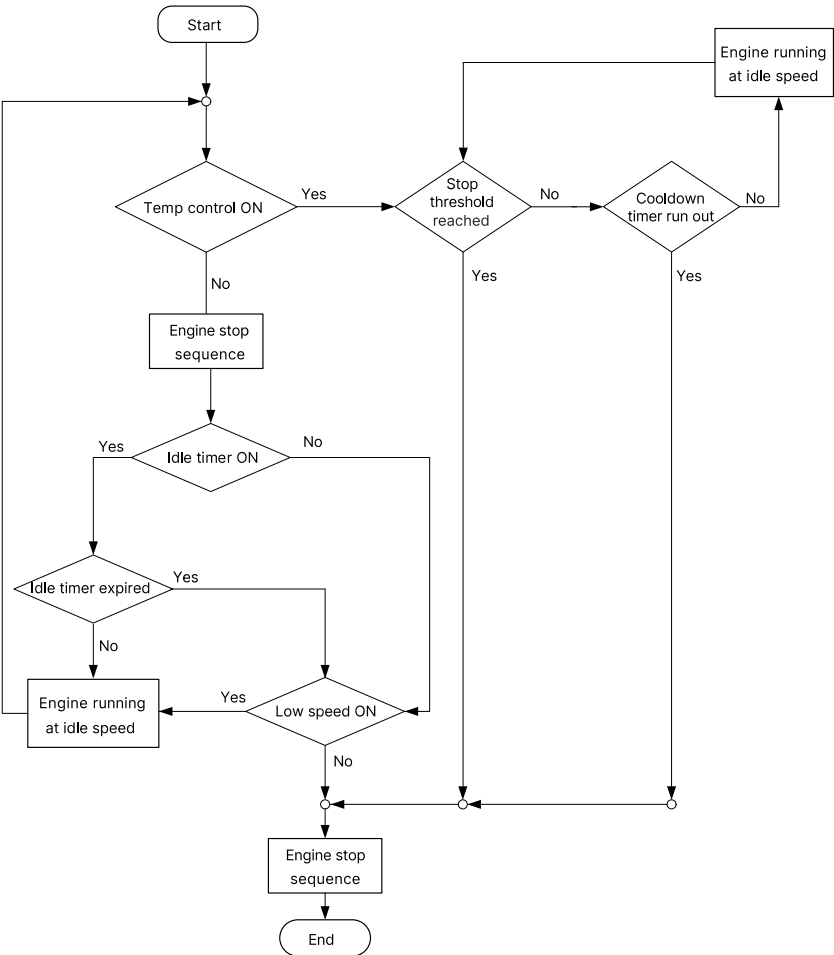


5.6 Engine protections

| Protection  | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|-------------|------------------------|-------------------|--------------|--------|
| Over-speed  | -                      | 12                | -            | 2      |
| Under-speed | -                      | 14                | -            | 1      |

5.6.1 Overspeed

These alarms alerts the operator that the engine is running too fast.

The alarm response is based on the engine speed as a percentage of the nominal speed. If the engine speed rises above the set point for the delay time, the alarm is activated.

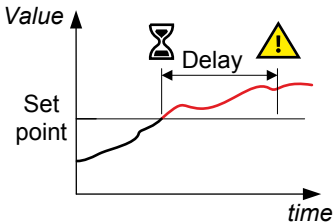

Engine > Protections > RPM-based protections > Overspeed > Overspeed [1 or 2]


| Parameter    | Text      | Range              | Overspeed 1 | Overspeed 2 |
|--------------|-----------|--------------------|-------------|-------------|
| 4511 or 4521 | Set point | 100 to 150 %       | 110 %       | 120 %       |
| 4512 or 4522 | Timer     | 0 to 3200 s        | 5 s         | 1 s         |
| 4513 or 4523 | Output A  | Relays and M-Logic | Not used    | Not used    |
| 4514 or 4524 | Output B  | Relays and M-Logic | Not used    | Not used    |

| Parameter    | Text       | Range        | Overspeed 1 | Overspeed 2 |
|--------------|------------|--------------|-------------|-------------|
| 4515 or 4525 | Enable     | OFF<br>ON    | OFF         | OFF         |
| 4516 or 4526 | Fail class | Fail classes | Warning     | Shutdown    |

## 5.6.2 Underspeed

This alarm alerts the operator that the engine is running too slowly.

The alarm response is based on the engine speed as a percentage of the nominal speed. If the engine speed drops below the set point for the delay time, the alarm is activated.

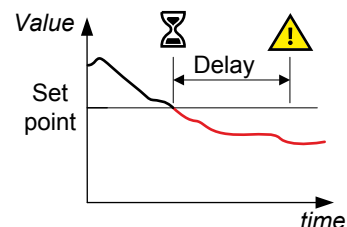

### Engine > Protections > RPM-based protections > Underspeed > Underspeed

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 4591      | Set point  | 50 to 100 %        | 90 %     |
| 4592      | Timer      | 0 to 3200 s        | 5 s      |
| 4593      | Output A   | Relays and M-Logic | Not used |
| 4594      | Output B   | Relays and M-Logic | Not used |
| 4595      | Enable     | OFF<br>ON          | OFF      |
| 4596      | Fail class | Fail classes       | Warning  |

## 5.6.3 EIC overspeed

### Engine > Protections > EIC - based protections > Overspeed > EIC Overspeed

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 7601      | Set point  | 100.0 to 150.0 %   | 110.0 %  |
| 7602      | Timer      | 0.0 to 3200 s      | 5.0 s    |
| 7603      | Output A   | Relays and M-Logic | Not used |
| 7604      | Output B   | Relays and M-Logic | Not used |
| 7605      | Enable     | OFF<br>ON          | OFF      |
| 7606      | Fail class | Fail classes       | Warning  |

## 5.7 Engine communication

The AGC supports J1939 and can communicate with any engine that uses generic J1939. In addition, the AGC can communicate with a wide range of ECUs and engines.



### More information

See **Engine communication AGC 150** for a full list of supported ECUs and engines, along with detailed information for each protocol.

## Exhaust after-treatment (Tier 4/Stage V)

AGC 150 supports Tier 4 (Final)/Stage V requirements. It provides monitoring and control of the exhaust after-treatment system, as required by the standard.




### More information

See the **Operator's manual** for a description of the exhaust after-treatment.

## 5.8 Engine pre-heater

This function is used to control the temperature of the engine. A temperature sensor is used to activate an external heating system to keep the engine at a minimum temperature. This function is only active when the engine is stopped.

### Example: Engine pre-heater sequence

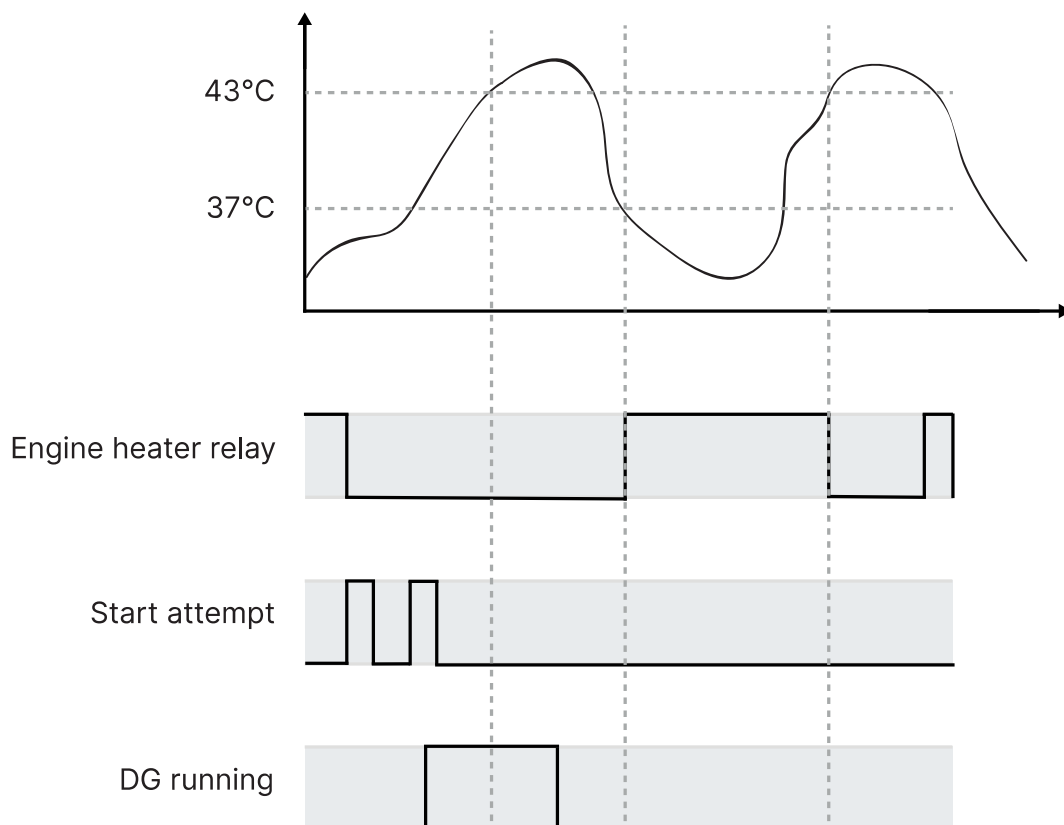

The function includes a set point and a hysteresis. In the example, the set point is 40 °C with a hysteresis of 3 °C. The controller opens the engine heater relay when the engine has reached 43 °C, and closes when the engine temperature is 37 °C.

A relay must be chosen for the engine heater. If a slave relay of the chosen relay is wanted, this can be programmed in M-Logic.

If the engine heater is active, and the manual control command has been activated, the engine heater relay is opened. When the command is activated again, the heater relay closes if the temperature is below the set point.

### Functions > Engine heater

| Parameter | Text       | Range                | Default        |
|-----------|------------|----------------------|----------------|
| 6321      | Set point  | 20 to 250 °C         | 40 °C          |
| 6322      | Output A   | Relays and M-Logic   | Not used       |
| 6323      | Input type | Multi-input 20 to 23 | Multi-input 20 |

| Parameter | Text       | Range            | Default |
|-----------|------------|------------------|---------|
|           |            | EIC temp. inputs |         |
| 6324      | Hysteresis | 1 to 70 °C       | 3 °C    |

### 5.8.1 Engine heater alarm

The engine heater alarm has a temperature set point and a timer. If the temperature gets below the set point, and the engine heater relay is closed, the timer starts. If the timer expires, and the temperature is below the set point, the alarm is activated.

**Functions > Engine heater > Engine heater 1**

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 6331      | Set point  | 10 to 250 °C       | 30 °C    |
| 6332      | Timer      | 1.0 to 300.0 s     | 10.0 s   |
| 6333      | Output A   | Relays and M-Logic | Not used |
| 6334      | Output B   | Relays and M-Logic | Not used |
| 6335      | Enable     | OFF<br>ON          | OFF      |
| 6336      | Fail class | Fail classes       | Warning  |

## 5.9 Ventilation

The ventilation function is used to control the cooling of the engine. The purpose is to use a multi-input for measuring the cooling water temperature. This way an external ventilation is activated to keep the engine below a maximum temperature.

Select the type of input to use in parameter 6323 *Engine heater*.

**Functions > Fan > Single fan start/stop > Fan configuration > Max ventilation**

| Parameter | Text       | Range             | Default  |
|-----------|------------|-------------------|----------|
| 6461      | Set point  | 20 to 250 °C      | 90 °C    |
| 6462      | Output A   | Relays and limits | Not used |
| 6463      | Hysteresis | 1 to 70 °C        | 5 °C     |
| 6464      | Enable     | ON<br>OFF         | OFF      |

### 5.9.1 Max. ventilation alarms

There are two ventilation alarms.

**Functions > Fan > Single fan start/stop > Fan Alarms**

| Parameter | Text      | Range             | Default  |
|-----------|-----------|-------------------|----------|
| 6471      | Set point | 20 to 250 °C      | 95 °C    |
| 6472      | Timer     | 0 to 60 s         | 1 s      |
| 6473      | Output A  | Relays and limits | Not used |
| 6474      | Output B  | Relays and limits | Not used |
| 6475      | Enable    | ON                | OFF      |

| Parameter | Text       | Range        | Default |
|-----------|------------|--------------|---------|
|           |            | OFF          |         |
| 6476      | Fail class | Fail classes | Warning |

## 5.10 Pump logic

### 5.10.1 Fuel pump logic

The fuel pump logic is used to start and stop the fuel supply pump to keep the fuel in the service tank at the required level. The fuel level is detected from one of the three multi-inputs.

#### Parameters

| Parameter | Name                 | Range  | Default         | Details  |
|-----------|----------------------|--|-----------------|--|
| 6551      | Fuel pump log. start | 0 to 100 %<br>1 to 10 s  | 20 %<br>1 s     | Fuel transfer pump start point.  |
| 6552      | Fuel pump log. stop  | 0 to 100 %   | 80 %            | Fuel transfer pump stop point.   |
| 6553      | Fuel fill check      | 0.1 to 999.9 s<br>Fail classes   | 60 s<br>Warning | Fuel transfer pump alarm timer and fail class. The alarm is activated if the fuel pump relay is activated, but the fuel level does not increase by 2 % within the delay time.  |
| 6554      | Fuel pump log. input | Multi input [102/105/108],<br>Ext. Ana. In [1 to 8], Auto<br>detection | Auto detection  | The multi-input or external analogue input for the fuel level sensor. Configure the input in the utility software under <i>I/O &amp; Hardware setup</i> .<br><br>Select the multi-input if 4-20 mA is used. Select <i>Auto detection</i> if a multi input with RMI fuel level is used. |
| 6557      | Fuel fill slope      | 1 to 10%   | 2%              | The fuel fill slope percentage.  |

#### Relay output

In the utility software under *I/O & Hardware setup*, select the output relay to control the fuel pump, as shown in the following example. If you do not want an alarm whenever the output is activated, configure the output relay as a limit relay.


|          |                    |                         |       |
|----------|--------------------|-------------------------|-------|
|          | <u>Function</u>    | <u>Alarm</u>            |       |
|          | Output Function    | Alarm function          | Delay |
| Output 5 | Fuel tank output ▼ | M-Logic / Limit relay ▼ | 0     |

The controller activates the relay when the fuel level is below the start limit. The controller deactivates the relay when the fuel level is above the stop limit.

**NOTE** The fuel pump relay can be activated using M-Logic (Output > Command > Activate Fuel Pump).


#### How it works

The diagram below shows how the fuel pump is started when the fuel level is 20 % and stopped again when the level is 80 %.

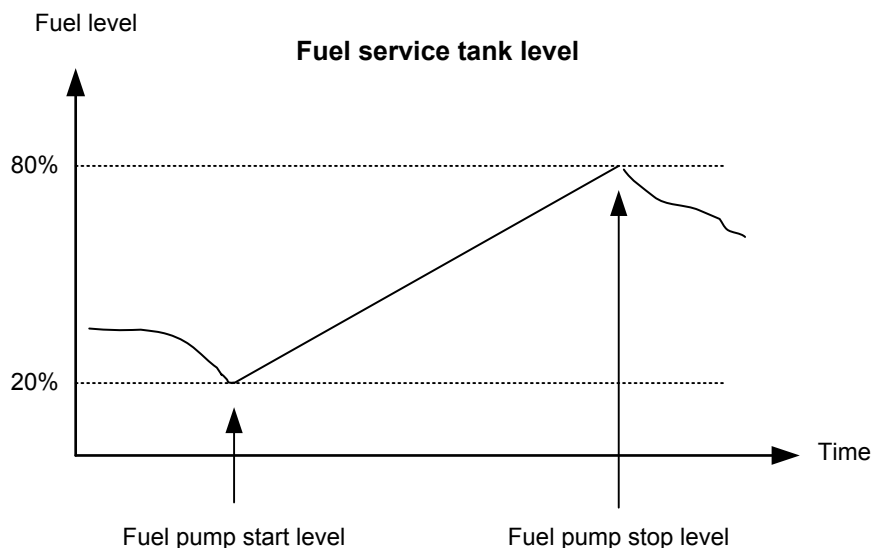

### Fuel fill check

When the fuel pump is running, the fuel level must increase by 2 % within the **Fuel fill check** timer set in menu 6553. If the fuel level does not increase by 2 %, the controller deactivates the fuel pump relay and activates a **Fuel fill alarm**.

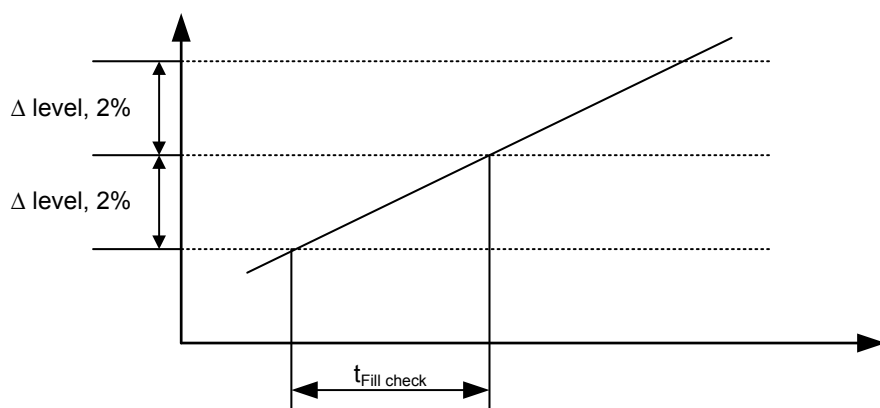

**NOTE** The level increase is fixed at 2 % and cannot be changed.

### Fuel tank level and volume

You can set the capacity of the day tank in parameter 6911. The controller uses this value and the fuel level to calculate the fuel volume. The fuel volume is shown in the utility software in *Application supervision, Genset data, General*.

## 5.10.2 DEF pump logic

The DEF pump logic can start and stop the DEF pump to keep the DEF at the required level. For this function, engine interface communication (EIC) must provide the DEF level. If the EIC cannot provide the DEF level, you can use the generic fluid pump logic instead.

### Parameters

| Parameter | Name                | Range                          | Default         | Details  |
|-----------|---------------------|--------------------------------|-----------------|--|
| 6721      | DEF pump log. start | 0 to 100 %<br>1 to 10 s        | 20 %<br>1 s     | DEF transfer pump start point.   |
| 6722      | DEF pump log. stop  | 0 to 100 %                     | 80 %            | DEF transfer pump stop point.  |
| 6723      | DEF fill check      | 0.1 to 999.9 s<br>Fail classes | 60 s<br>Warning | DEF transfer pump alarm timer and fail class. The alarm is activated if the DEF pump relay is activated, but the DEF level |

| Parameter | Name           | Range     | Default | Details  |
|-----------|----------------|-----------|---------|--|
|           |                |           |         | does not increase by the DEF fill slope (see 6724) within the delay time.  |
| 6724      | DEF fill slope | 1 to 10 % | 2 %     | When the DEF pump relay is activated, this is the amount by which the DEF level must increase in the time defined in 6723. |

### Relay output

In the utility software under *I/O & Hardware setup*, select the output relay to control the DEF pump, as shown in the following example. If you do not want an alarm whenever the output is activated, configure the output relay as a limit relay.

|          | Function          | Alarm                   |
|----------|-------------------|-------------------------|
|          | Output Function   | Alarm function          |
| Output 5 | DEF tank output ▼ | M-Logic / Limit relay ▼ |
|          |                   | Delay                   |
|          |                   | 0                       |

The controller activates the relay when the DEF level is below the start limit. The controller deactivates the relay when the DEF level is above the stop limit.

**NOTE** The DEF pump relay can be activated using M-Logic (Output > Command > Activate DEF Pump).

### 5.10.3 Generic pump logic

The fluid pump logic can start and stop a pump to keep any fluid at the required level.

#### Parameters

| Parameter | Name             | Range   | Default         | Details  |
|-----------|------------------|---|-----------------|--|
| 6731      | Fluid pump start | 0 to 100 %<br>1 to 10 s                             | 20 %<br>1 s     | Fluid transfer pump start point.   |
| 6732      | Fluid pump stop  | 0 to 100 %  | 80 %            | Fluid transfer pump stop point.  |
| 6733      | Fluid check      | 0.1 to 999.9 s<br>Fail classes                      | 60 s<br>Warning | Fluid transfer pump alarm timer and fail class. The alarm is activated if the fluid pump relay is activated, but the fluid level does not increase by the fluid fill slope (see 6735) within the delay time. |
| 6734      | Fluid pump log.  | Multi input [102/105/108],<br>Ext. Ana. In [1 to 8] | Multi input 102 | Select the analogue input for the fluid level. Configure the input in the utility software under <i>I/O &amp; Hardware setup</i> .   |
| 6735      | Fluid fill slope | 1 to 10 %   | 2 %             | When the fluid pump relay is activated, this is the amount by which the fluid level must increase in the time defined in 6733.   |

### Relay output

In the utility software under *I/O & Hardware setup*, select the output relay to control the fluid pump, as shown in the following example. If you do not want an alarm whenever the output is activated, configure the output relay as a limit relay.

|          | Function            | Alarm                   |
|----------|---------------------|-------------------------|
|          | Output Function     | Alarm function          |
| Output 5 | Generic fluid out ▼ | M-Logic / Limit relay ▼ |
|          |                     | Delay                   |
|          |                     | 0                       |

The controller activates the relay when the fluid level is below the start limit. The controller deactivates the relay when the fluid level is above the stop limit.

**NOTE** The fluid pump relay can be activated using M-Logic (Output > Command > Activate Generic Pump).

## 5.11 SDU 104 integration

The SDU 104 is a parallel redundancy shutdown unit used for the protection of marine engines. You can use the SDU 104 together with the AGC 150 Engine drive marine and AGC 150 Generator marine.

### How to configure AGC 150 Marine controllers for use with the SDU 104

1. Go to the *I/O & Hardware setup* tab.
2. Select the *DI 39-40-41* tab.
3. Configure the digital inputs:
  - Digital input 39: SDU comm error
  - Digital input 40: SDU status OK
  - Digital input 41: SDU warning
4. Go to the *DO 5 - 18* tab.
5. Configure *Output 13* and *Output 14*:
  - Output 13: SDU watchdog
  - Output 14: SDU fault reset
6. Go to the *Parameters* tab to configure SDU parameters 18000, 18010, and 18020. These parameters are the alarms for the digital inputs.

By default, digital output 11 is configured as *Status OK*. This output must be configured for the SDU watchdog output to work.




#### More information

See the **SDU 104 Installation instructions** for how to connect the SDU 104 to the AGC 150 Marine controller. You can also see how to configure the SDU 104.

## 5.12 Other functions

### 5.12.1 Service timers

The controller has two service timers to monitor maintenance intervals. Click the  icon in the utility software to see the service timers.

The timer function is based on running hours. When the adjusted time expires, the controller displays an alarm. The running hours are counted when there is running feedback. An alarm occurs when the running hours or days expires.

The controller remembers the last reset on each service timer.

#### Engine > Maintenance > Service timer [1 to 2]

| Parameter    | Text          | Range           | Default   |
|--------------|---------------|-----------------|-----------|
| 6111 or 6121 | Enable        | OFF<br>ON       | OFF       |
| 6112 or 6122 | Running hours | 0 to 9000 hours | 500 hours |
| 6113 or 6123 | Days          | 1 to 1000 days  | 365 days  |
| 6114 or 6124 | Fail class    | Fail classes    | Warning   |

| Parameter    | Text     | Range              | Default  |
|--------------|----------|--------------------|----------|
| 6115 or 6125 | Output A | Relays and M-Logic | Not used |
| 6116 or 6126 | Reset    | OFF<br>ON          | OFF      |

## 5.12.2 Keyswitch

### Output function

Under **I/O & Hardware setup, DO**, configure the *Keyswitch* function.

### Wiring

Wire the keyswitch relay output to the ECU power. When the keyswitch relay is open, the ECU has no power.


### How it works

For the first 5 seconds after the AGC controller is powered on, the keyswitch relay is open.

When the keyswitch relay is open, the AGC inhibits the engine interface communication error alarm.

The keyswitch function works as follows:

1. There is an engine stop command.
2. The *Cooling down* (parameter 6211) timer starts.
3. When the cooling down timer runs out, the AGC starts the *Extended stop* (parameter 6212) timer, and opens the keyswitch relay.
4. The keyswitch relay stays open until the extended stop timer runs out.

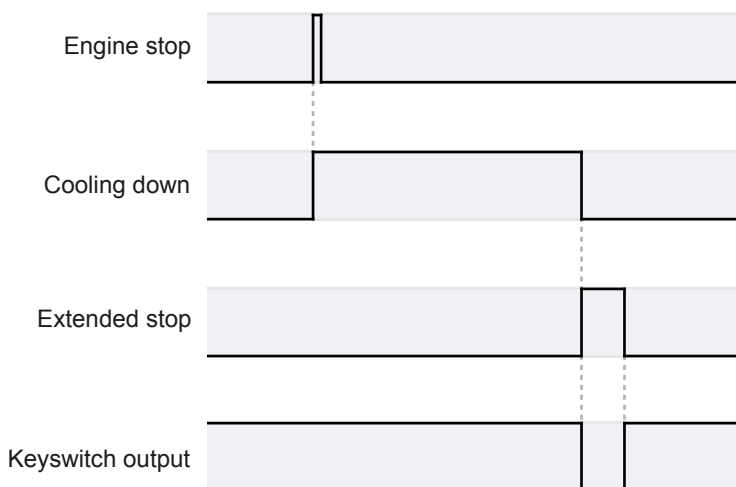

**NOTE** The keyswitch function does not require engine communication.

## 5.12.3 No governor regulation

The AGC 150 Stand-alone controller does not regulate the engine's governor. However, the controller still supports idle mode.

## 5.12.4 Unsupported application

The AGC 150 Stand-alone controller has configuration limitations. If a configuration rule is broken, the controller activates the *Unsupported application* alarm or *Wrong breaker config.* alarm. The alarm value shows which rule was broken. You can see the alarm value in the alarm log in the utility software.

| Alarm value | Configuration rule   |
|-------------|--|
| 7           | Unknown application type.  |
| 11          | Single controller in an AMF application without a generator breaker.                                     |
| 12          | For single controller applications with an external generator breaker both feedbacks must be configured. |
| 13          | For single controller applications with an external mains breaker both feedbacks must be configured.     |

### Alarm log example

Event log

Alarm log

Battery log

Monitoring

Device

Application supervision


Alarms

Logs

| TimeStamp               | Line | Text                | Channel | PPower | QPower | PF | Gen. U1 | Gen. U2 | Gen. U3 | Gen. I1 | Gen. I2 | Gen. I3 | Gen. F | Bus U1 | Bus U2 | Bus U3 | Bus F | dI/dt | Vector | Multi input 20 | Multi input 21 | Multi input 22 | Multi input 23 | Tacho | Alarm value |
|-------------------------|------|---------------------|---------|--------|--------|----|---------|---------|---------|---------|---------|---------|--------|--------|--------|--------|-------|-------|--------|----------------|----------------|----------------|----------------|-------|-------------|
| 2023-06-30 14:39:34.800 | 0    | Emergency STOP      | 3490    | 0      | 0      | 0  | 0       | 0       | 0       | 0       | 0       | 0       | 0      | 0      | 0      | 0      | 0     | 0     | 0      | 1200           | 120            | 120            | 120            | 0     | 100         |
| 2023-06-30 14:39:35.335 | 1    | GB Pos. fail        | 2180    | 0      | 0      | 0  | 0       | 0       | 0       | 0       | 0       | 0       | 0      | 0      | 0      | 0      | 0     | 0     | 0      | 1200           | 120            | 120            | 120            | 0     | 1           |
| 2023-06-30 14:41:56.415 | 2    | Wrong breaker conf. | 0       | 0      | 0      | 0  | 0       | 0       | 0       | 0       | 0       | 0       | 0      | 0      | 0      | 0      | 0     | 0     | 0      | 1200           | 120            | 120            | 120            | 0     | 12          |
| 2023-06-30 14:43:49.415 | 3    | Wrong breaker conf. | 0       | 0      | 0      | 0  | 0       | 0       | 0       | 0       | 0       | 0       | 0      | 0      | 0      | 0      | 0     | 0     | 0      | 1200           | 120            | 120            | 120            | 0     | 11          |
| 2023-06-30 14:49:37.915 | 4    | Wrong breaker conf. | 0       | 0      | 0      | 0  | 0       | 0       | 0       | 0       | 0       | 0       | 0      | 0      | 0      | 0      | 0     | 0     | 0      | 1200           | 120            | 120            | 120            | 0     | 11          |

## 6. Generator functions

### 6.1 Display, buttons and LEDs

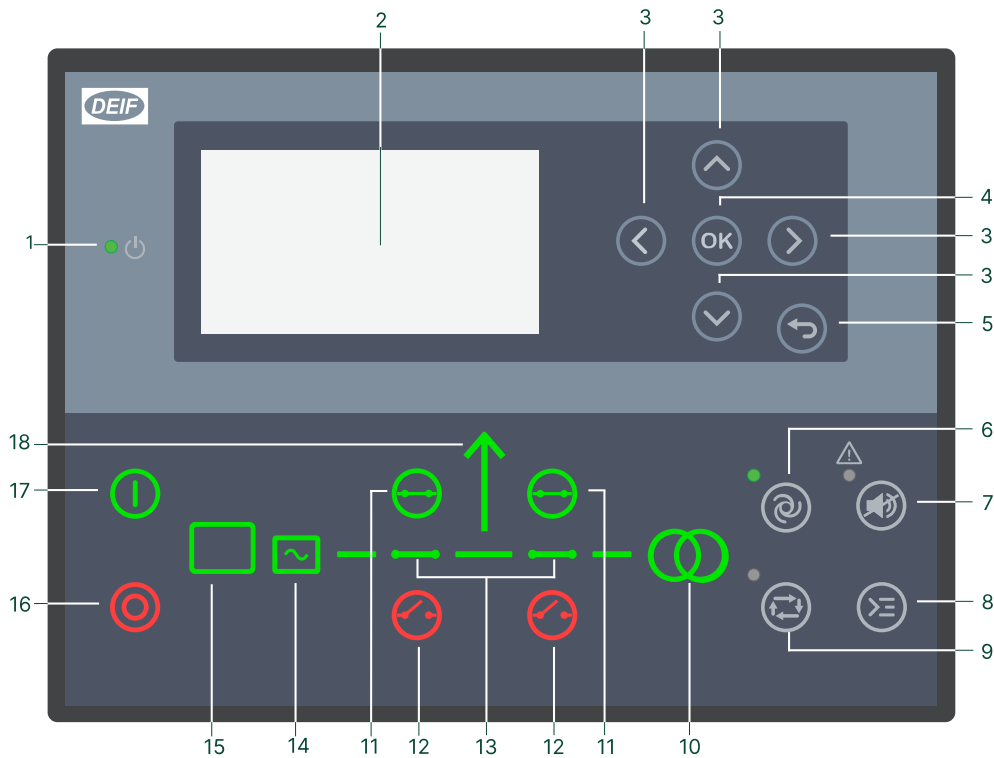

| No. | Name           | Function   |
|-----|----------------|--|
| 1   | Power          | Green: The controller power is ON.<br>OFF: The controller power is OFF.  |
| 2   | Display screen | Resolution: 240 x 128 px.<br>Viewing area: 88.50 x 51.40 mm.<br>Six lines, each with 25 characters.  |
| 3   | Navigation     | Move the selector up, down, left and right on the screen.  |
| 4   | OK             | Go to the Menu system.<br>Confirm the selection on the screen.   |
| 5   | Back           | Go to the previous page.   |
| 6   | AUTO mode      | The controller automatically starts and stops (and connects and disconnects) the genset. No operator actions are needed. The controller also automatically opens and closes the mains breaker (open transitions, since there is no synchronisation).     |
| 7   | Silence horn   | Turns off an alarm horn (if configured) and enters the Alarm menu.   |
| 8   | Shortcut menu  | Access the Jump menu, Mode selection, Test, Lamp test  |
| 9   | SEMI-AUTO mode | The controller cannot automatically start, stop, connect or disconnect the genset, or open and close the mains breaker.<br><br>The operator or an external signal can start, stop, connect or disconnect the genset, or open or close the mains breaker. |
| 10  | Mains symbol   | Green: Mains voltage and frequency are OK. The controller can close the breaker.<br>Red: Mains failure.  |
| 11  | Close breaker  | Push to close the breaker.   |
| 12  | Open breaker   | Push to open the breaker.  |

| No. | Name            | Function  |
|-----|-----------------|---|
| 13  | Breaker symbols | Green: Breaker is closed.<br>Red: Breaker failure.  |
| 14  | Generator       | Green: Generator voltage and frequency are OK. The controller can close the breaker.<br>Green flashing: The generator voltage and frequency are OK, but the V&Hz OK timer is still running. The controller cannot close the breaker.<br>Red: The generator voltage is too low to measure. |
| 15  | Engine          | Green: There is running feedback.<br>Green flashing: The engine is getting ready.<br>Red: The engine is not running, or there is no running feedback.   |
| 16  | Stop            | Stops the genset if SEMI-AUTO or Manual is selected.  |
| 17  | Start           | Starts the genset if SEMI-AUTO or Manual is selected.   |
| 18  | Load symbol     | Green: The supply voltage and frequency are OK.<br>Red: Supply voltage/frequency failure.   |

## 6.2 Application modes

The controller can be used for the following standard application modes:

| Genset mode             | AUTO | SEMI-AUTO | Test | Manual | Block |
|-------------------------|------|-----------|------|--------|-------|
| Island operation        | ●    | ●         | ●    | ●      | ●     |
| Automatic Mains Failure | ●    | ●         | ●    | ●      | ●     |

## 6.3 Generator breaker

### 6.3.1 Breaker settings

Breakers > Generator breaker > Breaker configuration

| Parameter | Text                | Range  | Default            |
|-----------|---------------------|--|--------------------|
| 6231      | GB close delay      | 0.0 to 30.0 s  | 2.0 s              |
| 6232      | Load time           | 0.0 to 30.0 s  | 0.0 s              |
| 6234      | GB reclose attempts | No reclose attempts<br>1 reclose attempt<br>2 reclose attempt<br>3 reclose attempt | No reclose attempt |

### 6.3.2 Breaker sequences

The controller activates the breaker sequences according to the selected mode.

#### Controller operation modes

| Controller operation mode | Plant running mode | Breaker control                       |
|---------------------------|--------------------|---------------------------------------|
| AUTO                      | All                | Controlled by the controller          |
| SEMI-AUTO                 | All                | Button/remote command                 |
| Manual                    | All                | Button/remote command                 |
| Block                     | All                | None (only possible to open breakers) |

## Voltage and frequency OK

Before closing the breakers, the voltage and frequency must be stabilised within a defined time frame.

### Generator > AC configuration > Voltage and freq. OK > Hz/V OK

| Parameter | Text          | Range         | Default |
|-----------|---------------|---------------|---------|
| 6221      | Hz/V OK timer | 0.0 to 99.0 s | 5.0 s   |

### Generator > AC configuration > Voltage and freq. OK > Blackout / Hz/V OK\*

| Parameter | Text           | Range         | Default |
|-----------|----------------|---------------|---------|
| 2111      | Blackout dfMin | 0.0 to 5.0 Hz | 3.0 Hz  |
| 2112      | Blackout dfMax | 0.0 to 5.0 Hz | 3.0 Hz  |
| 2113      | Blackout dUMin | 2 to 20 %     | 5 %     |
| 2114      | Blackout dUMax | 2 to 20 %     | 5 %     |

**NOTE** \* The settings are used for both Hz/V OK and Blackout.

### Generator > AC configuration > Voltage and freq. OK > Hz/V failure

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 4561      | Timer      | 1.0 to 99.0 s      | 30.0 s   |
| 4562      | Output A   | Relays and M-Logic | Not used |
| 4563      | Output B   | Relays and M-Logic | Not used |
| 4564      | Enable     | OFF<br>ON          | OFF      |
| 4565      | Fail class | Fail classes       | Shutdown |

### Generator > AC configuration > Voltage and freq. OK > Hz/V OK

| Parameter | Text          | Range         | Default |
|-----------|---------------|---------------|---------|
| 6221      | Hz/V OK timer | 0.0 to 99.0 s | 5.0 s   |


## Conditions for breaker operations

The breaker sequences depend on the breaker positions and the frequency/voltage measurements.


| Sequence               | Condition   |
|------------------------|---|
| GB ON, direct closing  | Running feedback<br>Generator frequency/voltage OK<br>MB open |
| GB OFF, direct opening | MB open   |

6.3.3 Flowcharts

GB open sequence flowchart

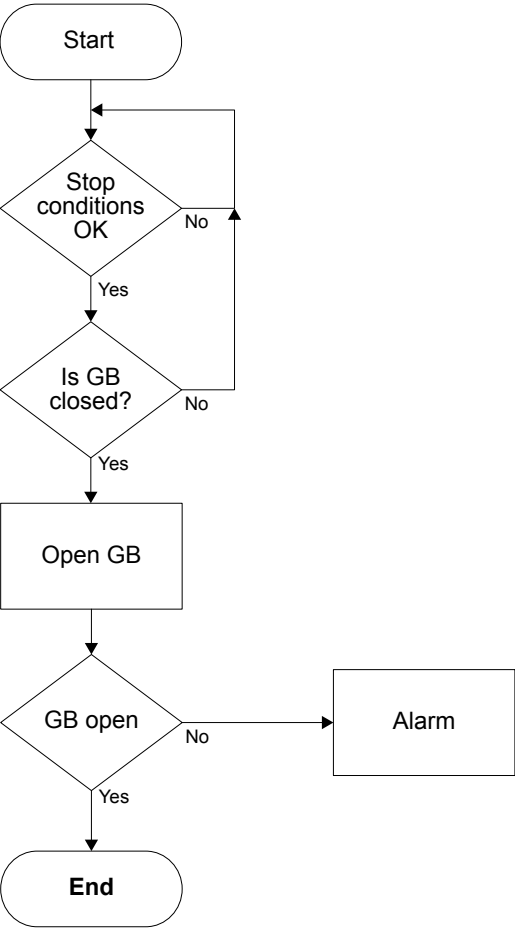

## GB close sequence flowchart

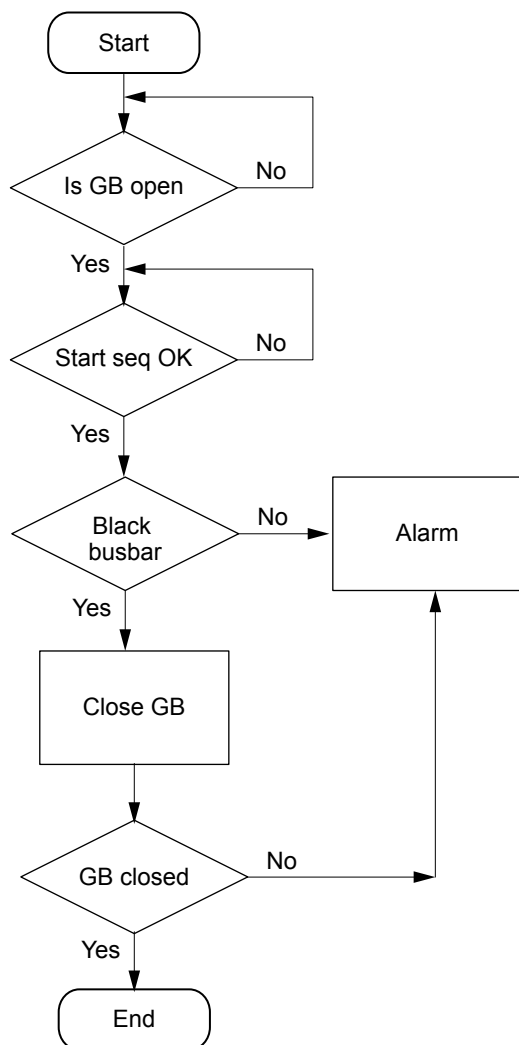

## 6.3.4 Breaker failures

### Breakers > Generator breaker > Breaker monitoring > GB Open fail

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2161      | Timer      | 1.0 to 10.0 s      | 2.0 s    |
| 2162      | Output A   | Relays and M-Logic | Not used |
| 2163      | Output B   | Relays and M-Logic | Not used |
| 2164      | Enable     | ON                 | ON       |
| 2165      | Fail class | Fail classes       | Warning  |

### Breakers > Generator breaker > Breaker monitoring > GB Close fail

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2171      | Timer      | 1.0 to 10.0 s      | 900 s    |
| 2172      | Output A   | Relays and M-Logic | Not used |
| 2173      | Output B   | Relays and M-Logic | Not used |
| 2174      | Enable     | ON                 | ON       |
| 2175      | Fail class | Fail classes       | Warning  |

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2181      | Timer      | 1.0 to 5.0 s       | 1.0 s    |
| 2182      | Output A   | Relays and M-Logic | Not used |
| 2183      | Output B   | Relays and M-Logic | Not used |
| 2184      | Enable     | ON                 | ON       |
| 2185      | Fail class | Fail classes       | Warning  |

## 6.4 Inputs and outputs

### 6.4.1 Digital input functions

#### Default

| Function        | Details  | AUTO mode | SEMI-AUTO mode | Test mode | Man. mode | Block mode | Type * |
|-----------------|--|-----------|----------------|-----------|-----------|------------|--------|
| Auto start/stop | The genset starts when this input is activated. The genset stops if the input is deactivated. The input can be used when the controller is in Island operation, and the Auto running mode is selected. | ●         |                |           |           |            | C      |
| GB position ON  | The input function is used as an indication of the generator breaker position. The controller requires this feedback when the breaker is closed or a position failure alarm occurs.                    | ●         | ●              | ●         | ●         | ●          | C      |
| GB position OFF | The input function is used as an indication of the generator breaker position. The controller requires this feedback when the breaker is opened or a position failure alarm occurs.                    | ●         | ●              | ●         | ●         | ●          | C      |

#### Configurable

| Function                 | Details   | AUTO mode | SEMI-AUTO mode | Test mode | Man. mode | Block mode | Type * |
|--------------------------|---|-----------|----------------|-----------|-----------|------------|--------|
| Start enable             | This input must be activated to be able to start the engine. When the genset is started, the input can be removed.  | ●         | ●              | ●         | ●         |            | C      |
| Remote start             | This input initiates the start sequence of the genset when SEMI-AUTO or Manual mode is selected.  |           | ●              |           | ●         |            | C      |
| Remote stop              | This input initiates the stop sequence of the genset when SEMI-AUTO or Manual mode is selected. The genset stops without cooling down.  |           | ●              |           | ●         |            | C      |
| Alternative start        | This input is used to simulate an AMF failure and this way run a full AMF sequence without a mains failure actually being present   | ●         | ●              | ●         | ●         | ●          | C      |
| Remove starter           | The start sequence is deactivated. This means the start relay deactivates, and the starter motor disengages.  | ●         | ●              | ●         | ●         |            | C      |
| Binary running detection | The input is used as a running indication of the engine. When the input is activated, the start relay is deactivated.   | ●         | ●              | ●         | ●         | ●          | C      |
| Oil pressure alarm       | The oil pressure alarm is activated if the oil pressure exceeds the set point. The function automatically sets <i>Not run status</i> as the inhibit, the alarm input as <i>Low</i> , and <i>Shutdown</i> as the fail class. | ●         | ●              | ●         | ●         | ●          | C      |

| Function                | Details  | AUTO mode | SEMI-AUTO mode | Test mode | Man. mode | Block mode | Type * |
|-------------------------|--|-----------|----------------|-----------|-----------|------------|--------|
| Water temperature alarm | The water temperature alarm is activated if the water temperature exceeds the set point. The function automatically sets <i>Shutdown override</i> as the inhibit, the alarm input as <i>Low</i> , and <i>Shutdown</i> as the fail class. | ●         | ●              | ●         | ●         | ●          | C      |
| GB close inhibit        | When this input is activated, the generator breaker cannot close.  | ●         | ●              | ●         | ●         | ●          | C      |
| MB close inhibit        | When this input is activated, the mains breaker cannot close.  | ●         | ●              | ●         | ●         | ●          | C      |
| GB racked out           | The breaker is considered as racked out when pre-requirements are met and this input is activated.   |           | ●              |           | ●         |            | C      |
| MB racked out           | The breaker is considered as racked out when pre-requirements are met and this input is activated.   |           | ●              |           | ●         |            | C      |
| GB spring loaded        | The controller does not send a close signal before this feedback is present.   | ●         | ●              | ●         | ●         | ●          | C      |
| MB spring loaded        | The controller does not send a close signal before this feedback is present.   | ●         | ●              | ●         | ●         | ●          | C      |
| GB OFF and BLOCK        | The generator breaker opens, and the genset activates the stop sequence. When the genset is stopped, it is blocked for start.  |           | ●              |           |           |            | P      |
| Enable GB black close   | When the input is activated, the controller is allowed to close the generator on a black busbar, providing that the frequency and voltage are inside the limits in parameter 2110.   | ●         | ●              | ●         | ●         | ●          | C      |
| SEMI-AUTO mode          | Changes the running mode to SEMI-AUTO.   | ●         |                | ●         | ●         | ●          | P      |
| Test mode               | Changes the running mode to test.  | ●         | ●              |           | ●         | ●          | P      |
| AUTO mode               | Changes the running mode to AUTO.  |           | ●              | ●         | ●         | ●          | P      |
| Manual mode             | Changes the running mode to Manual.  |           | ●              | ●         |           | ●          | P      |
| Block mode              | Changes the running mode to Block.   | ●         | ●              | ●         | ●         |            | C      |
| Total test              | This input is logged in the event log to show that there was a planned mains failure.  | ●         | ●              | ●         | ●         | ●          | C      |
| Enable mode shift       | If there is a mains failure, the input activates the mode shift function, and the controller follows the AMF sequence. When the input is configured, the setting in parameter 7081 (Mode shift) is disregarded.                          | ●         | ●              | ●         | ●         | ●          | C      |
| Deload                  | A running genset starts to ramp down the power.  | ●         |                |           |           |            | C      |
| Mains OK                | Disables the Mains OK delay timer. The mains breaker can only close if the input is activated.   | ●         | ●              | ●         | ●         | ●          | C      |
| Access lock             | Activating the access lock input deactivates the control display buttons. It is only possible to view measurements, alarms and the log.  | ●         | ●              | ●         | ●         | ●          | C      |
| Remote alarm ack.       | Acknowledges all activated alarms, and the alarm LED on the display stops flashing.  | ●         | ●              | ●         | ●         | ●          | C      |
| Shutdown override       | This input deactivates all protections except the over-speed protections, the emergency stop input, the fast over-current protection, and the EIC over-speed protection. A special   | ●         | ●              | ●         | ●         |            | C      |

| Function                         | Details   | AUTO mode | SEMI-AUTO mode | Test mode | Man. mode | Block mode | Type * |
|----------------------------------|---|-----------|----------------|-----------|-----------|------------|--------|
|                                  | cool down timer is used in the stop sequence after activation of this input.  |           |                |           |           |            |        |
|                                  | Active alarms for deactivated protections are shown in the alarm list and log, but the failclass is still inhibited.  |           |                |           |           |            |        |
| Battery test                     | Activates the starter without starting the genset. If the battery is weak, the test makes the battery voltage to drop more than acceptable, and an alarm is activated.  | ●         | ●              |           |           |            | P      |
| Temperature control              | This input is part of the idle mode function. When the input is high, the genset starts. It starts at high or low speed, depending on the activation of the low speed input. When the input is deactivated, the genset goes to idle mode (low speed = ON), or it stops (low speed = OFF). | ●         | ●              | ●         |           |            | C      |
| Switchboard error                | The input stops or blocks the genset, depending on running status.  | ●         | ●              | ●         | ●         | ●          | C      |
| Allow safe regeneration          | See the <b>CAN bus engine communication manual</b> for details.   | ●         | ●              | ●         | ●         |            | C      |
| Simulate start button push       | This input is used to simulate the start button being pushed.   |           | ●              | ●         | ●         |            | P      |
| Simulate stop button push        | This input is used to simulate the stop button being pushed.  |           | ●              | ●         | ●         |            | P      |
| Simulate GB close button push    | This input is used to simulate the close breaker (generator) button being pushed.   |           | ●              | ●         | ●         |            | P      |
| Simulate GB open button push     | This input is used to simulate the open breaker (generator) button being pushed.  |           | ●              | ●         | ●         |            | P      |
| Simulate MB close button push    | This input is used to simulate the close breaker (mains) button being pushed.   |           | ●              | ●         | ●         |            | P      |
| Simulate MB open button push     | This input is used to simulate the open breaker (mains) button being pushed.  |           | ●              | ●         | ●         |            | P      |
| Simulate AUTO mode button push   | This input is used to simulate the AUTO mode button being pushed.   |           | ●              | ●         | ●         |            | P      |
| Simulate MANUAL mode button push | This input is used to simulate the MANUAL mode button being pushed.   |           | ●              | ●         | ●         |            | P      |
| Simulate alarm list button push  | This input is used to simulate the alarms button being pushed.  |           | ●              | ●         | ●         |            | P      |

**NOTE** \* C = Continuous, P = Pulse

## 6.4.2 Relay output functions

| Function             | Activated when   |
|----------------------|--|
| Not used             | The digital output is not used.  |
| Status ok            | The controller status is okay.   |
| Horn                 | An alarm is activated and not silenced.  |
| Start prepare        | The start sequence activates the start prepare.  |
| Starter (Crank)      | The start sequence activates the crank.  |
| Run coil             | The start sequence activates the run coil.   |
| Stop coil            | The stop sequence activates the stop coil.   |
| Double starter       | The start sequence activates the double starter.   |
| Siren                | An alarm is activated and not silenced.  |
| Keyswitch            | The AGC has had power for 5 seconds, and the extended stop timer is not running.                                       |
| DEF tank output      | This output controls the DEF pump. The controller activates the relay when the DEF level is below the start limit.     |
| Generic fluid output | This output controls the fluid pump. The controller activates the relay when the fluid level is below the start limit. |
| Fuel tank output     | This relay controls the fuel pump. The controller activates the relay when the fuel level is below the start limit.    |
| Semi mode            | SEMI-AUTO mode is activated.   |
| Auto mode            | AUTO mode is activated.  |
| Test mode            | Test mode is activated.  |
| Block mode           | Block mode is activated.   |
| Manual mode          | MANUAL mode is activated.  |
| SDU fault reset      | This output activates the fault reset input on the SDU 104.  |
| SDU watchdog         | This output activates the watchdog input on the SDU 104.   |

## 6.5 Other functions

### 6.5.1 Demand of peak currents

It is possible to have two different readings shown in the display:

1. **I thermal demand** shows the average maximum peak current over a time interval.
2. **I max. demand** shows the latest maximum peak current value.

#### I thermal demand

This measurement is used to simulate a bimetallic system, which is specifically suited for indication of thermal loads in conjunction with for example cables and transformers.

The calculated average is **not** the same as the average current over time. The I thermal demand value is an average of the maximum peak current in the adjustable time interval.

The measured peak currents are sampled once every second, and every six seconds an average peak value is calculated. If the peak value is higher than the previous maximum peak value, it is used to calculate a new average. The thermal demand period will provide an exponential thermal characteristic.

The time interval in which the average maximum peak current is calculated can be adjusted or reset. If the value is reset, it will be logged in the event log and the reading on the display is reset to 0\*.

#### Generator > Current protections > Peak and Mean values

| Parameter | Text  | Range            | Default  |
|-----------|-------|------------------|----------|
| 6841      | Timer | 0.0 to 20.0 min. | 8.0 min. |
| 6842      | Reset | OFF<br>ON        | OFF      |

#### I max demand

When a new maximum peak current is detected, the value is shown on the display, and updated every six seconds. If the value is reset, it will be logged in the event log.

#### Generator > Current protections > Peak and Mean values

| Parameter | Text  | Range     | Default |
|-----------|-------|-----------|---------|
| 6843      | Reset | OFF<br>ON | OFF     |

**NOTE** Both reset functions are also available as commands through M-Logic.

### 6.5.2 No AVR regulation

The AGC 150 Stand-alone controller does not regulate the generator's AVR.

## 7. Mains functions

### 7.1 Mains breaker

#### 7.1.1 Breaker settings

Breakers > Mains breaker > Breaker configuration

| Parameter | Text           | Range         | Default |
|-----------|----------------|---------------|---------|
| 7082      | MB close delay | 0.0 to 30.0 s | 0.5 s   |
| 7085      | Load time      | 0.0 to 30.0 s | 0.0 s   |

#### 7.1.2 Breaker sequences

Set points for MB control

| Parameter | Text           | Description  |
|-----------|----------------|--|
| 7081      | Mode shift     | When enabled, regardless of the actual plant running mode, if there is a mains failure, the controller follows the AMF sequence. |
| 7082      | MB close delay | The time from GB OFF to MB ON.   |
| 7085      | Load time      | After opening the breaker, the MB ON sequence is not initiated before this delay has expired.                                    |

If there is no MB in the application drawing (see *Application configuration* in the utility software), then the relays for opening/closing and inputs for feedbacks normally used for MB control/supervision become configurable.

Mains > AMF functions > AMF timers

| Parameter | Text       | Range                           | Default        |
|-----------|------------|---------------------------------|----------------|
| 7081      | Mode shift | Mode shift OFF<br>Mode shift ON | Mode shift OFF |

Breakers > Mains breaker > Breaker configuration

| Parameter | Text             | Range         | Default |
|-----------|------------------|---------------|---------|
| 7082      | MB close delay   | 0.0 to 30.0 s | 0.5 s   |
| 7085      | Spring load time | 0.0 to 30.0 s | 0.0 s   |

#### AMF MB opening

If the controller operates in Automatic Mains Failure (AMF), it is necessary to select the functionality of the mains breaker opening function. This can be helpful, when the MB can only be operated with voltage on the mains or on the busbar.

Mains > AMF functions > Start seq. in AMF mode

| Parameter | Text                  | Range  | Default                |
|-----------|-----------------------|--|------------------------|
| 7065      | Start-up fail control | Start engine + open MB<br>Start engine<br>Open MB when eng ready | Start engine + open MB |

#### Mains failure control sequences (parameter 7065)

| Setting                | Sequence with no failure                 | Sequence with start failure              |
|------------------------|--|--|
| Start engine + open MB | 1. Mains failure delay timer is running. | 1. Mains failure delay timer is running. |

| Setting  | Sequence with no failure  | Sequence with start failure  |
|--|---|--|
|  | 2. Mains breaker opens.<br>3. Engine starts.<br>4. Volt/Hz OK timer is running.<br>5. Generator breaker closes.   | 2. Mains breaker opens.<br>3. Engine tries to start.<br>4. Generator start failure.  |
| Start engine                                       | 1. Mains failure delay timer is running.<br>2. Engine starts.<br>3. Volt/Hz OK timer is running.<br>4. Mains breaker opens.<br>5. Generator breaker closes. | 1. Mains failure delay timer is running.<br>2. Engine tries to start.<br>3. Generator start failure.<br>4. Mains breaker opens.        |
| Open MB when eng ready (only in genset controller) | 1. Mains failure delay timer is running.<br>2. Engine starts.<br>3. Volt/Hz OK timer is running.<br>4. Mains breaker opens.<br>5. Generator breaker closes. | 1. Mains failure delay timer is running.<br>2. Engine tries to start.<br>3. Generator start failure.<br>4. Mains breaker stays closed. |

#### Mains > AMF functions > AMF timers

| Parameter | Text                  | Range          | Default |
|-----------|-----------------------|----------------|---------|
| 7061      | U mains failure timer | 0.5 to 990.0 s | 5.0 s   |
| 7062      | Mains OK Delay U      | 2 to 9900 s    | 60 s    |
| 7071      | f mains failure timer | 0.5 to 990.0 s | 5.0 s   |
| 7072      | Mains OK Delay f      | 2 to 9900 s    | 60 s    |
| 7081      | Mode shift            | OFF<br>ON      | OFF     |

#### Mains > Voltage and freq. limits > Voltage settings


| Parameter | Text        | Range      | Default |
|-----------|-------------|------------|---------|
| 7066      | U unbalance | 2 to 100 % | 100 %   |

The voltage unbalance must be below the unbalance set point before the controller can treat the voltage as okay. The lower the set point, the less voltage imbalance is accepted before a mains failure occurs.


#### Breakers > Mains breaker > Breaker configuration

| Parameter | Text           | Range         | Default |
|-----------|----------------|---------------|---------|
| 7082      | MB close delay | 0.0 to 30.0 s | 0.5 s   |
| 7085      | Load time*     | 0.0 to 30.0 s | 0.0 s   |

Example 1: Mains fail control (Start engine and open MB)

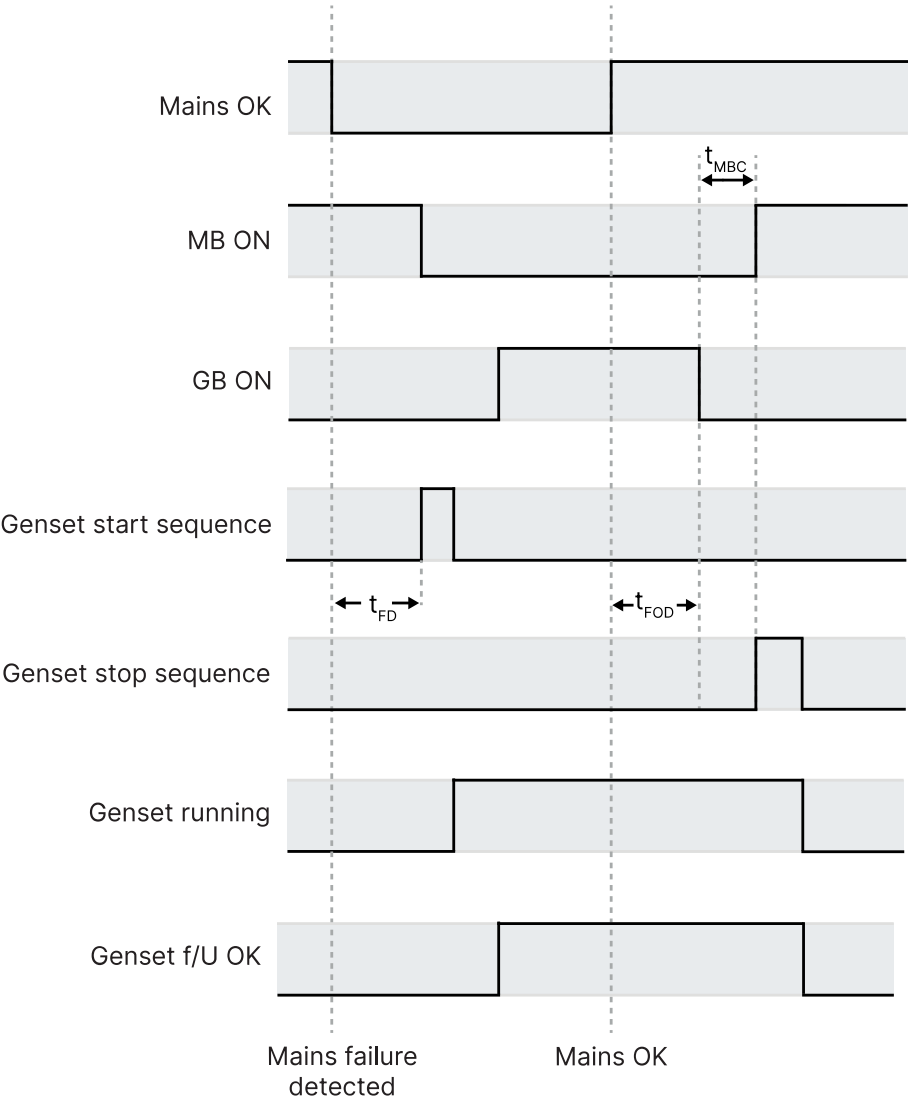

Example 2: Mains fail control (Start engine)

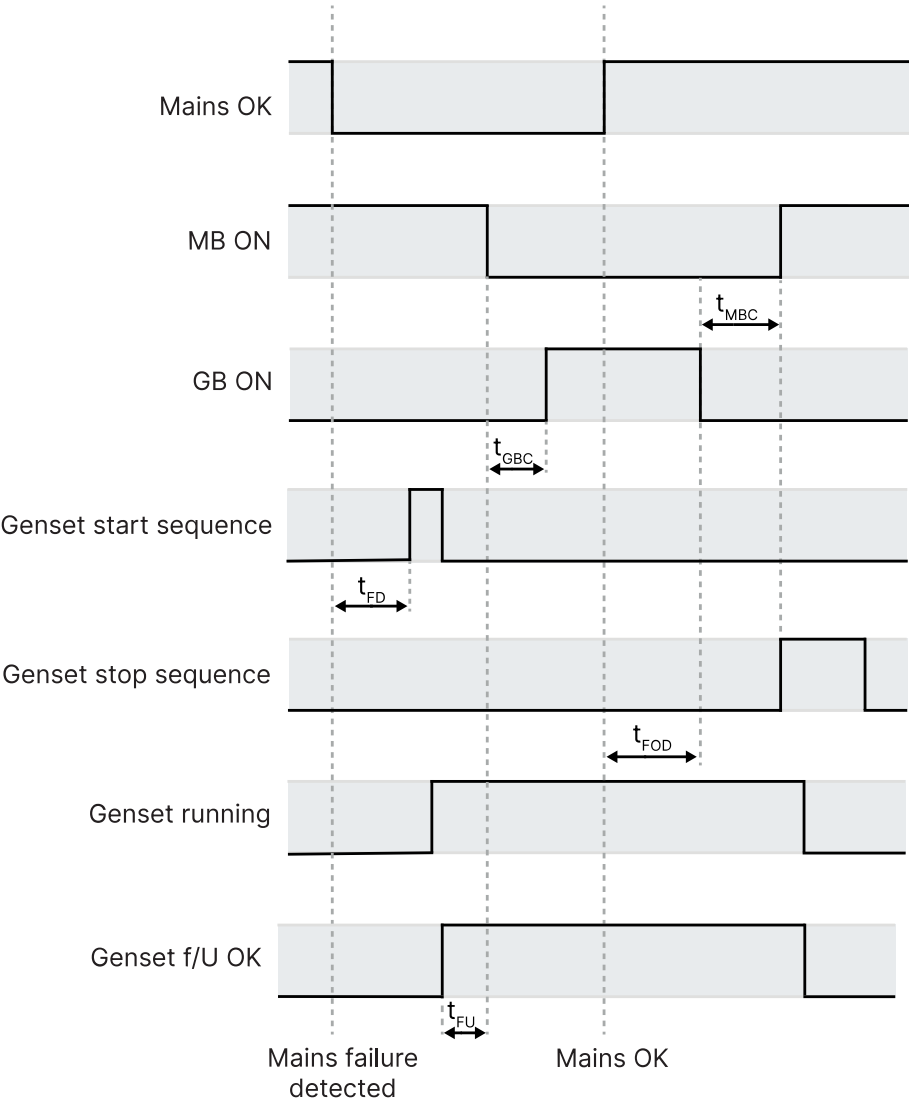


Conditions for breaker operations

The breaker sequences depend on the breaker positions and the frequency/voltage measurements.


| Sequence               | Condition   |
|------------------------|---|
| MB ON, direct closing  | Mains frequency/voltage OK<br>GB open                 |
| MB OFF, direct opening | Alarms with fail classes: Shut down or Trip MB alarms |

### 7.1.3 Flowcharts

**MB open sequence flowchart**

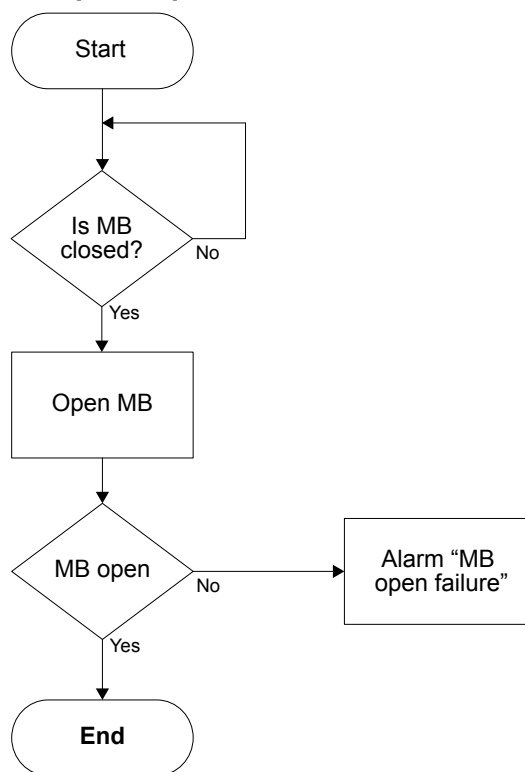

**MB close sequence flowchart**

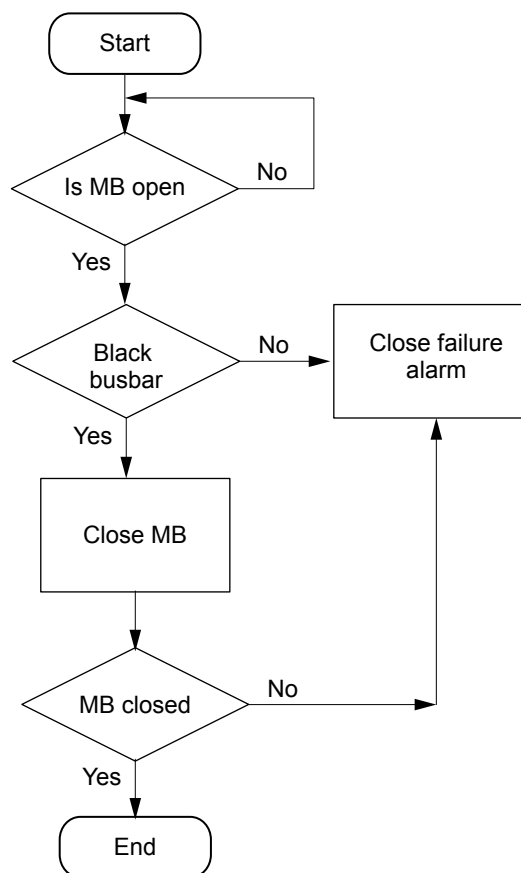


## 7.1.4 Digital mains breaker control

The controller normally executes the Automatic Mains Failure sequence based on the parameters in the system setup. Besides these parameters, it is possible to configure the *Mains OK* digital to be used to control the mains return sequence. The purpose of this function is to let an external device (for example, a PLC) or an operator control the mains return sequence.

The flowchart below shows that if the input is configured, it needs to be activated (by a pulse) to start the mains return sequence. The load continues on generator supply if the input is not activated.

The mains OK delay is not used when the *Mains OK* input is configured.

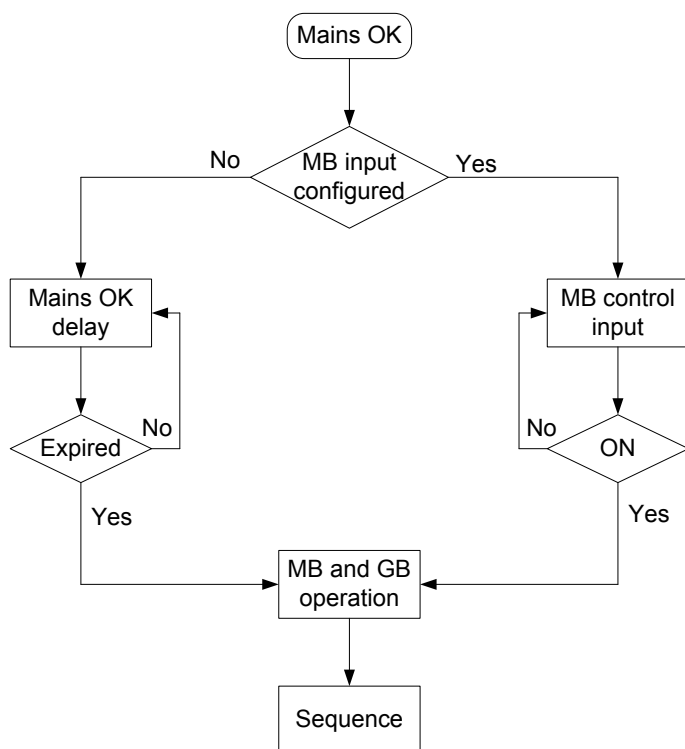

## 7.1.5 Breaker failures

### Breakers > Mains breaker > Breaker monitoring > MB Open fail

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2201      | Timer      | 1.0 to 10.0 s      | 2.0 s    |
| 2202      | Output A   | Relays and M-Logic | Not used |
| 2203      | Output B   | Relays and M-Logic | Not used |
| 2204      | Enable     | ON                 | ON       |
| 2205      | Fail class | Fail classes       | Warning  |

### Breakers > Mains breaker > Breaker monitoring > MB Close fail

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2211      | Timer      | 1.0 to 5.0 s       | 2.0 s    |
| 2212      | Output A   | Relays and M-Logic | Not used |
| 2213      | Output B   | Relays and M-Logic | Not used |
| 2214      | Enable     | ON                 | ON       |
| 2215      | Fail class | Fail classes       | Warning  |

**Breakers > Mains breaker > Breaker monitoring > MB Pos fail**

| Parameter | Text       | Range              | Default  |
|-----------|------------|--------------------|----------|
| 2221      | Timer      | 1.0 to 5.0 s       | 1.0 s    |
| 2222      | Output A   | Relays and M-Logic | Not used |
| 2223      | Output B   | Relays and M-Logic | Not used |
| 2224      | Enable     | ON                 | ON       |
| 2225      | Fail class | Fail classes       | Warning  |

## 8. AC protections

### 8.1 About protections

#### 8.1.1 Protections in general

All protection set points are a percentage of the nominal values.

For most of the protections a set point and time delay is selected. When the timer runs out, the output is activated. The operate time is the delay setting + the reaction time.

When setting up the controller, the measuring class of the controller and an adequate safety margin has to be taken into consideration, for example:

- A power generation system must not reconnect to a network when the voltage is  $< 85\%$  of  $U_{NOM} \pm 0\%$  or  $> 110\% \pm 0\%$ . To ensure reconnection within this interval, the controller's tolerance/accuracy has to be taken into consideration. If the reconnection tolerance is  $\pm 0\%$ , set a controller's set points 1-2 % higher/lower than the actual set point.

#### General parameter ranges for protections

| Setting    | Range  |
|------------|--|
| Output A   | Not used   |
| Output B   | 12 relays: 5, 6, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18<br>External I/O: Relays available in the connected CIO(s)<br>Limits |
| Enable     | OFF<br>ON  |
| Fail class | See the controller type  |

#### Inhibits

You can only select inhibits using the utility software. Each alarm has a selection list for the inhibit conditions. Inhibit of the alarm is active as long as one of the selected inhibit functions are active.

#### 8.1.2 Phase-neutral voltage trip

If the voltage alarms are to work based on phase-neutral measurements, the voltage detection type for both generator and busbar must be set to phase neutral.

##### Generator > Voltage protections > Voltage detect. type

| Parameter | Text               | Range                            | Default       |
|-----------|--------------------|----------------------------------|---------------|
| 1201      | G U detection type | Phase - Phase<br>Phase - Neutral | Phase - Phase |

##### Busbar > Voltage protections > Voltage detect. type

| Parameter | Text                | Range                            | Default       |
|-----------|---------------------|----------------------------------|---------------|
| 1202      | BB U detection type | Phase - Phase<br>Phase - Neutral | Phase - Phase |

As shown in the vector diagram below, there is a difference in voltage values at an error situation for the phase-neutral voltage and the phase-phase voltage.


### Example: Actual measurements at a 10 % under-voltage situation in a 400/230 volt system

|                     | Phase-neutral | Phase-phase |
|---------------------|---------------|-------------|
| Nominal voltage     | 400/230       | 400/230     |
| Voltage, 10 % error | 380/207       | 360/185     |

The alarm will occur at two different voltage levels, even though the alarm set point is 10 % in both cases.

The 400 V AC system below shows that the phase-neutral voltage must change 20 %, when the phase-phase voltage changes 40 volts (10 %).

### Example

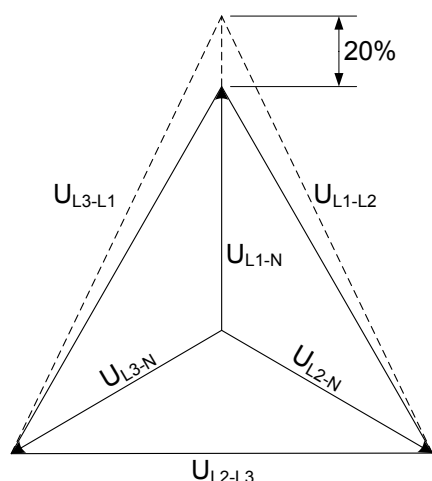

$U_{NOM} = 400/230 \text{ V AC}$

#### Error measurements

- $U_{L1L2} = 360 \text{ V AC}$
- $U_{L3L1} = 360 \text{ V AC}$
- $U_{L1-N} = 185 \text{ V AC}$
- $\Delta U_{PH-N} = 20 \%$

## 8.1.3 Phase sequence error and phase rotation

The controller monitors the rotation of the voltage, and activates an alarm if the voltage is rotating in the wrong direction. The controller can monitor the rotation in both directions.

However, these protections are not relevant, since the AGC 150 Stand-alone controller does not synchronise and connect power sources.

## 8.2 Generator protections

The number of protections depend on the software option.



### More information

See the **Data sheet** for the protections for each software option.

The *operate time* is defined in IEC 447-05-05 (from the instant when the need for protection arises, to when the controller output has responded). For each protection, the *operate time* is given for the minimum user-defined time delay.

### Generator protections

| Protection                        | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|-----------------------------------|------------------------|-------------------|--------------|--------|
| Over-voltage                      | $U>, U>>$              | 59                | < 200 ms     | 2      |
| Under-voltage                     | $U<, U<<$              | 27                | < 200 ms     | 3      |
| Voltage unbalance                 | $UUB>$                 | 47                | < 200 ms*    | 1      |
| Over-current                      | $3I>, 3I>>$            | 50TD              | < 100 ms     | 4      |
| Fast over-current (short circuit) | $3I>>>$                | 50/50TD           | < 50 ms      | 2      |


| Protection  | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|---|------------------------|-------------------|--------------|--------|
| Unbalance current   | IUB>                   | 46                | < 200 ms*    | 2      |
| Over-frequency  | f>, f>>                | 81O               | < 200 ms     | 3      |
| Under-frequency   | f<, f<<                | 81U               | < 200 ms     | 3      |
| Overload  | P>, P>>                | 32                | < 200 ms     | 4      |
| Low power   | -                      | -                 | < 100 ms     | 1      |
| Reverse power   | P<, P<<                | 32R               | < 200 ms     | 2      |
| Reactive power export (Over-excitation)                     | Q>, Q>>                | 40O               | < 200 ms     | 1      |
| Reactive power import/loss of excitation (under-excitation) | Q<, Q<<                | 40U               | < 200 ms     | 1      |

**NOTE** \* These operate times include the minimum user-defined delay of 100 ms.

## 8.2.1 Over-voltage (ANSI 59)

| Protection   | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|--------------|-----------------------|-------------------|--------------|
| Over-voltage | U>, U>>               | 59                | < 100 ms     |

The alarm response is based on the highest phase-to-phase voltage, or the highest phase-to-neutral voltage, from the source, as measured by the controller. The phase-to-phase voltage is the default.

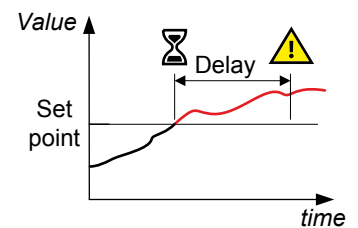


Generator > Voltage protections > Over-voltage > G U> [1 or 2]

| Parameter    | Text       | Range        | G U> 1  | G U> 2  |
|--------------|------------|--------------|---------|---------|
| 1151 or 1161 | Set point  | 100 to 130 % | 103 %   | 105 %   |
| 1152 or 1162 | Timer      | 0.1 to 100 s | 10 s    | 5 s     |
| 1155 or 1165 | Enable     | OFF<br>ON    | OFF     | OFF     |
| 1156 or 1166 | Fail class | Fail classes | Warning | Warning |

## 8.2.2 Under-voltage (ANSI 27)

| Protection    | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------|-----------------------|-------------------|--------------|
| Under-voltage | U<, U<<               | 27                | < 100 ms     |

The alarm response is based on the lowest phase-to-phase voltage, or the lowest phase-to-neutral voltage, from the source, as measured by the controller. The phase-to-phase voltage is the default.

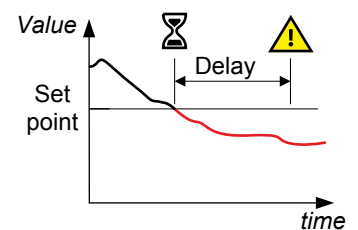

| Parameter          | Text       | Range        | G U< 1  | G U< 2  | G U< 3  |
|--------------------|------------|--------------|---------|---------|---------|
| 1171, 1181 or 1191 | Set point  | 40 to 100 %  | 97 %    | 95 %    | 95 %    |
| 1172, 1182 or 1192 | Timer      | 0.1 to 100 s | 10 s    | 5 s     | 5 s     |
| 1175, 1185 or 1195 | Enable     | OFF<br>ON    | OFF     | OFF     | OFF     |
| 1176, 1186 or 1196 | Fail class | Fail classes | Warning | Warning | Warning |

**NOTE** Under-voltage protection is inhibited, when the controller is in idle mode.


### 8.2.3 Voltage unbalance (ANSI 47)

| Protection                            | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------------------------------|-----------------------|-------------------|--------------|
| Voltage unbalance (voltage asymmetry) | UUB>                  | 47                | < 200 ms*    |

**NOTE** \* The operate time includes the minimum user-defined delay of 100 ms.

The alarm response is based on the highest difference between any of the three phase-to-phase voltage or phase-to-neutral true RMS values and the average voltage, as measured by the controller. The phase-to-phase voltage is the default.

If phase-to-phase voltages are used, the controller calculates the average phase-to-phase voltage. The controller then calculates the difference between each phase-to-phase voltage and the average voltage. Finally, the controller divides the maximum difference by the average voltage to get the voltage unbalance.

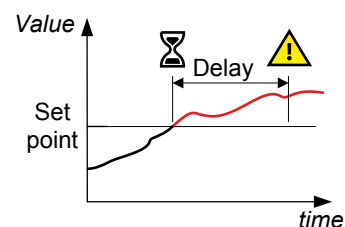


| Parameter | Text       | Range        | Default |
|-----------|------------|--------------|---------|
| 1511      | Set point  | 0 to 50 %    | 10 %    |
| 1512      | Timer      | 0.1 to 100 s | 10 s    |
| 1515      | Enable     | OFF<br>ON    | OFF     |
| 1516      | Fail class | Fail classes | Trip GB |

### 8.2.4 Over-current (ANSI 50TD)

| Protection   | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|--------------|-----------------------|-------------------|--------------|
| Over-current | 3I>, 3I>>             | 50TD              | < 100 ms     |

The alarm response is based on the highest phase current true RMS value from the source, as measured by the controller.

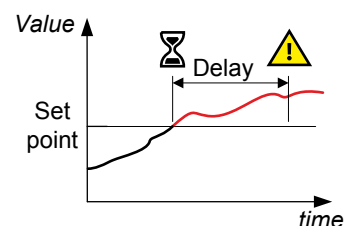


| Parameter                | Text       | Range         | I> 1    | I> 2    | I> 3    | I> 4    |
|--------------------------|------------|---------------|---------|---------|---------|---------|
| 1031, 1041, 1051 or 1061 | Set point  | 50 to 200 %   | 115 %   | 120 %   | 115 %   | 120 %   |
| 1032, 1042, 1052 or 1062 | Timer      | 0.1 to 3200 s | 10 s    | 5 s     | 10 s    | 5 s     |
| 1035, 1045, 1055 or 1065 | Enable     | OFF<br>ON     | ON      | ON      | ON      | ON      |
| 1036, 1046, 1056 or 1066 | Fail class | Fail classes  | Warning | Trip GB | Trip GB | Trip GB |

## 8.2.5 Fast over-current (ANSI 50/50TD)

| Protection        | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-------------------|-----------------------|-------------------|--------------|
| Fast over-current | 3I>>>                 | 50/50TD*          | < 50 ms      |

**NOTE** \* ANSI 50 applies when the Delay parameter is 0 s.

The alarm response is based on the highest phase current true RMS values from the source, as measured by the controller.

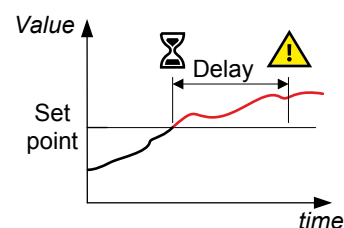


| Parameter    | Text       | Range        | I>> 1   | I>> 2   |
|--------------|------------|--------------|---------|---------|
| 1131 or 1141 | Set point  | 150 to 300 % | 150 %   | 200 %   |
| 1132 or 1142 | Timer      | 0 to 3200 s  | 2 s     | 0.5 s   |
| 1135 or 1145 | Enable     | OFF<br>ON    | OFF     | OFF     |
| 1136 or 1146 | Fail class | Fail classes | Trip GB | Trip GB |

## 8.2.6 Unbalance current (ANSI 46)

| Protection        | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-------------------|-----------------------|-------------------|--------------|
| Unbalance current | IUB>                  | 46                | < 200 ms*    |

**NOTE** \* The operate time includes the minimum user-defined delay of 100 ms.

The alarm response is based on the highest difference between any of the three phase current true RMS values, as measured by the controller. You can choose either the *Average* method (ANSI) or the *Nominal* method to calculate the current unbalance.

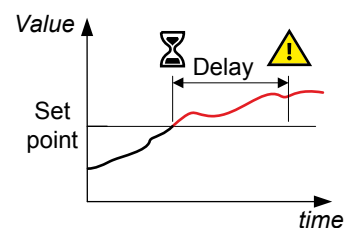

| Parameter    | Text       | Range        | Unbalance I 1 | Unbalance I 2 |
|--------------|------------|--------------|---------------|---------------|
| 1501 or 1711 | Set point  | 0 to 100 %   | 30 %          | 40 %          |
| 1502 or 1712 | Timer      | 0.1 to 100 s | 10 s          | 10 s          |
| 1505 or 1715 | Enable     | OFF<br>ON    | OFF           | OFF           |
| 1506 or 1716 | Fail class | Fail classes | Trip GB       | Trip GB       |

| Parameter | Text | Range              | Default |
|-----------|------|--------------------|---------|
| 1203      | Type | Nominal<br>Average | Nominal |

**NOTE** The *Average method* is very sensitive at low loads.

The average method uses the ANSI standard calculation method to determine current unbalance. The controller calculates the average current for the three phases. The controller then calculates the difference between each phase current and the average current. Finally, the controller divides the maximum difference by the average current to get the current unbalance.



#### Average method example

The controller controls a genset with a nominal current of 100 A. The L1 current is 80 A, the L2 current is 90 A, and the L3 current is 60 A.

The average current is 76.7 A. The difference between the phase current and the average is 3.3 A for L1, 13.3 A for L2 and 16.7 A for L3.

The current unbalance is therefore  $16.7 \text{ A} / 76.7 \text{ A} = 0.22 = 22 \%$ .

With the nominal method the controller calculates the difference between the phase with the highest current, and the phase with the lowest current. Finally, the controller divides the difference by the nominal current to get the current unbalance.



#### Nominal method example

The controller controls a genset with a nominal current of 100 A. The L1 current is 80 A, the L2 current is 90 A, and the L3 current is 60 A.

The current unbalance is  $(90 \text{ A} - 60 \text{ A}) / 100 \text{ A} = 0.3 = 30 \%$ .

## 8.2.7 Voltage dependent over-current (ANSI 50V)

| Protection                     | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|--------------------------------|-----------------------|-------------------|--------------|
| Voltage-dependent over-current | Iv>                   | 50V               | -            |

This is a voltage-dependent over-current alarm for generators without permanent magnets. This protection occurs when a short circuit is present and the voltage drops. The current rises briefly, before it falling to a lower level.

The short circuit current level can drop below the rated current of the generator, and thus the short circuit will not be tripped, if a standard ANSI 50/50TD is used. When the short circuit is present, the voltage will be low. This can be used for tripping at a lower current, when the voltage is low.

| Parameter | Text          | Range        | Default |
|-----------|---------------|--------------|---------|
| 1101      | G lv> (50 %)  | 50 to 200 %  | 110 %   |
| 1102      | G lv> (60 %)  | 50 to 200 %  | 125 %   |
| 1103      | G lv> (70 %)  | 50 to 200 %  | 140 %   |
| 1104      | G lv> (80 %)  | 50 to 200 %  | 155 %   |
| 1105      | G lv> (90 %)  | 50 to 200 %  | 170 %   |
| 1106      | G lv> (100 %) | 50 to 200 %  | 200 %   |
| 1110      | Fail class    | Fail classes | Trip GB |


### Example

There are six current and voltage level set points. The voltage levels are pre-set, so only the current levels must be set. All values are in percentage of the nominal settings. The default values are shown in the table below.

| Parameter | Voltage level<br>(not adjustable) | Current level<br>(adjustable) |
|-----------|-----------------------------------|-------------------------------|
| 1101      | 50 %                              | 50 %                          |
| 1102      | 60 %                              | 55 %                          |
| 1103      | 70 %                              | 65 %                          |
| 1104      | 80 %                              | 80 %                          |
| 1105      | 90 %                              | 100 %                         |
| 1106      | 100 %                             | 130 %                         |

The set points can be shown on a curve:

Current [%]

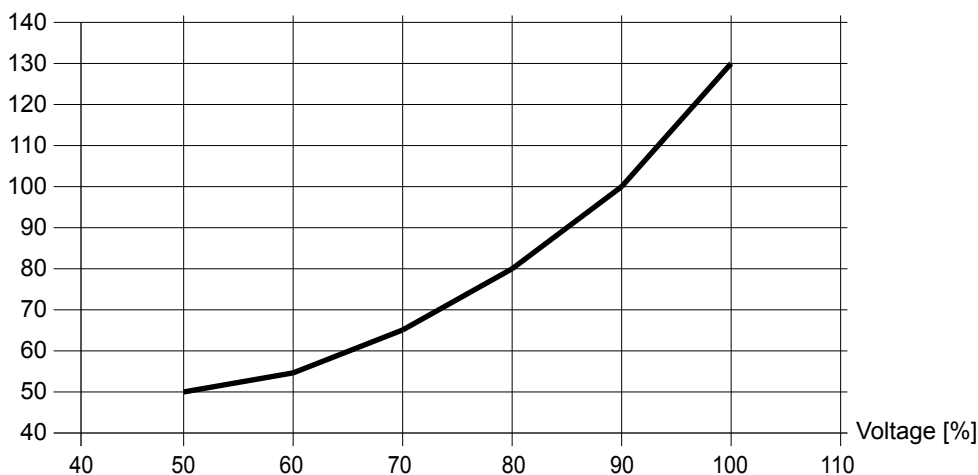

When the operating values are above the curve, the breaker is tripped. The generator breaker also trips when the generator voltage is below 50 % of rated, and the current is above 50 % of rated.

## 8.2.8 Neutral inverse time over-current (ANSI 50N)


| Protection                        | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-----------------------------------|-----------------------|-------------------|--------------|
| Neutral inverse time over-current |                       | 50N               | -            |

This is the inverse time over-current alarm for the neutral current measurement.

The alarm response is based on the unfiltered (except for anti-aliasing) neutral current, as measured by the 4th current measurement.

The alarm response time depends on an approximated integral of the current measurement over time. The integral is only updated when the measurement is above the activation threshold.

**NOTE** The diagram on the right is a simplified representation of this alarm. The diagram does not show the integral over time.

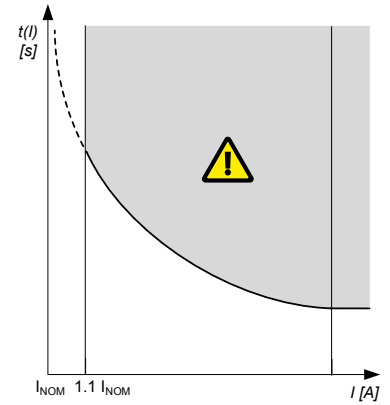

#### Generator > Current protections > Neut. inv. t. o-curr.

| Parameter | Text          | Range  | Default     |
|-----------|---------------|--|-------------|
| 1721      | Type          | IEC Inverse<br>IEC Very Inverse<br>IEC Extremely inverse<br>IEEE Moderately Inv.<br>IEEE Very Inverse<br>IEEE Extremely Inv.<br>Custom | IEC Inverse |
| 1722      | Set point     | 2. to 120 %  | 30 %        |
| 1723      | Set point TMS | 0.01 to 100.00   | 1.00        |
| 1724      | Set point k   | 0.001 to 32.000 s  | 0.140 s     |
| 1725      | Set point c   | 0.000 to 32.000 s  | 0.000 s     |
| 1726      | Set point a   | 0.001 to 32.000 s  | 0.020 s     |
| 1728      | Enable        | OFF<br>ON  | OFF         |
| 1729      | Fail class    | Fail classes   | Trip GB     |



#### More information

See **Inverse time over-current (ANSI 51)** for the calculation method, the standard curves, and information about the definite time characteristic.


### 8.2.9 Earth fault inverse time over-current (ANSI 50G)

| Protection                            | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------------------------------|-----------------------|-------------------|--------------|
| Earth fault inverse time over-current |                       | 50G               | -            |

This is the inverse time over-current alarm for the ground current measurement.

The alarm response is based on the ground current, as measured by the 4th current measurement filtered to attenuate the third harmonic (at least 18 dB).

**NOTE** The diagram on the right is a simplified representation of this alarm. The diagram does not show the integral over time.

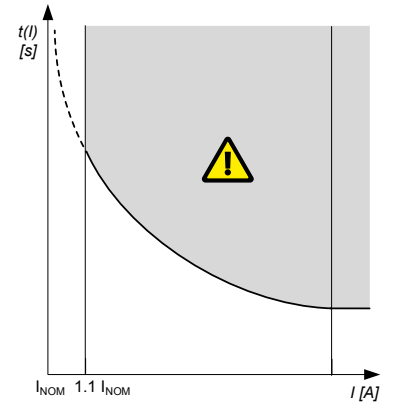

#### Generator > Current protections > Earth f. inv t. o-curr.

| Parameter | Text          | Range  | Default |
|-----------|---------------|--|---------|
| 1731      | Type          | IEC Inverse<br>IEC Very Inverse<br>IEC Extremely inverse<br>IEEE Moderately Inv.<br>IEEE Very Inverse<br>IEEE Extremely Inv.<br>Custom | -       |
| 1732      | Set point     | 2 to 120 %   | 10 %    |
| 1733      | Set point TMS | 0.01 to 100.00   | 1.00    |
| 1734      | Set point k   | 0.001 to 32.000 s  | 0.140 s |
| 1735      | Set point c   | 0.000 to 32.000 s  | 0.000 s |
| 1736      | Set point a   | 0.001 to 32.000 s  | 0.020 s |
| 1738      | Enable        | OFF<br>ON  | OFF     |
| 1739      | Fail class    | Fail classes   | Trip GB |



#### More information


See **Inverse time over-current (ANSI 51)** for the calculation method, the standard curves, and information about the definite time characteristic.

### 8.2.10 Neutral over-current (4th CT)

| Protection                    | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-------------------------------|-----------------------|-------------------|--------------|
| Neutral over-current (4th CT) |                       |                   | -            |

This is the over-current alarm for the neutral current measurement.

The alarm response is based on the unfiltered neutral current, as measured by the 4th current.

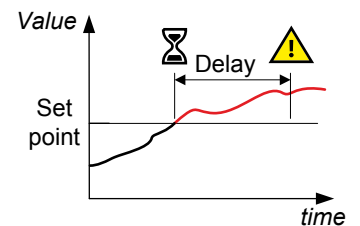


| Parameter      | Text       | Range         | Ien 1   | In > 2  |
|----------------|------------|---------------|---------|---------|
| 14210 or 14220 | Enable     | OFF<br>ON     | OFF     | OFF     |
| 14211 or 14221 | Set point  | 2 to 120 %    | 30 %    | 30 %    |
| 14212 or 14222 | Timer      | 0.1 to 3200 s | 10 s    | 10 s    |
| 14213 or 14223 | Fail class | Fail classes  | Warning | Warning |

## 8.2.11 Earth fault over-current (4th CT)

| Protection                        | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-----------------------------------|-----------------------|-------------------|--------------|
| Earth fault over-current (4th CT) |                       |                   | -            |

This is the over-current alarm for the earth current measurement.

The alarm response is based on the ground current, as measured by the 4th current measurement filtered to attenuate the third harmonic (at least 18 dB).

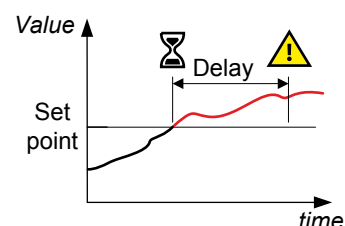


| Parameter      | Text       | Range         | Ie > 1  | Ie > 2  |
|----------------|------------|---------------|---------|---------|
| 14230 or 14240 | Enable     | OFF<br>ON     | OFF     | OFF     |
| 14231 or 14241 | Set point  | 2 to 120 %    | 10 %    | 10 %    |
| 14232 or 14242 | Timer      | 0.1 to 3200 s | 10 s    | 10 s    |
| 14233 or 14243 | Fail class | Fail classes  | Warning | Warning |

## 8.2.12 Over-frequency (ANSI 810)

| Protection     | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|----------------|-----------------------|-------------------|--------------|
| Over-frequency | f>, f>>               | 810               | < 100 ms     |

The alarm response is based on the fundamental frequency (based on phase voltage), due to the selection made in parameter 1204.

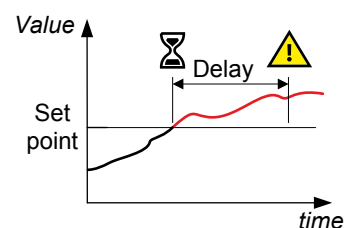

| Parameter          | Text      | Range        | G f > 1 | G f > 2 | G f > 3 |
|--------------------|-----------|--------------|---------|---------|---------|
| 1211, 1221 or 1231 | Set point | 100 to 120 % | 103 %   | 105 %   | 105 %   |
| 1212, 1222 or 1232 | Timer     | 0.2 to 100 s | 10 s    | 5 s     | 5 s     |
| 1215, 1225 or 1235 | Enable    | OFF          | OFF     | OFF     | OFF     |

| Parameter          | Text       | Range        | G f > 1 | G f > 2 | G f > 3 |
|--------------------|------------|--------------|---------|---------|---------|
|                    |            | ON           |         |         |         |
| 1216, 1226 or 1236 | Fail class | Fail classes | Warning | Warning | Warning |


#### Generator > Frequency protections > Frequency detect. type

| Parameter | Text | Range  | Default        |
|-----------|------|--|----------------|
| 1204      | Type | L1<br>L2<br>L3<br>L1 or L2 or L3<br>L1 and L2 and L3 | L1 or L2 or L3 |

### 8.2.13 Under-frequency (ANSI 81U)

| Protection      | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-----------------|-----------------------|-------------------|--------------|
| Under-frequency | f<, f<<               | 81U               | < 100 ms     |

The alarm response is based on the highest fundamental frequency (based on phase voltage), from the source. This ensures that the alarm only activates when all of the phase frequencies are below the set point.

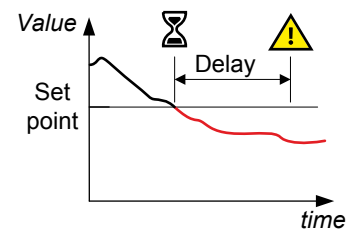

#### Generator > Frequency protections > Under-frequency > G f < [1 to 3]


| Parameter          | Text       | Range        | G f < 1 | G f < 2 | G f < 3 |
|--------------------|------------|--------------|---------|---------|---------|
| 1241, 1251 or 1261 | Set point  | 80 to 100 %  | 97 %    | 95 %    | 95 %    |
| 1242, 1252 or 1262 | Timer      | 0.2 to 100 s | 10 s    | 5 s     | 5 s     |
| 1245, 1255 or 1265 | Enable     | OFF<br>ON    | OFF     | OFF     | OFF     |
| 1246, 1256 or 1266 | Fail class | Fail classes | Warning | Warning | Warning |

**NOTE** Under-frequency protection is inhibited, when the controller is in idle mode.

### 8.2.14 Overload (ANSI 32)

| Protection | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|------------|-----------------------|-------------------|--------------|
| Overload   | P>, P>>               | 32                | < 100 ms     |

The alarm response is based on the active power (all phases), from the source, as measured by the controller.

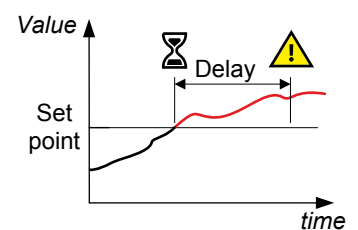


| Parameter                | Text       | Range         | P> 1    | P> 2    | P> 3    | P> 4    | P> 5    |
|--------------------------|------------|---------------|---------|---------|---------|---------|---------|
| 1451, 1461, 1471 or 1481 | Set point  | -200 to 200 % | 100 %   | 110 %   | 100 %   | 110 %   | 100 %   |
| 1452, 1462, 1472 or 1482 | Timer      | 0.1 to 3200 s | 10 s    | 5 s     | 10 s    | 5 s     | 10 s    |
| 1455, 1465, 1475 or 1485 | Enable     | OFF<br>ON     | OFF     | OFF     | OFF     | OFF     | OFF     |
| 1456, 1466, 1476 or 1486 | Fail class | Fail classes  | Warning | Trip GB | Trip GB | Trip GB | Trip GB |

### 8.2.15 Low power

| Protection | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|------------|-----------------------|-------------------|--------------|
| Low power  | -                     | -                 | < 100 ms     |

The alarm response is based on the active power (all phases), from the source, as measured by the controller.

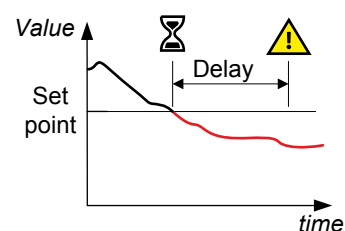


| Parameter | Text       | Range         | P<       |
|-----------|------------|---------------|----------|
| 1491      | Set point  | -200 to 200 % | 30 %     |
| 1492      | Timer      | 0.1 to 3200 s | 3200 s   |
| 1495      | Enable     | OFF<br>ON     | OFF      |
| 1496      | Fail class | Fail classes  | Trip PVB |

### 8.2.16 Reverse power (ANSI 32R)

| Protection    | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------|-----------------------|-------------------|--------------|
| Reverse power | P<, P<<               | 32R               | < 100 ms     |

The alarm response is based on the active power (all phases), to the source, as measured by the controller.

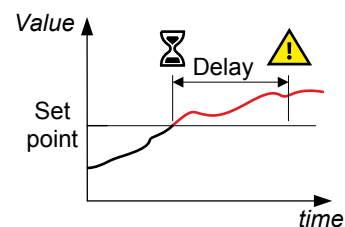


| Parameter          | Text       | Range        | -P> 1   | -P> 2   | -P > 3  |
|--------------------|------------|--------------|---------|---------|---------|
| 1001, 1011 or 1071 | Set point  | -200 to 0 %  | -5 %    | -5 %    | -5 %    |
| 1002, 1012 or 1072 | Timer      | 0.1 to 100 s | 10 s    | 10 s    | 10 s    |
| 1005, 1015 or 1075 | Enable     | OFF<br>ON    | ON      | ON      | OFF     |
| 1006, 1016 or 1076 | Fail class | Fail classes | Trip GB | Trip GB | Trip GB |

## 8.2.17 Reactive power export (ANSI 400)

| Protection                              | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---|-----------------------|-------------------|--------------|
| Reactive power export (over-excitation) | Q>, Q>>               | 400               | < 100 ms     |

The alarm response is based on the reactive power (Q) from the source, as measured and calculated by the controller. Reactive power export is when the generator is feeding an inductive load.

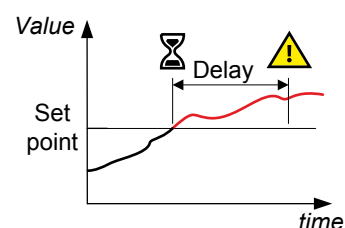


| Parameter | Text       | Range        | Default |
|-----------|------------|--------------|---------|
| 1531      | Set point  | 0 to 100 %   | 60 %    |
| 1532      | Timer      | 0.1 to 100 s | 10 s    |
| 1535      | Enable     | OFF<br>ON    | OFF     |
| 1536      | Fail class | Fail classes | Warning |

## 8.2.18 Reactive power import (ANSI 40U)

| Protection  | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---|-----------------------|-------------------|--------------|
| Reactive power import (loss of excitation/under-excitation) | Q<, Q<<               | 40U               | < 100 ms     |

The alarm response is based on the reactive power (Q) to the source, as measured and calculated by the controller. Reactive power import is when the generator is feeding a capacitive load.

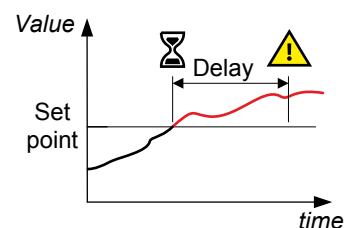

| Parameter | Text       | Range        | Default |
|-----------|------------|--------------|---------|
| 1521      | Set point  | 0 to 150 %   | 50 %    |
| 1522      | Timer      | 0.1 to 100 s | 10 s    |
| 1525      | Enable     | OFF<br>ON    | OFF     |
| 1526      | Fail class | Fail classes | Warning |

## 8.3 Busbar standard protections


| Protection        | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|-------------------|------------------------|-------------------|--------------|--------|
| Over-voltage      | U>, U>>                | 59                | < 50 ms      | 3      |
| Under-voltage     | U<, U<<                | 27                | < 50 ms      | 4      |
| Voltage unbalance | UUB>                   | 47                | < 200 ms*    | 1      |
| Over-frequency    | f>, f>>                | 81O               | < 50 ms      | 3      |
| Under-frequency   | f<, f<<                | 81U               | < 50 ms      | 4      |

**NOTE** \* The operate time includes the minimum user-defined delay of 100 ms.

### 8.3.1 Busbar over-voltage (ANSI 59)

| Protection   | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|--------------|-----------------------|-------------------|--------------|
| Over-voltage | U>, U>>               | 59                | < 50 ms      |

The alarm response is based on the highest phase-to-phase voltage, or the highest phase-to-neutral voltage, from the busbar, as measured by the controller.

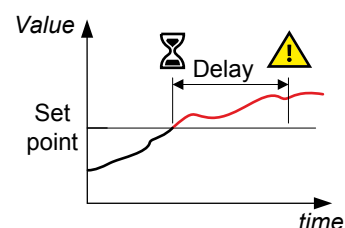

Busbar > Voltage protections > Over-voltage > BB U> [1 to 3]

| Parameter          | Text       | Range           | BB U> 1 | BB U> 2 | BB U> 3 |
|--------------------|------------|-----------------|---------|---------|---------|
| 1271, 1281 or 1291 | Set point  | 100 to 120 %    | 103 %   | 105 %   | 105 %   |
| 1272, 1282 or 1292 | Timer      | 0.04 to 99.99 s | 10 s    | 5 s     | 5 s     |
| 1275, 1285 or 1295 | Enable     | OFF<br>ON       | OFF     | OFF     | OFF     |
| 1276, 1286 or 1296 | Fail class | Fail classes    | Warning | Warning | Warning |


Busbar > Voltage protections > Voltage detect. type

| Parameter | Text | Range                        | Default     |
|-----------|------|------------------------------|-------------|
| 1202      | Type | Phase-Phase<br>Phase-Neutral | Phase-Phase |

### 8.3.2 Busbar under-voltage (ANSI 27)

| Protection    | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------|-----------------------|-------------------|--------------|
| Under-voltage | U<, U<<               | 27                | < 50 ms      |

The alarm response is based on the lowest phase-to-phase voltage, or the lowest phase-to-neutral voltage, from the busbar, as measured by the controller.

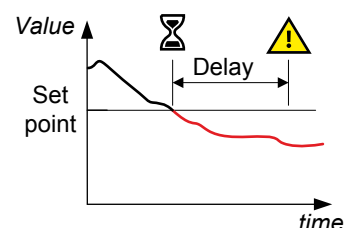

#### Busbar > Voltage protections > Under-voltage > BB U< [1 to 4]

| Parameter                | Text       | Range           | BB U< 1 | BB U< 2 | BB U< 3 | BB U< 4 |
|--------------------------|------------|-----------------|---------|---------|---------|---------|
| 1301, 1311, 1321 or 1331 | Set point  | 40 to 100 %     | 97 %    | 95 %    | 97 %    | 95 %    |
| 1302, 1312, 1322 or 1332 | Timer      | 0.04 to 99.99 s | 10 s    | 5 s     | 10 s    | 5 s     |
| 1305, 1315, 1325 or 1335 | Enable     | OFF<br>ON       | OFF     | OFF     | OFF     | OFF     |
| 1306, 1316, 1326 or 1336 | Fail class | Fail classes    | Warning | Warning | Warning | Warning |

#### Busbar > Voltage protections > Voltage detect. type

| Parameter | Text | Range                        | Default     |
|-----------|------|------------------------------|-------------|
| 1202      | Type | Phase-Phase<br>Phase-Neutral | Phase-Phase |


### 8.3.3 Busbar voltage unbalance (ANSI 47)

| Protection                            | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------------------------------|-----------------------|-------------------|--------------|
| Voltage unbalance (voltage asymmetry) | UUB>                  | 47                | < 200 ms*    |

**NOTE** \* The operate time includes the minimum user-defined delay of 100 ms.

The alarm response is based on the highest difference between any of the three busbar phase-to-phase voltage or phase-to-neutral true RMS values and the average voltage, as measured by the controller. The phase-to-phase voltage is the default.

If phase-to-phase voltages are used, the controller calculates the average phase-to-phase voltage. The controller then calculates the difference between each phase-to-phase voltage and the average voltage. Finally, the controller divides the maximum difference by the average voltage to get the voltage unbalance. See the example.

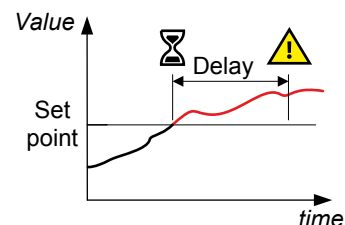

#### Busbar > Voltage protections > Voltage unbalance > BB Unbalance U

| Parameter | Text      | Range        | Default |
|-----------|-----------|--------------|---------|
| 1621      | Set point | 0 to 50 %    | 6 %     |
| 1622      | Timer     | 0.1 to 100 s | 10 s    |
| 1625      | Enable    | OFF          | OFF     |

| Parameter | Text       | Range        | Default |
|-----------|------------|--------------|---------|
|           |            | ON           |         |
| 1626      | Fail class | Fail classes | Warning |



#### Busbar voltage unbalance example

The busbar has a nominal voltage of 230 V. The L1-L2 voltage is 235 V, the L2-L3 voltage is 225 V, and the L3-L1 voltage is 210 V.


The average voltage is 223.3 V. The difference between the phase-to-phase voltage and the average is 12.7 V for L1-L2, 2.7 V for L2-L3 and 13.3 V for L3-L1.

The busbar voltage unbalance is  $13.3 \text{ V} / 223.3 \text{ V} = 0.06 = 6 \%$

### 8.3.4 Busbar over-frequency (ANSI 81O)

| Protection     | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|----------------|-----------------------|-------------------|--------------|
| Over-frequency | f>, f>>               | 81O               | < 50 ms      |

The alarm response is based on the lowest fundamental frequency (based on phase voltage), from the busbar. This ensures that the alarm only activates when all of the phase frequencies are above the set point.

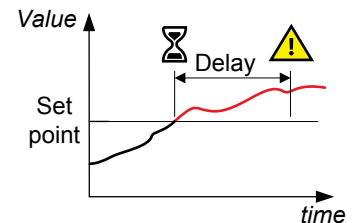

#### Busbar > Frequency protections > Over-frequency > BB f> [1 to 4]


| Parameter                | Text       | Range           | BB f> 1 | BB f> 2 | BB f> 3 | BB f> 4 |
|--------------------------|------------|-----------------|---------|---------|---------|---------|
| 1351, 1361, 1371 or 1921 | Set point  | 100 to 120 %    | 103 %   | 105 %   | 105 %   | 102 %   |
| 1352, 1362, 1372 or 1922 | Timer      | 0.04 to 99.99 s | 10 s    | 5 s     | 5 s     | 5600 s* |
| 1355, 1365, 1375 or 1925 | Enable     | OFF<br>ON       | OFF     | OFF     | OFF     | OFF     |
| 1356, 1366, 1376 or 1926 | Fail class | Fail classes    | Warning | Warning | Warning | Warning |

**NOTE** \* The range for this alarm is 1500 to 6000 s.

### 8.3.5 Busbar under-frequency (ANSI 81U)

| Protection      | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-----------------|-----------------------|-------------------|--------------|
| Under-frequency | f<, f<<               | 81U               | < 50 ms      |

The alarm response is based on the highest fundamental frequency (based on phase voltage), from the busbar. This ensures that the alarm only activates when all of the phase frequencies are below the set point.

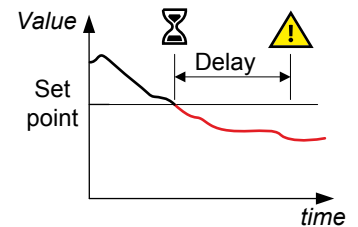

#### Busbar > Frequency protections > Under-frequency > BB f< [1 to 5]

| Parameter                      | Text       | Range           | BB f< 1 | BB f< 2 | BB f< 3 | BB f< 4 | BB f< 5 |
|--------------------------------|------------|-----------------|---------|---------|---------|---------|---------|
| 1381, 1391, 1401, 1411 or 1931 | Set point  | 80 to 100 %     | 97 %    | 95 %    | 97 %    | 95 %    | 95 %    |
| 1382, 1392, 1402, 1412 or 1932 | Timer      | 0.04 to 99.99 s | 10 s    | 5 s     | 10 s    | 5 s     | 5600 s* |
| 1385, 1395, 1405, 1415 or 1935 | Enable     | OFF<br>ON       | OFF     | OFF     | OFF     | OFF     | OFF     |
| 1386, 1396, 1406, 1416 or 1936 | Fail class | Fail classes    | Warning | Warning | Warning | Warning | Warning |

**NOTE** \* The range for this alarm is 1500 to 6000 s.


## 8.4 Mains protections

| Protection             | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|------------------------|------------------------|-------------------|--------------|--------|
| Over-current (4th CT)  | 3I>, 3I>>              | -                 | -            | 2      |
| Reverse power (4th CT) | P<, P<<                | -                 | -            | 2      |
| Overload (4th CT)      | P>, P>>                | -                 | -            | 2      |

### 8.4.1 Over-current (4th CT)

| Protection                          | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|-------------------------------------|-----------------------|-------------------|--------------|
| Over-current for 4th CT measurement | 3I>, 3I>>             | -                 | -            |

The alarm response is based on the highest phase current true RMS value from the source, as measured by the controller.

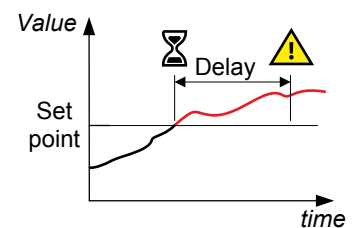


#### Mains > Protections > Current protections (4th CT) [1 to 2]

| Parameter  | Text       | Range         | I> 1    | I> 2    |
|------------|------------|---------------|---------|---------|
| 7421, 7431 | Set point  | 50 to 200 %   | 115 %   | 120 %   |
| 7422, 7432 | Timer      | 0.1 to 3200 s | 10 s    | 10 s    |
| 7425, 7435 | Enable     | OFF<br>ON     | OFF     | OFF     |
| 7426, 7436 | Fail class | Fail classes  | Warning | Warning |

### 8.4.2 Overload (4th CT)

| Protection | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|------------|-----------------------|-------------------|--------------|
| Overload   | P>, P>>               | -                 | -            |

The alarm response is based on the active power (all phases), from the source, as measured by the controller.

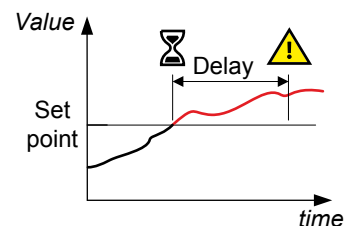


#### Mains > Protections > Power protections (4th CT) [1 to 2]

| Parameter  | Text       | Range         | P> 1    | P> 2    |
|------------|------------|---------------|---------|---------|
| 7461, 7471 | Set point  | -200 to 200 % | 100 %   | 110 %   |
| 7462, 7472 | Timer      | 0.1 to 3200 s | 10 s    | 5 s     |
| 7465, 7475 | Enable     | OFF<br>ON     | OFF     | OFF     |
| 7466, 7476 | Fail class | Fail classes  | Warning | Warning |

### 8.4.3 Reverse power (4th CT)

| Protection    | IEC symbol (IEC60617) | ANSI (IEEE C37.2) | Operate time |
|---------------|-----------------------|-------------------|--------------|
| Reverse power | P<, P<<               | -                 | -            |

The alarm response is based on the active power (all phases), to the source, as measured by the controller.

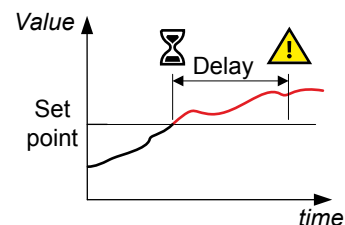

#### Mains > Protections > Power protections (4th CT) [1 to 2]

| Parameter  | Text       | Range        | -P> 1   | -P> 2   |
|------------|------------|--------------|---------|---------|
| 7441, 7451 | Set point  | -200 to 0 %  | -5 %    | -5 %    |
| 7442, 7452 | Timer      | 0.1 to 100 s | 10 s    | 10 s    |
| 7445, 7455 | Enable     | OFF<br>ON    | OFF     | OFF     |
| 7446, 7456 | Fail class | Fail classes | Warning | Warning |

## 8.5 Additional protections

| Protection | IEC symbol (IEC 60617) | ANSI (IEEE C37.2) | Operate time | Alarms |
|------------|------------------------|-------------------|--------------|--------|
| AC average | -                      | -                 | -            | 2      |

## 8.5.1 AC average

This function is intended for giving an alarm if the average of a specific measurement exceeds a set point in a certain time frame.

The AC average is calculated based on the RMS value of the three phases. For example, every time the main voltage measurement updates.

The parameters for AC average can only be configured from the utility software.

**NOTE** When the controller is in idle mode, AC average protection is inhibited.

### Generator > Average protections > Average L-L AC RMS voltage high [1 or 2]

| Parameter      | Text       | Range            | Avg. G U> L-L 1 | Avg. G U> L-L 2 |
|----------------|------------|------------------|-----------------|-----------------|
| 14001 or 14011 | Set point  | 100.0 to 120.0 % | 103.0 %         | 105.0 %         |
| 14002 or 14012 | Timer      | 0.1 to 100.0 s   | 10.0 s          | 10.0 s          |
| 14005 or 14015 | Enable     | OFF<br>ON        | OFF             | OFF             |
| 14006 Or 14016 | Fail class | Fail classes     | Warning         | Warning         |

### Generator > Average protections > Average L-L AC RMS voltage low [1 or 2]

| Parameter      | Text       | Range            | Avg. G U< L-L 1 | Avg. G U< L-L 2 |
|----------------|------------|------------------|-----------------|-----------------|
| 14021 or 14031 | Set point  | 100.0 to 120.0 % | 97.0 %          | 95.0 %          |
| 14022 or 14032 | Timer      | 0.1 to 100.0 s   | 10.0 s          | 5.0 s           |
| 14025 or 14035 | Enable     | OFF<br>ON        | OFF             | OFF             |
| 14026 or 14036 | Fail class | Fail classes     | Warning         | Warning         |

### Generator > Average protections > Average L-N AC RMS voltage high [1 or 2]

| Parameter      | Text       | Range            | Avg. G U> L-N 1 | Avg. G U> L-N 2 |
|----------------|------------|------------------|-----------------|-----------------|
| 14041 or 14051 | Set point  | 100.0 to 120.0 % | 103.0 %         | 105.0 %         |
| 14042 or 14052 | Timer      | 0.1 to 100.0 s   | 10.0 s          | 5.0 s           |
| 14045 or 14055 | Enable     | OFF<br>ON        | OFF             | OFF             |
| 14046 or 14056 | Fail class | Fail classes     | Warning         | Warning         |

### Generator > Average protections > Average L-N AC RMS voltage low [1 or 2]

| Parameter     | Text       | Range            | Avg. G U< L-N 1 | Avg. G U< L-N 2 |
|---------------|------------|------------------|-----------------|-----------------|
| 14061 or 1471 | Set point  | 100.0 to 120.0 % | 97.0 %          | 95.0 %          |
| 14062 or 1472 | Timer      | 0.1 to 100.0 s   | 10.0 s          | 5.0 s           |
| 14065 or 1475 | Enable     | OFF<br>ON        | OFF             | OFF             |
| 14066 or 1476 | Fail class | Fail classes     | Warning         | Warning         |

**Generator > Average protections > Average AC frequency high [1 or 2]**

| Parameter      | Text       | Range            | Avg. G f> 1 | Avg. G f> 2 |
|----------------|------------|------------------|-------------|-------------|
| 14081 or 14091 | Set point  | 100.0 to 120.0 % | 103.0 %     | 105.0 %     |
| 14082 or 14092 | Timer      | 0.1 to 100.0 s   | 10.0 s      | 5.0 s       |
| 14085 or 14095 | Enable     | OFF<br>ON        | OFF         | OFF         |
| 14086 or 14096 | Fail class | Fail classes     | Warning     | Warning     |

**Generator > Average protections > Average AC frequency low [1 or 2]**

| Parameter      | Text       | Range            | Avg. G f< 1 | Avg. G f< 2 |
|----------------|------------|------------------|-------------|-------------|
| 14101 or 14111 | Set point  | 100.0 to 120.0 % | 97.0 %      | 95.0 %      |
| 14102 or 14112 | Timer      | 0.1 to 100.0 s   | 10.0 s      | 5.0 s       |
| 14105 or 14115 | Enable     | OFF<br>ON        | OFF         | OFF         |
| 14106 or 14116 | Fail class | Fail classes     | Warning     | Warning     |

**Generator > Average protections > Average AC current high [1 or 2]**

| Parameter       | Text       | Range           | Avg. I> 1 | Avg. I> 2 |
|-----------------|------------|-----------------|-----------|-----------|
| 14121 or 14131  | Set point  | 50.0 to 200.0 % | 115.0 %   | 120.0 %   |
| 14122 or 141312 | Timer      | 0.1 to 3200.0 s | 10.0 s    | 5.0 s     |
| 14125 or 14135  | Enable     | OFF<br>ON       | OFF       | OFF       |
| 14126 or 14136  | Fail class | Fail classes    | Warning   | Warning   |

## 9. Inputs and outputs

### 9.1 Digital inputs

#### 9.1.1 Standard digital inputs

The controller has as standard 12 digital inputs, located on the terminals 39 to 50. All inputs are configurable.

##### Digital inputs

| Input | Text   | Function                             | Technical data                   |
|-------|--------|--------------------------------------|----------------------------------|
| 39    | In     | Auto start/stop                      | Negative switching only, < 100 Ω |
| 40    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 41    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 42    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 43    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 44    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 45    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 46    | In     | Configurable                         | Negative switching only, < 100 Ω |
| 47    | MB on  | Configurable (application dependent) | Negative switching only, < 100 Ω |
| 48    | MB off | Configurable (application dependent) | Negative switching only, < 100 Ω |
| 49    | GB on  | Configurable (application dependent) | Negative switching only, < 100 Ω |
| 50    | GB off | Configurable (application dependent) | Negative switching only, < 100 Ω |

#### 9.1.2 Configuring digital inputs

The digital inputs can be configured from the controller or with the utility software (some parameters can only be accessed with the utility software).

##### I/O settings > Inputs > Digital input > Digital input [39 to 50]

| Parameter  | Text       | Range              | Default  |
|--|------------|--------------------|----------|
| 3001, 3011, 3021, 3031, 3041, 3051, 3061, 3071, 3081, 3091, 3101 or 3111 | Delay      | 0.0 to 3200 s      | 10.0 s   |
| 3002, 3012, 3022, 3032, 3042, 3052, 3062, 3072, 3082, 3092, 3102 or 3112 | Output A   | Relays and M-Logic | Not used |
| 3003, 3013, 3023, 3033, 3043, 3053, 3063, 3073, 3083, 3093, 3103 or 3113 | Output B   | Relays and M-Logic | Not used |
| 3004, 3014, 3024, 3034, 3044, 3054, 3064, 3074, 3084, 3094, 3104 or 3114 | Alarm      | Disable<br>Enable  | Disable  |
| 3005, 3015, 3025, 3035, 3045, 3055, 3065, 3075, 3085, 3095, 3105 or 3115 | Fail class | Fail classes       | Warning  |
| 3006, 3016, 3026, 3036, 3046, 3056, 3066, 3076, 3086, 3096, 3106 or 3116 | Type       | High<br>Low        | High     |

##### Configure a digital input with the utility software


In the utility software, in *I/O & Hardware setup*, select the digital input to configure.

DI 39 - 50 | MI 20 | MI 21 | MI 22 | MI 23 | DO 5 - 18 | Emulation | DC meas AVG | AC meas AVG

| Preconfigured function | Alarm       | Display text | Alarm when input is | Timer | Fail class | Output A | Output B | Auto acknowledge | Inhibits | Password    | Modbus address |     |
|------------------------|-------------|--------------|---------------------|-------|------------|----------|----------|------------------|----------|-------------|----------------|-----|
| Digital Input 39       | Access lock | Enable       | Digital input 39    | High  | 10 s       | Warning  | Not used | Not used         | OFF      | Inhibits... | Service        | 185 |

1 2 3 4 5 6 7 8 9 10 11

| No. | Text                   | Description  |
|-----|------------------------|--|
| 1   | Preconfigured function | Select a function for the digital input.   |
| 2   | Alarm                  | Activates or deactivates the alarm function.   |
| 3   | Display text           | Select the display text. This is also shown on the display.  |
| 4   | High alarm             | The alarm is activated when the signal is high.  |
| 5   | Timer                  | The timer setting is the time from the alarm level is reached until the alarm occurs.  |
| 6   | Fail class             | Select the required fail class from the list. When the alarm occurs, the controller reacts according to the selected fail class.                     |
| 7   | Output A               | Select the terminal (or the limit option) to be activated by an alarm. Limit makes the alarm useable as an input event in M-Logic.                   |
| 8   | Output B               | Select the terminal (or the limit option) to be activated by an alarm. Limit makes the alarm useable as an input event in M-Logic.                   |
| 9   | Auto acknowledge       | If this option is set, the alarm is automatically acknowledged if the signal related to the alarm disappears.  |
| 10  | Inhibits               | Select the exceptions to when an alarm must be activated. To select when the alarms are to be active, each alarm has a configurable inhibit setting. |
| 11  | Password level         | Select the password level that is needed to modify this parameter (cannot be edited by a user with lower privileges).                                |

Click on the *Write to device*  button to write the settings to the controller.

### 9.1.3 Custom alarms

You can configure custom alarms for the digital inputs using the utility software or on the controller.


#### In the utility software

1. Select the *I/O & Hardware setup* tab.
2. Select one of the digital input tabs.
3. You can configure custom alarms for each active digital input. You must select *Enable* from the *Alarm* drop-down menu to see the alarm options.

DI 39 - 50 | MI 20 | MI 21 | MI 22 | MI 23 | DO 5 - 18 | DC meas AVG

| Preconfigured function | Alarm            | Display text | Alarm when input is | Timer | Fail class | Output A | Output B | Auto acknowledge | Inhibits | Password    | Modbus address | Value actual | Timer actual | Sec. |
|------------------------|------------------|--------------|---------------------|-------|------------|----------|----------|------------------|----------|-------------|----------------|--------------|--------------|------|
| Digital Input 39       | Allow safe reset | Enable       | Digital input 39    | High  | 10 s       | Warning  | Not used | Not used         | OFF      | Inhibits... | Service        | 185          | 0            | 0    |
| Digital Input 40       | Not used         | Disable      |                     |       |            |          |          |                  |          |             |                | 186          | 0            | 0    |

4. Pre-defined display text options are available for the custom alarms:

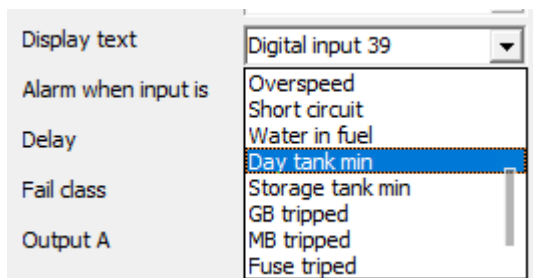

## On the controller

Go to Parameters > I/O settings > Inputs > Digital inputs > Digital input XX > Text. Select from a range of pre-defined text options.

DG BLOCKED FOR START

Digital input 40

Output B: Not used

Enable: OFF

Failclass: Warning

Type: N/O

Text: Oil pressure

## 9.2 DC relay outputs

The controller has 12 x DC relay outputs as standard. The outputs are divided in two groups with different electrical characteristics.

All outputs are configurable, unless other stated.

### Relay outputs, group 1

Electrical characteristics

- Voltage: 0 to 36 V DC
- Current: 15 A DC inrush, 3 A DC continuous

| Relay    | Genset default setting |
|----------|------------------------|
| Relay 05 | Run coil               |
| Relay 06 | Crank                  |

### Relay outputs, group 2

Electrical characteristics

- Voltage: 4.5 to 36 V DC
- Current: 2 A DC inrush, 0.5 A DC continuous

| Relay    | Genset default setting |
|----------|------------------------|
| Relay 09 | Start prepare          |
| Relay 10 | Stop coil              |
| Relay 11 | Status OK              |
| Relay 12 | Horn                   |
| Relay 13 | No default             |

| Relay    | Genset default setting |
|----------|------------------------|
| Relay 14 | No default             |
| Relay 15 | MB ON relay            |
| Relay 16 | MB OFF relay           |
| Relay 17 | GB ON relay*           |
| Relay 18 | GB OFF relay*          |

**NOTE** \* Not configurable.

## 9.2.1 Configure a relay output

Use the utility software, under *I/O & Hardware setup, DO 5 - 18* to configure the relay outputs.

|          | <u>Function</u> | <u>Alarm</u>          |       |          |
|----------|-----------------|-----------------------|-------|----------|
|          | Output Function | Alarm function        | Delay | Password |
| Output 5 | Run coil        | M-Logic / Limit relay | 0     | Service  |

| Setting         | Description  |
|-----------------|--|
| Output function | Select an output function.   |
| Alarm function  | Alarm relay NE<br>M-Logic / Limit relay<br>Alarm relay ND  |
| Delay           | The alarm timer.   |
| Password        | Select the password level to modify this configuration (cannot be edited by a user with lower privileges). |

## 9.3 Analogue inputs

### 9.3.1 Introduction

The controller has four analogue inputs (also known as multi-inputs): Multi-input 20, multi-input 21, multi-input 22, and multi-input 23. Terminal 19 is the common ground for the multi-inputs.

The multi-inputs can be configured as:

- 4-20 mA
- 0-10 V DC
- Pt100
- RMI oil pressure
- RMI water temperature
- RMI fuel level
- RMI Custom
- Binary/digital input

The function of the multi-inputs can only be configured with the utility software.

### Wiring

The wiring depends on the measurement type (current, voltage, or resistance).



## More information

See **Wiring** in the **Installation instructions** for examples of wiring.

### 9.3.2 Application description

The multi-inputs can be used in different applications, for example:

- Temperature sensor. Pt100 resistors are often used to measure temperature. In the utility software, you can choose whether the temperature should be shown as Celsius or Fahrenheit.
- RMI inputs. The controller has three RMI types; oil, water and fuel. It is possible to choose different types within each RMI type. There is also a configurable type.
- An extra button. If the input is configured as digital, it works like an extra digital input.
- Max. difference between ambient and generator temperature. Differential measurement can be used to give an alarm, if two values are too far apart.

### 9.3.3 Configuring multi-inputs

Configure each multi-input to match the connected sensor.

1. In the utility software, select *I/O & Hardware setup*, then select *MI 20 / 21 / 22 / 23*.

DI 39-40-41 | DI 42-43-44 | DI 45-46-47 | DI 48-49-50 | **MI 20** | MI 21 | MI 22 | MI 23 | DO 5 - 18 | DC meas AVG | AC meas AVG | E

**Multi input 20**  
 1st alarm: Parameter: 4120. Modbus address: 268  
 2nd alarm: Parameter: 4130. Modbus address: 269  
 Wire break: Parameter: 4140. Modbus address: 264

Input type: **4-20mA**  
 Scaling: **V 1/10**

**Engineering Unit**: Bar / celsius  
**Last open file name**: -

**Selected curve**

**Configurable curve** **Open** **Save**

|              | Input (mA) | Output |
|--------------|------------|--------|
| Set point 1  | 0          | 0      |
| Set point 2  | 0          | 0      |
| Set point 3  | 0          | 0      |
| Set point 4  | 0          | 0      |
| Set point 5  | 0          | 0      |
| Set point 6  | 0          | 0      |
| Set point 7  | 0          | 0      |
| Set point 8  | 0          | 0      |
| Set point 9  | 0          | 0      |
| Set point 10 | 0          | 0      |
| Set point 11 | 0          | 0      |
| Set point 12 | 0          | 0      |
| Set point 13 | 0          | 0      |
| Set point 14 | 0          | 0      |
| Set point 15 | 0          | 0      |
| Set point 16 | 0          | 0      |
| Set point 17 | 0          | 0      |

**1st Alarm**  
 Alarm when input is: High  
 Set point: 5  
 Delay: 10 Sec.  
 Fail class: Warning  
 Output A: Not used  
 Output B: Not used  
 Auto acknowledge: OFF  
 Inhibits: Inhibits...

**2nd Alarm**  
 Alarm when input is: High  
 Set point: 5  
 Delay: 10 Sec.  
 Fail class: Warning  
 Output A: Not used  
 Output B: Not used  
 Auto acknowledge: OFF  
 Inhibits: Inhibits...

**Wire break detection**  
 Wire break fail class: Warning  
 Output A: Not used  
 Output B: Not used  
 Delay: 1 Sec.  
 Auto acknowledge: OFF  
 Inhibits: Inhibits...

2. Select the appropriate *Scaling*.

## Examples

DI 39-40-41
DI 42-43-44
DI 45-46-47
DI 48-49-50
MI 20

**Multi input 20**  
1st alarm: Parameter: 4120. Modbus address: 268  
2nd alarm: Parameter: 4130. Modbus address: 269  
Wire break: Parameter: 4140. Modbus address: 264

Input type: 4-20mA  
Scaling: Perc 1/10

**Selected curve**

**Configurable curve** **Open** **Save**

|             | Input (mA) | Output |
|-------------|------------|--------|
| Set point 1 | 4          | 2      |
| Set point 2 | 20         | 5,6    |
| Set point 3 | 20         | 5,6    |
| Set point 4 | 20         | 5,6    |

Scaling 1/10

DI 39-40-41
DI 42-43-44
DI 45-46-47
DI 48-49-50
MI 20

**Multi input 20**  
1st alarm: Parameter: 4120. Modbus address: 268  
2nd alarm: Parameter: 4130. Modbus address: 269  
Wire break: Parameter: 4140. Modbus address: 264

Input type: 4-20mA  
Scaling: Perc 1/100

**Selected curve**

**Configurable curve** **Open** **Save**

|             | Input (mA) | Output |
|-------------|------------|--------|
| Set point 1 | 4          | 0,2    |
| Set point 2 | 20         | 0,56   |
| Set point 3 | 20         | 0,56   |
| Set point 4 | 20         | 0,56   |

Scaling 1/100

### 9.3.4 Alarms

For each multi-input, two alarm levels are available. With two alarms it is possible to have the first alarm reacting slow, while the second alarm can react faster. For example, if the sensor measures generator current as protection against overload, a small overload is acceptable for a shorter period, but in case of a large overload, the alarm should activate quickly.

Use the utility software to configure the multi-input alarms. Select *I/O & Hardware setup*, then select *MI 20 / 21 / 22 / 23*.

DI 39-40-41 | DI 42-43-44 | DI 45-46-47 | DI 48-49-50 | **MI 20** | MI 21 | MI 22 | MI 23 | DO 5 - 18 | DC meas AVG | AC meas AVG | E

**Multi input 20**

1st alarm: Parameter: 4120, Modbus address: 268  
2nd alarm: Parameter: 4130, Modbus address: 269  
Wire break: Parameter: 4140, Modbus address: 264

Input type: 4-20mA  
Scaling: Perc 1/10

**Engineering Unit**: Bar/celsius  
**Last open file name**: -

**Selected curve**

**Configurable curve** **Open** **Save**

|              | Input (mA) | Output |
|--------------|------------|--------|
| Set point 1  | 4          | 2      |
| Set point 2  | 20         | 5,6    |
| Set point 3  | 20         | 5,6    |
| Set point 4  | 20         | 5,6    |
| Set point 5  | 20         | 5,6    |
| Set point 6  | 20         | 5,6    |
| Set point 7  | 20         | 5,6    |
| Set point 8  | 20         | 5,6    |
| Set point 9  | 20         | 5,6    |
| Set point 10 | 20         | 5,6    |
| Set point 11 | 20         | 5,6    |
| Set point 12 | 20         | 5,6    |
| Set point 13 | 20         | 5,6    |
| Set point 14 | 20         | 5,6    |
| Set point 15 | 20         | 5,6    |
| Set point 16 | 20         | 5,6    |
| Set point 17 | 20         | 5,6    |

**1st Alarm**

Enable: Enable  
Alarm when input is: High  
Set point: 5,2  
Delay: 1 Sec.  
Fail class: Warning  
Output A: Not used  
Output B: Not used  
Auto acknowledge: OFF  
Inhibits: Inhibits...

**2nd Alarm**

Enable: Enable  
Alarm when input is: High  
Set point: 5  
Delay: 10 Sec.  
Fail class: Warning  
Output A: Not used  
Output B: Not used  
Auto acknowledge: OFF  
Inhibits: Inhibits...

**Wire break detection**

Wire break fail class: Warning  
Output A: Not used  
Output B: Not used  
Delay: 1 Sec.  
Auto acknowledge: OFF  
Inhibits: Inhibits...

1. Select the desired multi-input tab.
2. Configure the parameters for 1st alarm.
3. Configure the parameters for 2nd alarm.

## Sensors with max. output less than 20 mA

If a sensor has a maximum output less than 20 mA, it is necessary to calculate what a 20 mA signal would indicate.

**Example:** A pressure sensor gives 4 mA at 0 bars and 12 mA at 5 bar.

- $(12 - 4) \text{ mA} = 8 \text{ mA} = 5 \text{ bar}$
- $1 \text{ mA} = 5 \text{ bar} / 8 = 0.625 \text{ bar}$
- $20 - 4 \text{ mA} = 16 \times 0.625 \text{ bar} = 10 \text{ bar}$

## Configuring multi-input alarms from the display

Alternatively, you can use the display to configure the multi-input alarms: I/O settings > Inputs > Multi input > Multi input [20 to 23].1 / 2


## 9.3.5 Wire break

To supervise the sensors/wires connected to the multi-inputs and analogue inputs, you can enable the wire break function for each input. If the measured value on the input is outside the normal dynamic area of the input, it is detected as a short circuit or a break. An alarm with a configurable fail class is activated.

| Input            | Wire failure area                 | Normal range | Wire failure area   |
|------------------|-----------------------------------|--------------|---------------------|
| 4-20 mA          | <3 mA                             | 4-20 mA      | >21 mA              |
| 0-10 V DC        | ≤0 V DC                           | -            | N/A                 |
| RMI Oil, type 1  | <10.0 Ω                           | -            | >184.0 Ω            |
| RMI Oil, type 2  | <10.0 Ω                           | -            | >184.0 Ω            |
| RMI Oil, type 4  | <33.0 Ω                           | -            | 240.0 Ω             |
| RMI Temp, type 1 | <10.0 Ω                           | -            | >1350.0 Ω           |
| RMI Temp, type 2 | <18.2 Ω                           | -            | >2400.0 Ω           |
| RMI Temp, type 3 | <3.6 Ω                            | -            | >250.0 Ω            |
| RMI Temp, type 4 | <32.0 Ω                           | -            | >2500.0 Ω           |
| RMI Fuel, Type 1 | <1.6 Ω                            | -            | >78.8 Ω             |
| RMI Fuel, Type 2 | <3.0 Ω                            | -            | >180.0 Ω            |
| RMI Fuel, type 4 | <33.0 Ω                           | -            | >240.0 Ω            |
| RMI configurable | <lowest resistance                | -            | >highest resistance |
| RMI Custom       | <lowest resistance                | -            | >highest resistance |
| Pt100            | <82.3 Ω                           | -            | >194.1 Ω            |
| Level switch     | Only active if the switch is open |              |                     |

## Principle

The diagram shows that when the wire of the input breaks, the measured value drops to zero, and the alarm is activated.

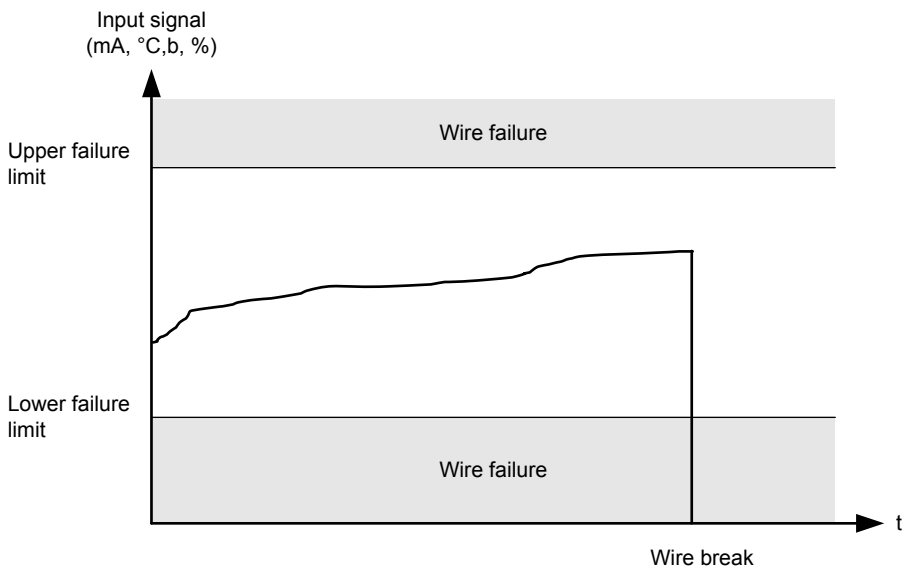

## Configuring wire break alarms from the utility software or display

You can use the utility software to configure wire break alarms. Alternatively, you can use the display to configure wire break alarms: I/O settings > Inputs > Multi input > Wire fail [20 to 23]

## 9.3.6 RMI sensor types

The multi-inputs can be configured as RMI inputs.

The available RMI input types are:

- RMI oil pressure

- RMI water temperature
- RMI fuel level
- RMI Custom

For each RMI input type, you can select different curves, including a configurable curve. The configurable curve has up to 20 set points. The resistance and the pressure can be adjusted.

**NOTE** The sensor range is 0 to 2500  $\Omega$ .

**NOTE** If the RMI input is used as a level switch, then no voltage must be connected to the input. If any voltage is applied to the RMI inputs, it will be damaged.

### 9.3.7 Differential measurement

Differential measurement compares two measurements, and gives an alarm or trip if the difference between two measurements become too large (or too small). To have the alarm activate if the difference between the two inputs is lower than the alarm's set point, remove the check mark from *High Alarm* in the alarm configuration.

It is possible to have up to six comparisons. Two alarms can be configured for each comparison.

**Functions > Delta alarms > Set [1 to 6]**

| Parameter                            | Text                                | Range     | Default        |
|--------------------------------------|-------------------------------------|-----------|----------------|
| 4601, 4603, 4605, 4671, 4673 or 4675 | Input A for comparison set [1 to 6] | See below | Multi-input 20 |
| 4602, 4604, 4606, 4672, 4674 or 4676 | Input B for comparison set [1 to 6] |           |                |

**Functions > Delta alarms > Set [1 to 6] > Delta ana[1 to 6] [1 or 2]**

| Parameter                            | Text             | Range              | Default |
|--------------------------------------|------------------|--------------------|---------|
| 4611, 4631, 4651, 4681, 4701 or 4721 | Set point 1      | -999.9 to 999.9    | 1.0     |
| 4621, 4641, 4661, 4691, 4711 or 4731 | Set point 2      | -999.9 to 999.9    | 1.0     |
| 4612, 4632, 4652, 4682, 4702 or 4722 | Timer 1          | 0.0 to 999.0 s     | 5.0 s   |
| 4622, 4642, 4662, 4692, 4712 or 4732 | Timer 2          | 0.0 to 999.0 s     | 5.0 s   |
| 4613, 4633, 4653, 4683, 4703 or 4723 | Output A set 1   | Relays and M-Logic | -       |
| 4623, 4643, 4663, 4693, 4713 or 4733 | Output A set 2   |                    |         |
| 4614, 4634, 4654, 4684, 4704 or 4724 | Output B set 1   |                    |         |
| 4624, 4644, 4664, 4694, 4714 or 4734 | Output B set 2   |                    |         |
| 4615, 4635, 4655, 4685, 4705 or 4725 | Enable set 1     | OFF                | OFF     |
| 4625, 4645, 4665, 4695, 4715 or 4735 | Enable set 2     | ON                 |         |
| 4616, 4636, 4656, 4686, 4706 or 4726 | Fail class set 1 | Fail classes       | Warning |
| 4626, 4646, 4666, 4696, 4716 or 4736 | Fail class set 2 |                    |         |

#### Differential measurements

| Measurement                       | Notes   |
|-----------------------------------|---|
| Multi input [20 to 23]            | The value measured by the multi input. Multi input 20 is the default. |
| EIC Oil pres. (SPN 100)           | The EIC oil pressure.   |
| EIC Cooling water temp. (SPN 110) | The EIC cooling water temperature.                                    |

| Measurement   | Notes  |
|---|--|
| EIC Oil temp. (SPN 175)                             | The EIC oil temperature.   |
| EIC Ambient temp. (SPN 171)                         | The EIC ambient temperature.   |
| EIC Intercool temp. (SPN 52)                        | The EIC intercooler temperature.   |
| EIC Fuel temp. (SPN 174)                            | The EIC fuel temperature.  |
| EIC Fuel delivery pres. (SPN 5579)                  | The EIC fuel delivery pressure.  |
| EIC Air filter1 diff. pres. (SPN 107)               | The EIC air filter 1 differential pressure.  |
| EIC Air filter2 diff. pres. (SPN 2809)              | The EIC air filter 2 differential pressure.  |
| EIC Fuel supply pump pres. (SPN 1381)               | The EIC fuel supply pump pressure.   |
| EIC Fuel filter diff. pres. SS (SPN 1382)           | The EIC fuel filter SS differential pressure.  |
| EIC Oil filter diff. pres. (SPN 99)                 | The EIC oil filter differential pressure.  |
| EIC T. Exhaust left (SPN 2434)                      | The EIC left exhaust temperature.  |
| EIC T. Exhaust right (SPN 2433)                     | The EIC right exhaust temperature.   |
| EIC Fuel filter diff. pres. (SPN 95)                | The EIC fuel filter differential pressure.   |
| EIC T. Winding Highest                              | The EIC winding highest temperature.   |
| EIC T. Winding Lowest                               | The EIC winding lowest temperature.  |
| EIC T. Winding [1 to 3]                             | The EIC winding temperature.   |
| EIC DEF Level (SPN 1761)                            | The EIC DEF level.   |
| EIC DEF Temp (SPN 3031)                             | The EIC DEF temperature.   |
| EIC Speed (SPN 190)                                 | The EIC engine speed.  |
| MPU speed   | The engine speed measured by the MPU connected to the controller.  |
| KWG ISO5 insulation resistance                      | If KWG ISO5 is used, the insulation resistance is received by the controller and converted to kΩ with a 1/10 scaling and delta alarms.                   |
| EIC Estimated Percent Fan Speed (SPN 975)           | Estimated fan speed as a ratio of the fan drive (current speed) to the fully engaged fan drive (maximum fan speed).                                      |
| EIC fan speed RPM (SPN 1639)                        | The speed of the fan associated with engine coolant system.  |
| Engine Percent Load at Current Speed (SPN 92) *     | The ratio of actual engine percent torque to maximum torque available at the current engine speed. This is clipped to zero torque during engine braking. |
| Driver's Demand Engine - Percent Torque (SPN 512) * | The requested torque output of the engine by the driver.   |
| Actual Engine - Percent Torque (SPN 513) *          | The calculation output torque of the engine.   |

**NOTE** \* Only for AGC 150 Generator marine (stand-alone)

## 9.4 Using an analogue output as a transducer

You can configure transducers 52 and/or 55 to transmit values to an external system. The values include the controller's set points, and AC measurements. The transducer output range is -10 to 10 V.

You can select a scale for some of the values. For example, for the busbar voltage (parameter 5913), select the minimum in 5915, and select the maximum in 5914.

**NOTE** These values are also available using Modbus.

## Parameters for using an analogue output as a transducer

| Parameter        | Value    | Details                                   |
|------------------|----------|---|
| 5823, 5824, 5825 | P1       | Genset active power                       |
| 5853, 5854, 5855 | S        | Genset apparent power                     |
| 5863, 5864, 5865 | Q        | Genset reactive power                     |
| 5873, 5874, 5875 | PF       | Power factor of the power from the genset |
| 5883, 5884, 5885 | f        | Genset frequency                          |
| 5893, 5894, 5895 | U        | Genset L1-L2 voltage                      |
| 5903, 5904, 5905 | I        | Genset L1 current                         |
| 5913, 5914, 5915 | U BB     | Busbar L1-L2 voltage                      |
| 5923, 5924, 5925 | f BB     | Busbar frequency                          |
| 5933, 5934, 5935 | Input 20 | The value received by analogue input 20.  |
| 5943, 5944, 5945 | Input 21 | The value received by analogue input 21.  |
| 5953, 5954, 5955 | Input 22 | The value received by analogue input 22.  |



### Power transducer setup example

To set up transducer 55 to transmit the genset power (0 to 2 MW) as a -10 to 10 V signal:

In menu 5823, for *Set point*, select **-10 to 10 V**. For *Transducer A*, select **Transducer 55**.

In menu 5824, select the maximum value (this corresponds to 10 V), that is, **2000 kW**.

In menu 5825, select the minimum value (this corresponds to -10 V), that is, **0 kW**.