




USER MANUAL



IMD Manager IMD 100

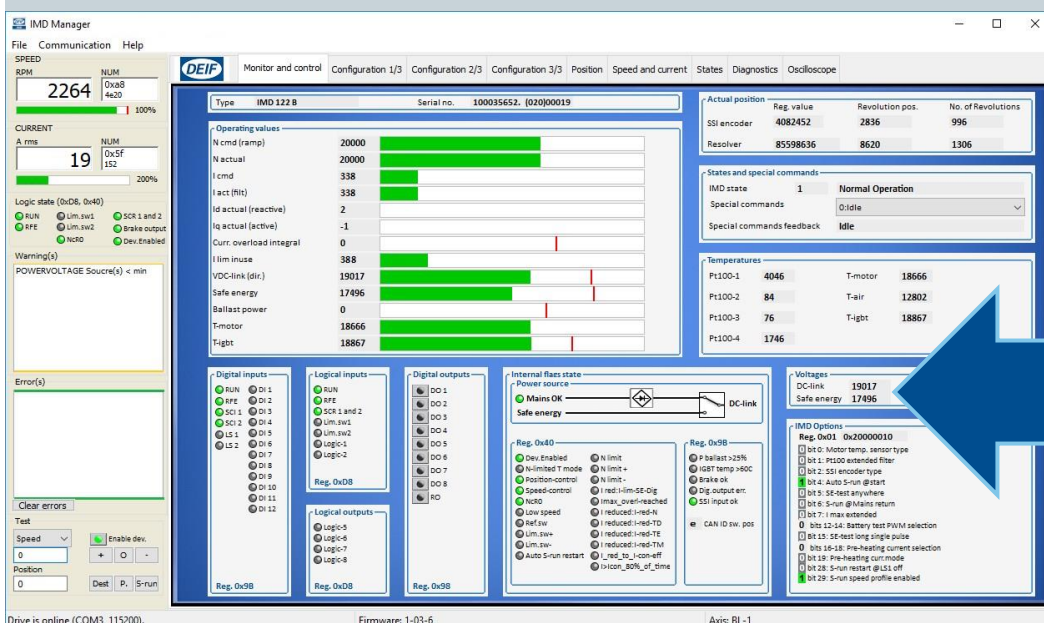

DEIF A/S · Frisenborgvej 33 · DK-7800 Skive
Tel.: +45 9614 9614 · Fax: 9614 9615
Info@deif.com · www.deifwindpower.com

Document no.: 4189360019 Rev.: E
Date: 2018-07-04
Language: EN-GB

Disclaimer

The contents of this document are subject to revision without notice. DEIF A/S shall have no liability for any error or damages of any kind resulting from the use of this document.

The English version of this document is the original language, and always contains the most recent and up-to-date information about the product. Translations might not be updated at the same time as the English version. DEIF A/S does not take responsibility for the accuracy of the translations. The English version always takes precedence if there is any discrepancy.

Trademarks

DEIF *DEIF* is a registered trademark of DEIF A/S

All trademarks are the properties of their respective owners.

Copyright

© Copyright DEIF A/S. All rights reserved.

Contents

1. Introduction.....	5
1.1 Conventions.....	5
1.2 Product user documentation	6
2. Introduction to the IMD Manager.....	9
2.1 Entering data	10
2.1.1 Entering data in a field	11
2.1.2 Entering data in a dropdown list	11
2.1.3 Entering data in an option button.....	11
2.2 Getting help	11
2.2.1 Online help.....	11
2.2.2 Manuals	11
3. Menu bar.....	12
3.1 File Menu.....	12
3.2 Communication menu	13
3.2.1 Determination of used COM port.....	13
3.3 Help menu	14
4. Status bar	14
5. Quick access area	15
6. Main work area.....	18
6.1 Monitor and control tab.....	19
6.1.1 Temperature conversion chart PT100	22
6.1.2 Temperature conversion chart T-motor	23
6.1.3 Temperature conversion chart T-air	24
6.1.4 Temperature conversion chart T-igbt	25
6.2 Configuration 1/3 tab.....	26
6.2.1 Motor data.....	27
6.2.2 General servo (IMD) data.....	27
6.2.3 Safety run	28
6.2.4 CAN bus	28
6.2.5 Input logic	29
6.2.6 Output logic.....	31
6.2.7 Logic variables	34
6.2.8 Safe energy test.....	35

6.2.9	Pre-heat	35
6.3	Configuration 2/3 tab.....	36
6.3.1	Speed parameters.....	37
6.3.2	Current parameters	38
6.3.3	Magnetic field weakening	39
6.3.4	Position parameters	39
6.3.5	Configuration management - Loading and saving configurations	39
6.4	Configuration 3/3 tab.....	41
6.5	Position tab.....	42
6.6	Speed and current tab.....	43
6.7	States tab	44
6.8	Diagnostics tab.....	44
6.8.1	Manual Read/write	45
6.8.2	Track.....	46
6.8.3	Information	46
6.8.4	Debug setup.....	47
6.8.5	Show all registers.....	47
6.9	Oscilloscope	48
6.9.1	Screen functions	48
6.9.2	Trigger and capture functions.....	50
6.9.3	Channel selection	50
6.9.4	Step generator	51
6.9.5	Display of measurements.....	53
6.9.6	Parameters in the oscilloscope tab.....	54
7.	Revision history.....	55
8.	Glossary	56
8.1	Terms and abbreviations	56
8.2	Units	56

1. Introduction

This document describes how to use the IMD Manager. The IMD Manager is used for configuration, monitoring and troubleshooting of DEIF's Integrated Motor Driver (IMD). It does not describe how each parameter is configured, but rather the principles of using the IMD Manager.



Read instructions

Read the *IMD 100 Function description*(document no. 4189360013) and the IMD Integration manual (document no. 4189360015) in order to understand the functions and configuration of the IMD.





Read the IMD Manager installation instructions (Document no. 4189360018) for information about how to install the IMD Manager.

[Find the IMD documentation here](#)

See revision history for this manual in section [7](#) on page [55](#).

1.1 Conventions

The following conventions are used in this document:

Used in document	Description
Monotype font	Used when describing a path or text input in a machine human interface
	Used to illustrate a space and Enter characters
	A yellow symbol that illustrates hazard type (this symbol is an example for general hazard). There are different types such as electrical, chemical and so on.
Danger!	A signal word used to indicate an imminently hazardous situation, which if not avoided, will result in death or serious injury. (ISO 3864)
Warning!	A signal word used to indicate an imminently hazardous situation, which if not avoided, could result in death or serious injury. (ISO 3864)
Caution!	A signal word used to indicate a potentially hazardous situation, which if not avoided, could result in minor or moderate injury. (ISO 3864)
	A blue symbol that illustrates a need for mandatory action. In this example read instructions. Other types of blue symbols exist and always indicate mandatory action.
	A symbol used to draw attention to extra information or an action that is not mandatory
Current	When “current” is used it always means electrical current. When a reference to time is made “present” or “ongoing” are used.
IMD	When the IMD is mentioned, it means the IMD 100 series

1.2 Product user documentation

The IMD product has an extensive user documentation, targeted towards different audience and product use stages.

The following documents are part of the user documentation:

Table 1 IMD user documentation

Document	Target audience	Content
IMD 100 datasheet Document no.: 4921260015	Buyers and technicians of customers	Describes relevant specifications and give an overview of the IMD functions
IMD 100 function description Document no.: 4189360013	Mainly technicians and engineers of customers.	Describes the functions of the IMD. Gives the reader an understanding of the purpose of the IMD in a system, and which functions can be utilised in a pitch system. The functions are described so that the reader can understand what each function is used for.
IMD 100 integration manual Document no.: 4189360015	Engineers at customer R&D department	Describes how to integrate the IMD in a pitch system. Gives extensive knowledge about: IMD SW (parameters and how to achieve specific functionality) How to create customized parameter file for use in production Requirements for external interfaces/components
IMD Manager installation instructions Document no.: 4189360018	Engineers at customer R&D department, as well as commissioners and service personnel	Describes how to install the IMD Manager. The IMD Manager is an application used to configure and control the IMD using the Service USB connector.
IMD Manager user manual Document no.: 4189360019	Engineers at customer R&D department, as well as commissioners and service personnel	Describes how to use the IMD Manager. The IMD Manager is an application used to configure and control the IMD using the Service USB connector.
IMD 100 installation instructions Document no.: 4189360005	Technicians at production site where the IMD is mounted in the cabinet/hub	Describes how to mount, connect and perform initial start, test, and configuration (using a configuration file) of the IMD at production.
IMD 100 initial configuration and verification manual Document no.: 4189360016	Commissioners or other personnel with similar qualifications, as well as service personnel (for SW upgrade)	Describes how to upgrade the IMD SW, how to load configuration file, and how to verify the IMD installation to the possible extent.
IMD 100 service and maintenance manual Document no.: 4189360017	Service and warehouse personnel	Describes preventive (scheduled) and corrective maintenance of the IMD, as well as storage requirements.

Document	Target audience	Content
IMD 100 installation checklist Document no.: 4189360021	Technicians at production site where the IMD is mounted in the cabinet/hub	Installation tasks with check boxes to document the tasks done during installation
IMD 100 configuration and verification checklist Document no.: 4189360022	Commissioners or other personnel with similar qualifications, as well as service personnel (for SW upgrade)	configuration and verification tasks with check boxes to document the tasks done during configuration and verification
Addendum to installation manual Document no.: 4189360023	Integration and installation personnel	Describes the how to replace a pitch drive when the IMD is equipped with Retrofit wiring harness var.1

The IMD 100 documentation is written anticipating an OEM (original equipment manufacturer) product use-cycle in a wind turbine. The envisioned cycle is described in the following figure. The description also explains the tasks, who is expected to execute the task, the location where the execution takes place and the supporting DEIF documentation for the task. Many details in these tasks depends on the actual implementation, which is why the IMD documentation will never stand alone.

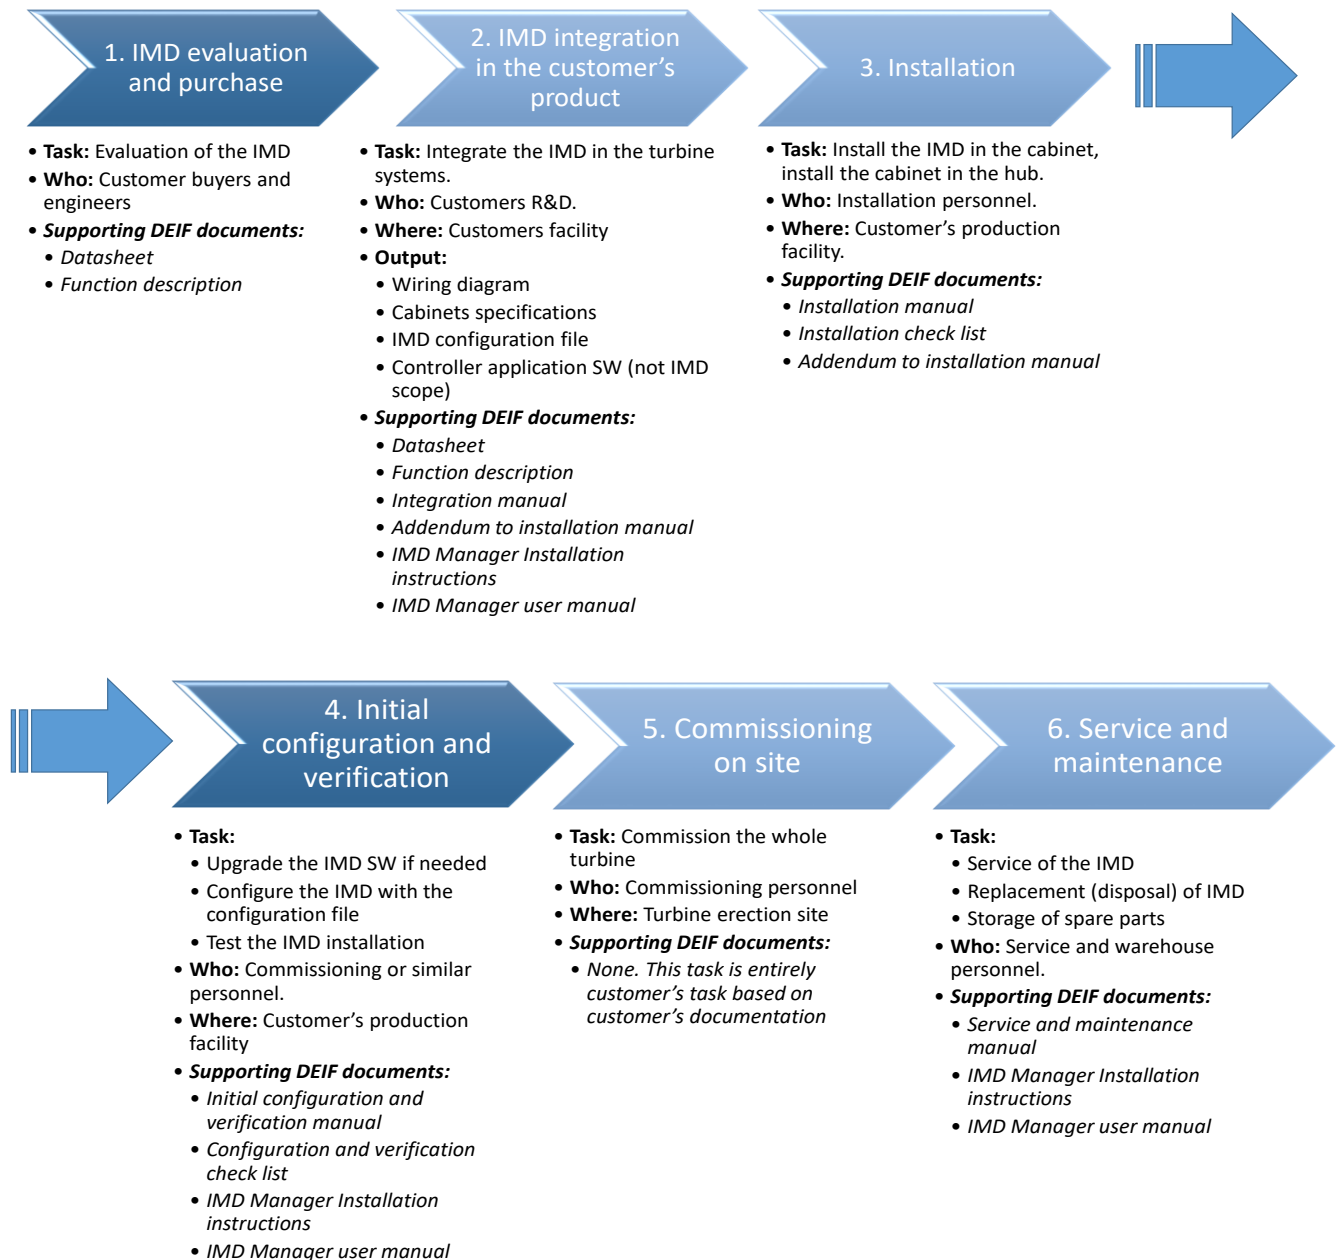


Figure 1 Tasks and documentation overview

The described product use-cycle might not apply as is for all customers, but the tasks are universal and can therefore be adapted. For example, if the SW upgrade, configuration and verification is done during the turbine commissioning, the applicable documentation can be used at this stage instead of a separate stage at the end of production.

2. Introduction to the IMD Manager

The IMD manager is the tool used for configuration and monitoring of the IMD. It can only be connected locally to the IMD through an USB connector.



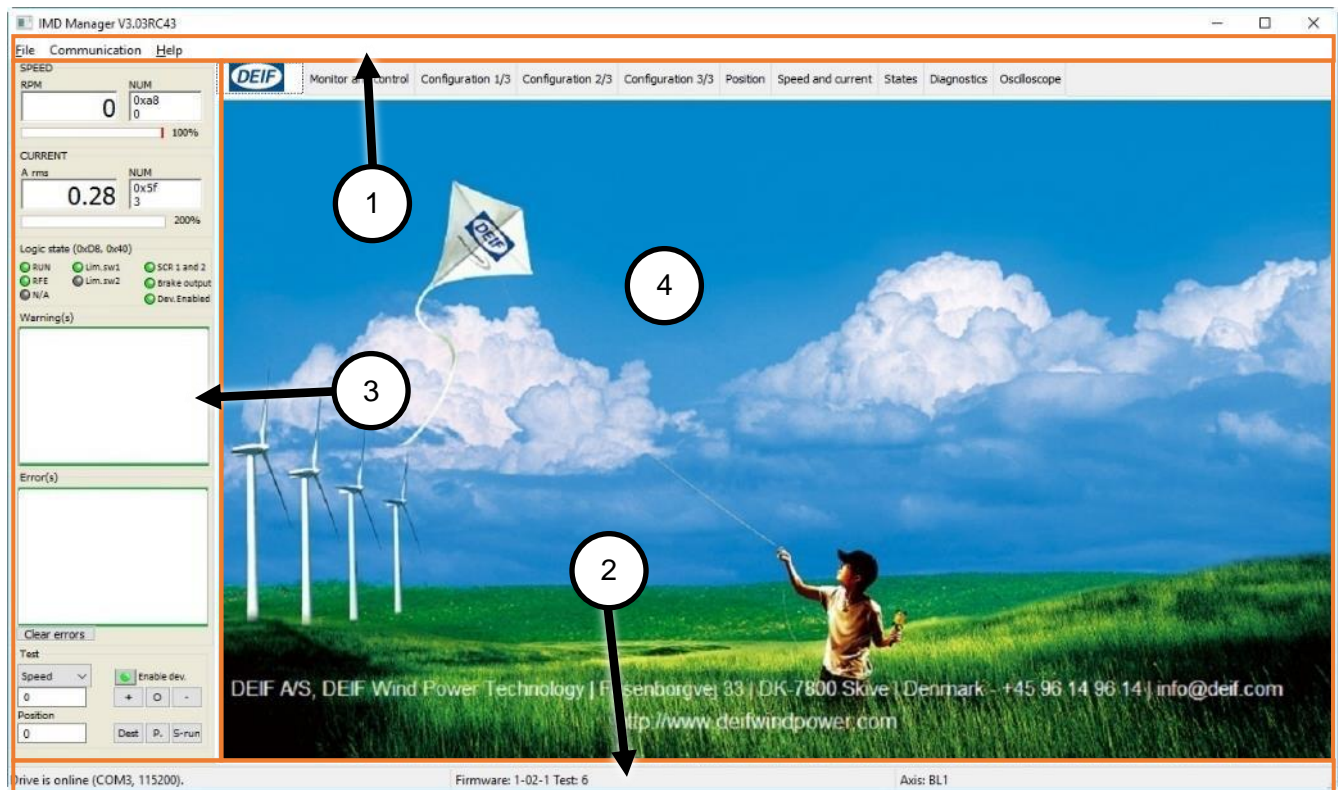


Figure 2 The IMD Manager

The IMD Manager contains four main areas:

1. Menu bar: containing File, communications settings and help
2. Status bar: containing connection status, IMD firmware and axis label
3. Quick access area: containing often used functions and indications
4. Main work area: containing different tabs for different purposes

The IMD Manager uses the following element types:

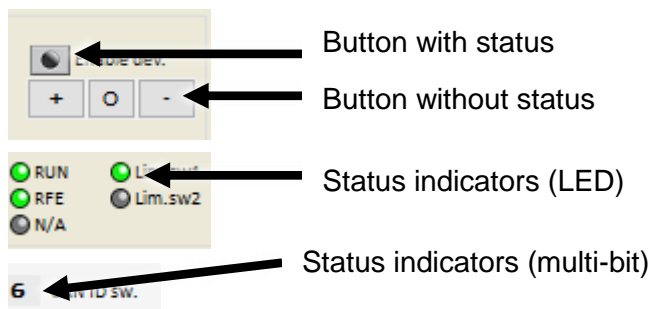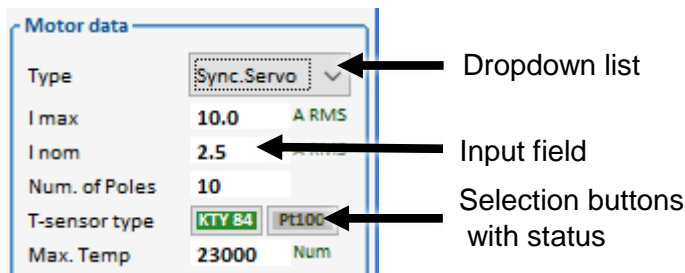

The following colour scheme is used for the LED status indication:


- **Green:** Active / selected
- **Grey:** Not active / not selected



Info

The colours are shown as seen from the IMD. For example, when the “Brake out” is green, it means that the Brake output of the IMD is active (high). It does not show whether the brake itself is active or not due to the output being high.

Some parameters are only visible when an IMD is connected (on-line), or may be visible/invisible depending on FW version, HW type or settings of other parameters.

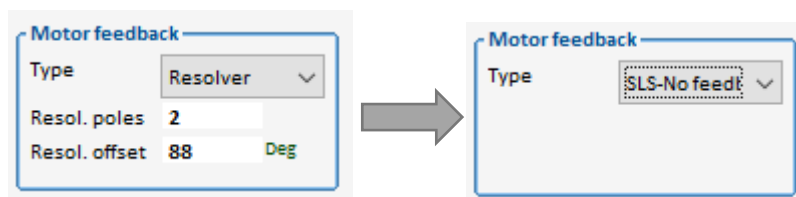

2.1 Entering data

Data can be entered or changed only when the IMD Manager is connected to an IMD or if an offline configuration is loaded to the IMD Manager (Communication→View file). If data cannot be entered, the data in each field shows the register id from which the data will be retrieved. The following figure shows the IMD Manager fields when it is possible and not possible to enter data.

Data cannot be entered

Data can be entered



Attention

The entered data will be lost in the next start-up unless the configuration is saved to the EEPROM.

2.1.1 Entering data in a field

Data can only be entered if the field has a white background: **200.0** Hz.

1. Click in the field
2. Enter the data
3. Press Enter (↵). The entered data is verified and saved in the IMD RAM.

2.1.2 Entering data in a dropdown list

Click anywhere inside the dropdown element **Sync.Servo** and it will open to show the available options.

Select an option from the list. The data is saved in the IMD RAM upon selection.

2.1.3 Entering data in an option button

Click on the desired option button **KTY 84** **PT100**. The data is saved in the IMD RAM when you click. The green colour shows the selected button.

2.2 Getting help

There are several ways to get help when using the IMD manger.

2.2.1 Online help

There are two ways to get online help:

1. This manual. Press “F1” or click “Help→Manual” to open this manual
2. Point the cursor on a field and a short information note on this particular field, as well as the register to which the parameter is related to will be displayed:

2.2.2 Manuals

Open the appropriate manual from the IMD manuals package related to the task at hand.

3. Menu bar

The menu bar contains three sub-menus: File, Communication and Help.


3.1 File Menu

<u>F</u> ile	Communication	<u>H</u> elp
Load registers...		Alt-L
Save registers...		Alt-S
Import register file (*.utd)...		
Print registers...		Alt-P
Print selection of registers...		
Execute script		
End		Alt-E

The File menu has the following functions:

Load registers...	Load a configuration file (*.urf) from the PC to the IMD RAM (running configuration). Only enabled with an IMD connected.
Save registers...	Save the configuration in the IMD manager to the PC as a *.urf file. Only enabled with an IMD connected, or when an offline file is loaded.
Import register file (*.utd)...	Load an old format configuration file to the IMD. This option is for compatibility with old products only and should not be used for IMD 100. Only enabled with an IMD connected.
Print registers...	Print all registers content. Only enabled with an IMD connected, or when an offline file is loaded.
Print selection of registers...	Print some registers content (selection cannot be changed). Only enabled with an IMD connected, or when an offline file is loaded.
Execute script	Possibility to execute a script. For expert's use only. Only enabled with an IMD connected.
End	Exit the IMD manager

3.2 Communication menu

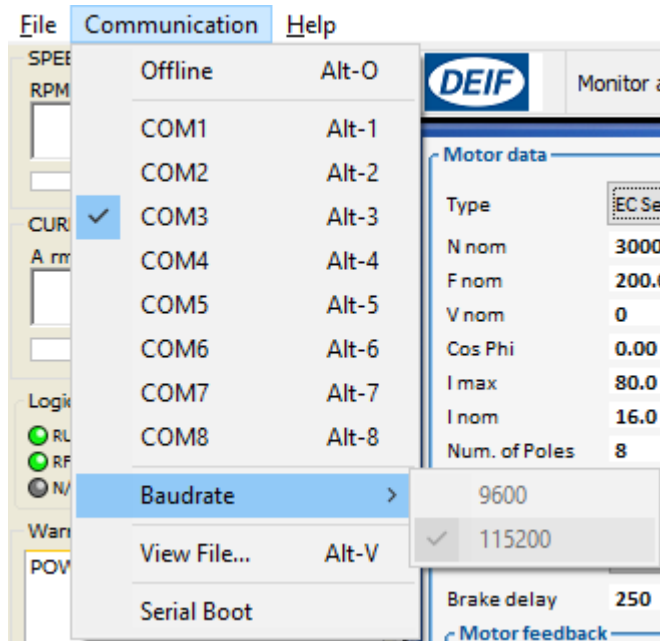


The Communication menu has the following functions:


Offline, COM1 to COM8	Set the communication port to the used port (see section 3.2.1 on page 3.2.1). Note that the shortcut to Offline is “Alt”+ “o” and not zero
Baudrate	Selection between 9600 and 115200. Must always be 115200. If the installation was performed properly, this setting will be set automatically. Otherwise it is only needed to be done once.
View File...	Load an offline configuration file (*.urf) to the IMD Manager.
Serial Boot	This option is for compatibility with old products only and should not be used for IMD 100.

3.2.1 Determination of used COM port

Open the “Device manager” in the computer’s “Settings” and determine which com port is used for the USB connection (the look of the device manager may differ depending on the operating system):

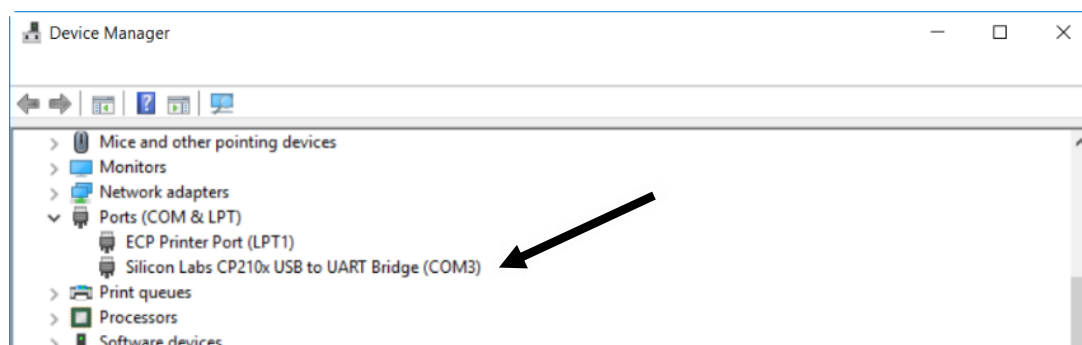

3.3 Help menu

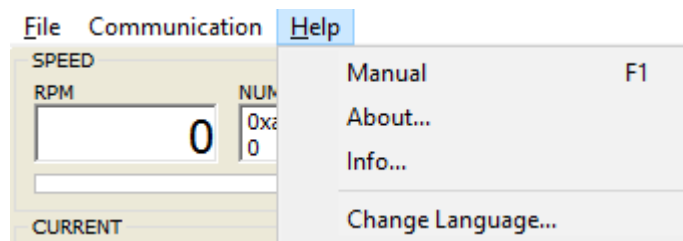

The Help menu has the following functions:

Manual	Online help (this manual)
About...	Information about the version of the IMD Manager
Info...	Information about firmware version and window size. Not relevant in normal use.
Change Language...	Only English language is supported

4. Status bar

The status bar contains information about:

- Connection state (including COM port and baud rate)
- Firmware
- The Axis label (free text that can be configured in the “Configuration 1/3” tab)

Drive is online (COM3, 115200).	Firmware: 1-02-1	Axis: BL-1
---------------------------------	------------------	------------

Figure 3 Status bar

5. Quick access area

The quick access area allows to have an overview of selected states of the IMD as well as some control buttons for often used control functions. The quick overview is always visible so it is possible to use it no matter which tab is active in the main area.

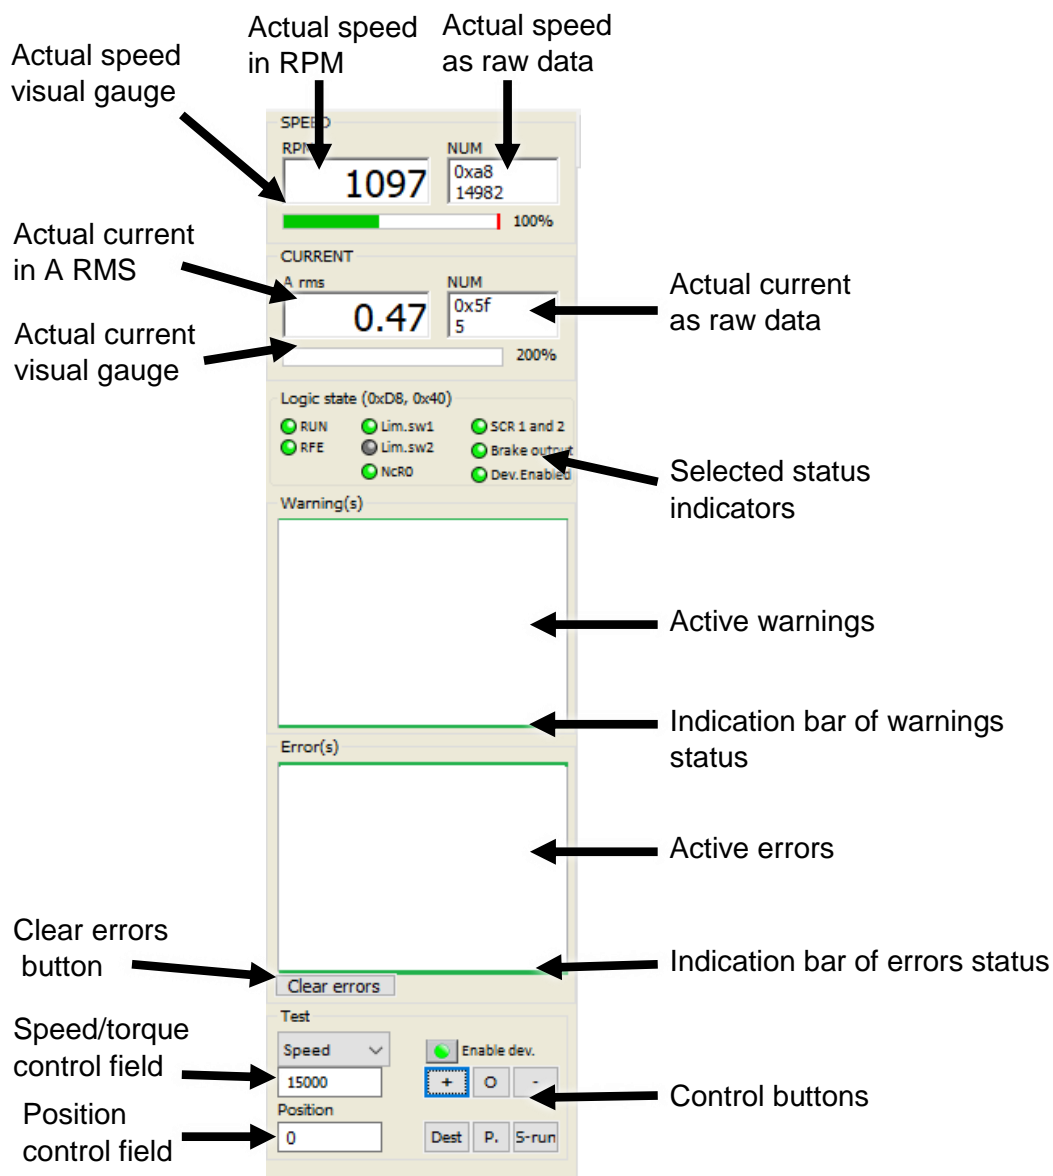


Figure 4 Quick access area

Features in the quick access area include the following:

Actual speed indication	The actual speed is shown in RPM, raw data and a percent gauge (0 to 100 %)
Actual current indication	The actual current is shown in A RMS, raw data and a percent gauge (0 to 200 %)
Selected status indicators	Indicators that show status of the IMD: <ul style="list-style-type: none"> RUN: the status of the logic RUN flag (0xD8 bit 4) RFE: The status of the logic RFE flag (0xD8 bit 5)

	<ul style="list-style-type: none"> • Lim.sw1: The status of the logic Lim.sw1 flag (0xD8 bit 0) • Lim.sw2: The status of the logic Lim.sw2 flag (0xD8 bit 1) • NcR0: N cmd ramp is not zero. If this indication is off (gray), N cmd (ramp) is set to zero, and the motor is held in place. • SCR 1 and 2: The status of the logic SCR 1 and 2 flag (safety-chain relays 0xD8 bit 10) • Brake output: The status of the logic brake output flag (0xD8 bit 15) • Dev.Enabled: The status of the logic Dev.Enable flag (0x40 bit 0) <p>The selected indicators cannot be changed.</p>
Warnings field	A field that shows the active warnings. Green bars at the top and bottom indicate that there are no active warnings, yellow bars at the top and bottom indicate that there are active warnings
Errors field	A field that shows the active errors. Green bars at the top and bottom indicate that there are no active errors, red bars at the top and bottom indicate that there are active errors
Clear errors button	Clicking on this button will clear the errors if the reason for the error is not active anymore. If there are any errors that are cleared, the safety-chain relays (SCR 1 and 2) will also be cycled.
Test group	The test group contains means to manually control the motor. The IMD must be in state "Normal operation" and the Dev.Enable indicator on, in order to be able to use the manual control buttons.
Enable dev. button	A button that enables the IMD (0x51 bit 2). The button has a status LED that always shows the status of this bit. If for some reason the IMD cannot be enabled (for example if there is an error) the LED will change back to grey when clicking on the button.
Speed/torque control field	<p>This field comprises of a selection list (speed or torque) and a value field. The value in the field will be used as either the N cmd value or as a desired torque value.</p> <p>Important: Torque must never be used without speed limits.</p>
+ 0 - buttons	<p>These buttons control the desired speed or torque parameters depending on the selected mode in the dropdown list</p> <ul style="list-style-type: none"> • + sets the desired speed or torque to the value in the speed/torque field (plus direction) • - sets the desired speed or torque to the value in the speed/torque field (minus direction) • 0 sets the desired speed or torque to zero (stops the motor)
Position control field	<p>Value (numeric) for desired position can be entered in this field.</p> <p>Note: The position control must be enabled (Position Kp>0) in order to use the position control.</p>

| **Dest** | **P.** | **S-run** |
buttons

Buttons for control of the desired position.

- **Dest**: clicking on this button sets the destination position (0x6e) to the value in the position control field
- **P.**: Position preset. Can only be used while in Preset mode (set through special functions). Sets the high 16 bits of the actual position to the value of the 16 high bits in the Position control field.
- **S-run**: Initiate a safety run.

6. Main work area

The main work area contains the following tabs:

Tab	Description
DEIF	Contains contact information and link (anywhere on the picture) to DEIF Wind Power Technology's home page.
Monitor and control	Used for monitoring the IMD functions and controlling outputs and special commands.
Configuration 1/3	Used to configure parameters in the IMD, as part of the integration process.
Configuration 2/3	Used to configure parameters in the IMD, as part of the integration process as well as saving and loading configurations.
Configuration 3/3	Expert's tab. Contains extra configuration parameters needed for asynchronous motor, and other special parameters and special configurations.
Position	Used for monitoring of the position control
Speed and current	Used for monitoring of speed and current control
States	Used for monitoring of the different operational states of the IMD
Diagnostics	Expert's tab. Contains possibility for manual direct read/write operations, uninterpreted register read, possibility for tracking specific parameters.
Oscilloscope	Expert's tab. Built in oscilloscope that enables measurements of signals in the IMD.



Info

Parameters in the different tabs might change depending on the SW or HW. Some parameters are only shown if they are relevant for a specific IMD firmware, or specific IMD HW, or to a specific choice done. For example, if Asynchronous motor is selected, Resolver offset parameter will be hidden.

6.1 Monitor and control tab

The monitor and control tab is used for monitoring the functions and state of the IMD as well controlling digital outputs and executing special commands.

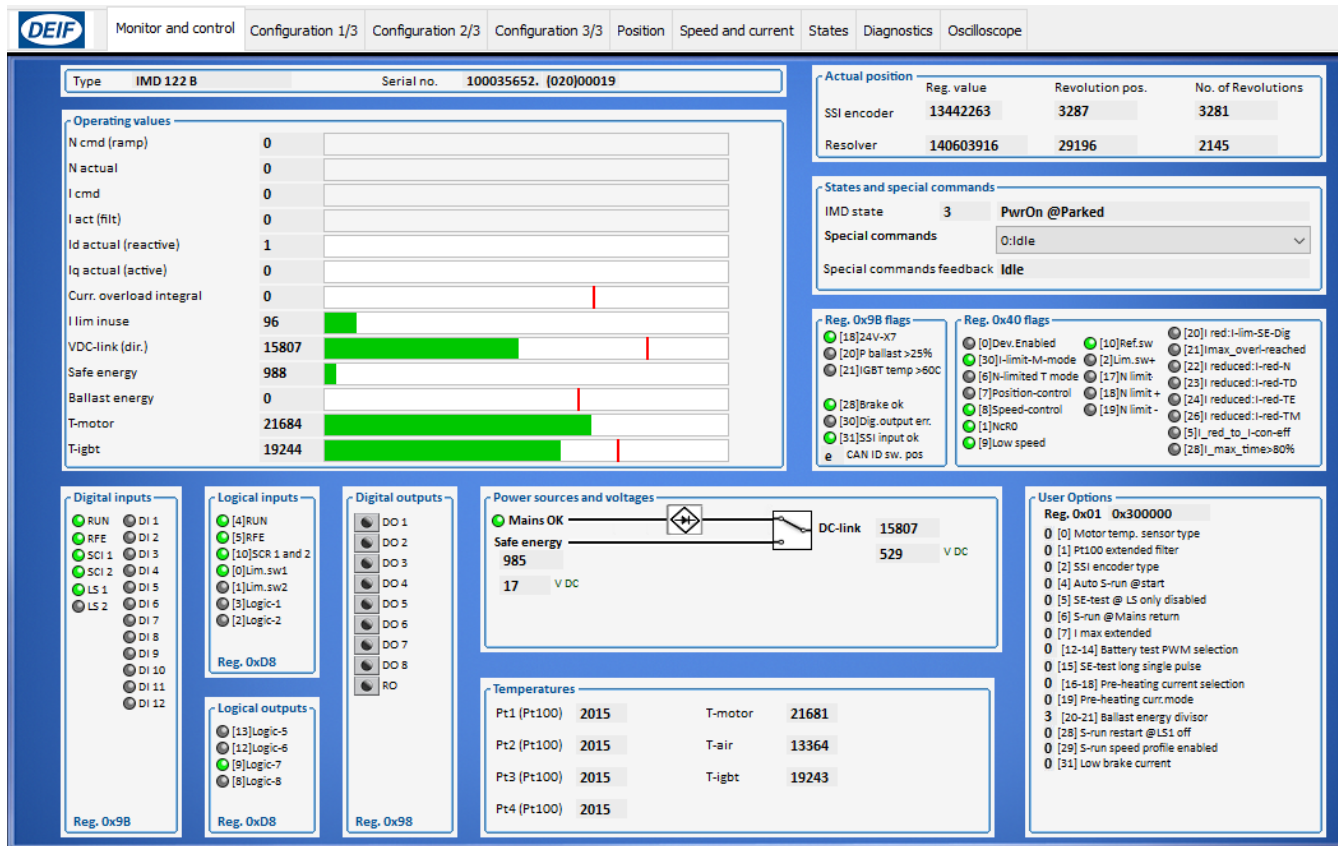



Figure 5 Monitor and control tab

The monitor and control tab contains the following:


IMD info	Type and serial number of the connected IMD. The format of serial number can vary, depending on the production/shipping time of the specific IMD.														
Operating values	Shows different parameter values such as speed, current and temperature as numerical values and visual bars. Since the numerical values might have different scaling even for the same units (such as Volt), numerical values can be shown as larger, even though the value in volt might be smaller. This is for example the case with BAT and DC-link voltages. The following parameters are shown: <table border="1"> <thead> <tr> <th>Parameter</th><th>Description</th></tr> </thead> <tbody> <tr> <td>N cmd (ramp)</td><td>Set speed command Value after ramp and speed limits are applied</td></tr> <tr> <td>N actual</td><td>Actual speed value</td></tr> <tr> <td>I cmd</td><td>Set current command value before ramp and current limits are applied</td></tr> <tr> <td>I act (filt)</td><td>Actual output current value after filtering</td></tr> <tr> <td>Id actual (reactive)</td><td>Actual reactive output current value</td></tr> <tr> <td>Iq actual (active)</td><td>Actual active output current value</td></tr> </tbody> </table>	Parameter	Description	N cmd (ramp)	Set speed command Value after ramp and speed limits are applied	N actual	Actual speed value	I cmd	Set current command value before ramp and current limits are applied	I act (filt)	Actual output current value after filtering	Id actual (reactive)	Actual reactive output current value	Iq actual (active)	Actual active output current value
Parameter	Description														
N cmd (ramp)	Set speed command Value after ramp and speed limits are applied														
N actual	Actual speed value														
I cmd	Set current command value before ramp and current limits are applied														
I act (filt)	Actual output current value after filtering														
Id actual (reactive)	Actual reactive output current value														
Iq actual (active)	Actual active output current value														

	Curr. overload integral	The accumulated overload current. Current limit will always be applied at the red bar, however, the speed at which it will get there depends on current parameters configuration and actual current.									
	I lim inuse	The current limit at any given time. This value is the maximum current that the IMD will be able to deliver.									
	VDC-link (dir.)	DC-link level. The red bar indicates where the level is high. There is no action from the IMD at this point.									
	Safe energy	Safe energy voltage level.									
	Ballast power	Indicates the accumulated power that is delivered to the ballast resistor. A Ballast overload error is generated when it reaches the red bar.									
	T-motor	Shows the temperature of the motor. No indication of temperature limit is available.									
	T-igbt	Shows the temperature of the IMD's output stage. When the temperature reaches the red bar, a Device temperature too high error will be generated.									
User options	The User options shows value and interpretation of register 0x01. The value field is editable in order to be able to enter the whole register value. However, this field is not intended for configuration. Configuration of all the relevant parameters is done from the "Configuration 1/3" tab, using either a selection list or selection buttons.										
Actual position	Shows the values returned from the SSI encoder and resolver. The fields and values of the SSI encoder depends on the selected SSI encoder type in "Configuration 1/3" tab.										
States and special commands	<p>Shows the state of the IMD as both value and interpretation, as well as gives the possibility to execute special commands. A special command is executed by clicking on the dropdown list and selecting a command. The special command feedback field shows the state of the command. If the command cannot be executed for some reason, a dialog box informs that the IMD has changed the command to a different command. The dropdown list and will always show the last selected command (no matter whether it was executed or not):</p> <div><p>States and special commands</p><table><tr><td>IMD state</td><td>24</td><td>SE-test ready</td></tr><tr><td>Special commands</td><td colspan="2"><div>3:SE-test, initiate</div></td></tr><tr><td>Special commands feedback</td><td colspan="2">SE-test initiated</td></tr></table></div>		IMD state	24	SE-test ready	Special commands	<div>3:SE-test, initiate</div>		Special commands feedback	SE-test initiated	
IMD state	24	SE-test ready									
Special commands	<div>3:SE-test, initiate</div>										
Special commands feedback	SE-test initiated										
	<div><div></div><div><p>Attention</p><p>Consult the Integration manual before initiating Safe energy test (SE-test). Wrong use might overload the ballast resistor.</p></div></div>										

Digital inputs	The digital inputs show the state of the digital inputs of the IMD, as perceived by the IMD. These are the physical inputs: X8 terminal 1 to 4, and all inputs in X9.
Logical inputs	<p>The logical inputs are internal signals in the IMD. The LED show shows the state (high/low) of the signals. Note that even if a logical input is defined with polarity as active low, the inverted function is the defined function in the configuration tab and not the logical input. For example, if Logic-1 is defined a ref plus active low:</p> <div style="display: flex; align-items: center; margin: 10px 0;"> Logic-1 <= Di-1 <div style="border: 1px solid #ccc; padding: 2px 5px; margin: 0 5px;">Ref. Plus</div> <div style="border: 1px solid #ccc; padding: 2px 5px; margin: 0 5px;">Active low</div> <div style="border: 1px solid #ccc; padding: 2px 5px; margin: 0 5px;">Active high</div> </div> <p>then the logical input will show whether the actual digital input (Di-1) is high or low, while the Ref.sw will depend on the defined polarity.</p> <p>The logic inputs are defined in “Configuration 1/3” tab.</p>
Logical outputs	The logical outputs show the state of logic-5 to logic-8. The logic outputs are defined in “Configuration 1/3” tab.
Digital outputs	The digital outputs show the state of the outputs (as an LED in the centre of the button). Clicking on a button will toggle the output. Note that outputs logic-5 to logic-8 must be defined as Off in the output logic in the configuration tab, otherwise it is not possible to control Do-5 to Do-8 manually through the digital outputs.
Reg. 0x9B flags	Shows the state of different flags in register 0x9B (Logic in block) that are used internally by the IMD SW.
Reg. 0x40 flags	Shows the state of different flags in register 0x40 (Drive status) that are used internally by the IMD SW.
Power sources and Voltages	Power source that shows the state of the X1 Mains input (Reg. 0x63/bit 5) and where the IMD is drawing power from, for the DC-link: AC or safe energy (Reg. 0xD8/bit 14). Voltage and units are shown for the DC-link and Safe energy.
Temperatures	Shows all the relevant temperature of the IMD. The values are represented as raw data.


The following charts gives a quick overview of temperature vs. raw_values.

6.1.1 Temperature conversion chart PT100

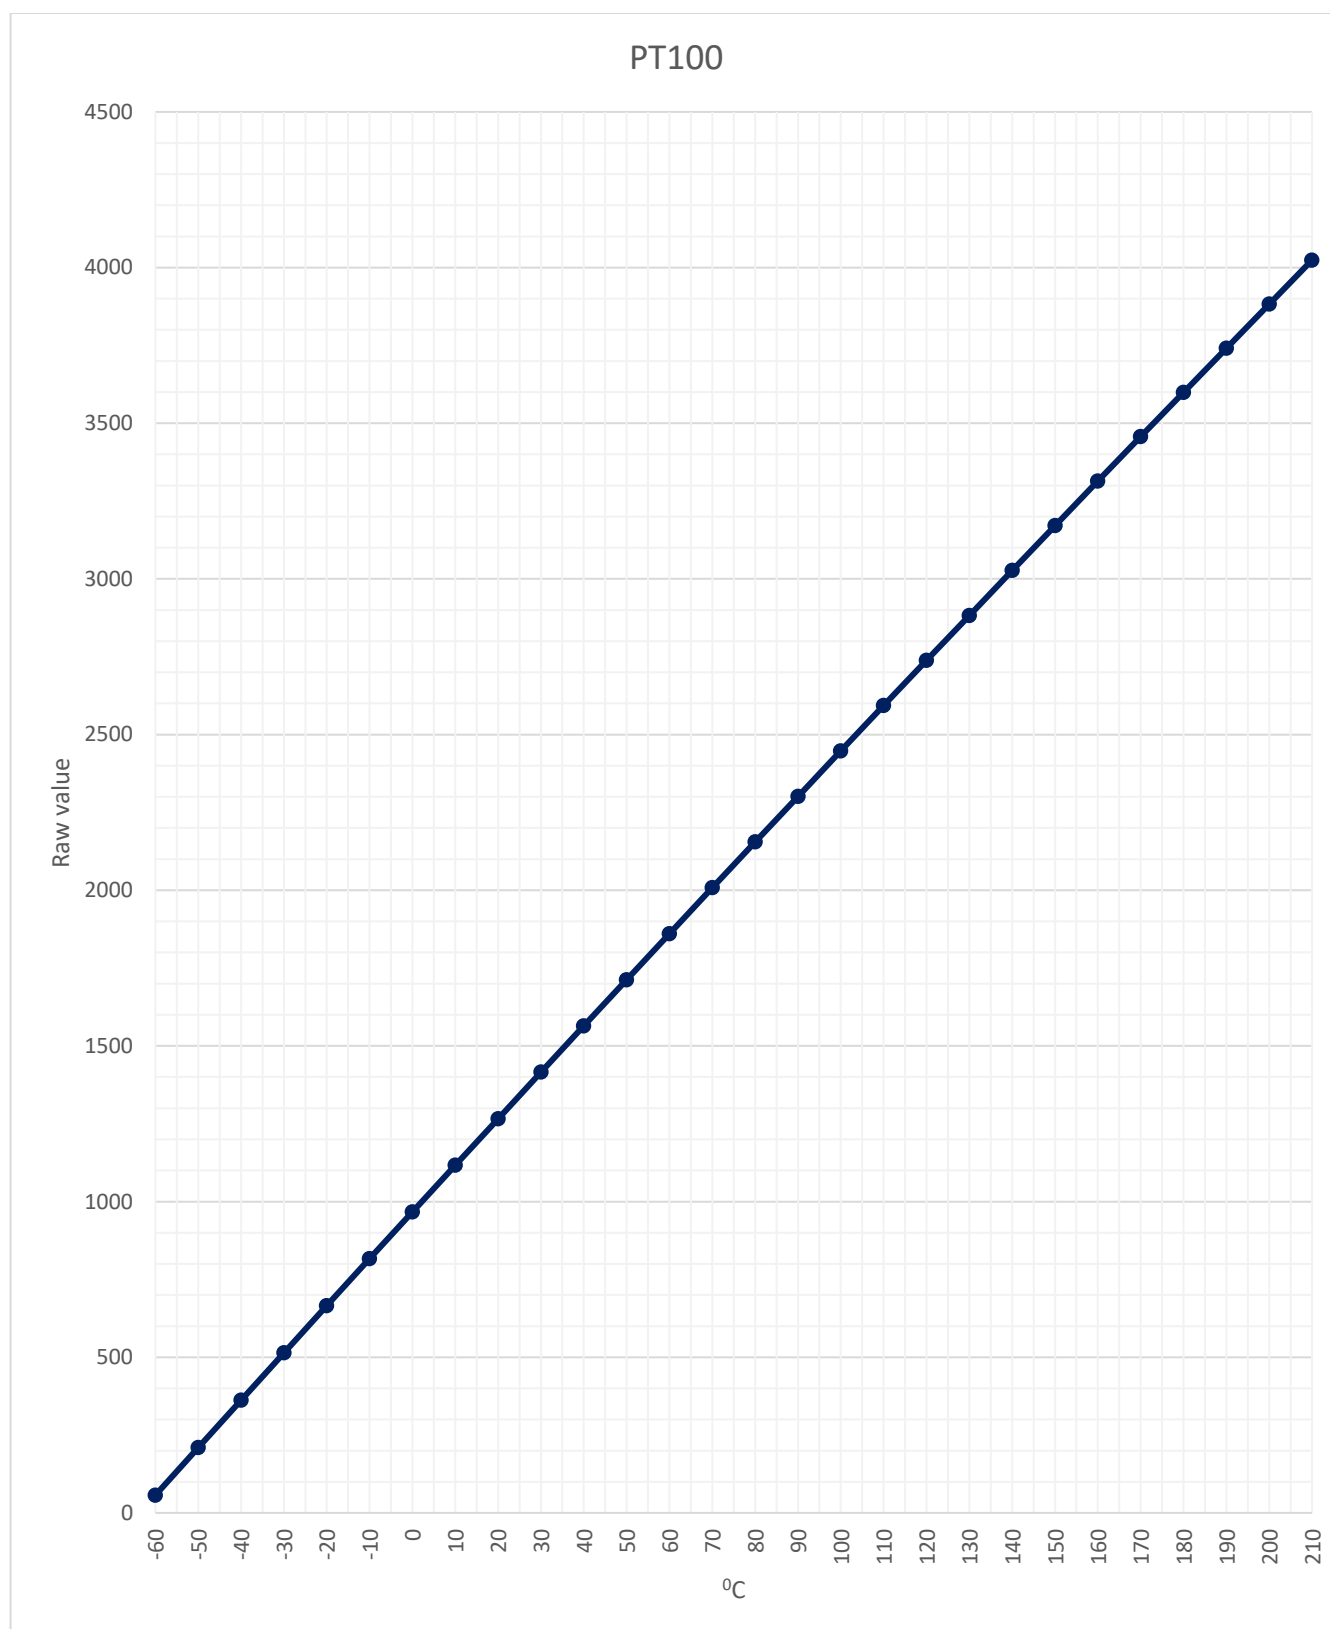


6.1.2 Temperature conversion chart T-motor


Use the appropriate sensor according to configuration.

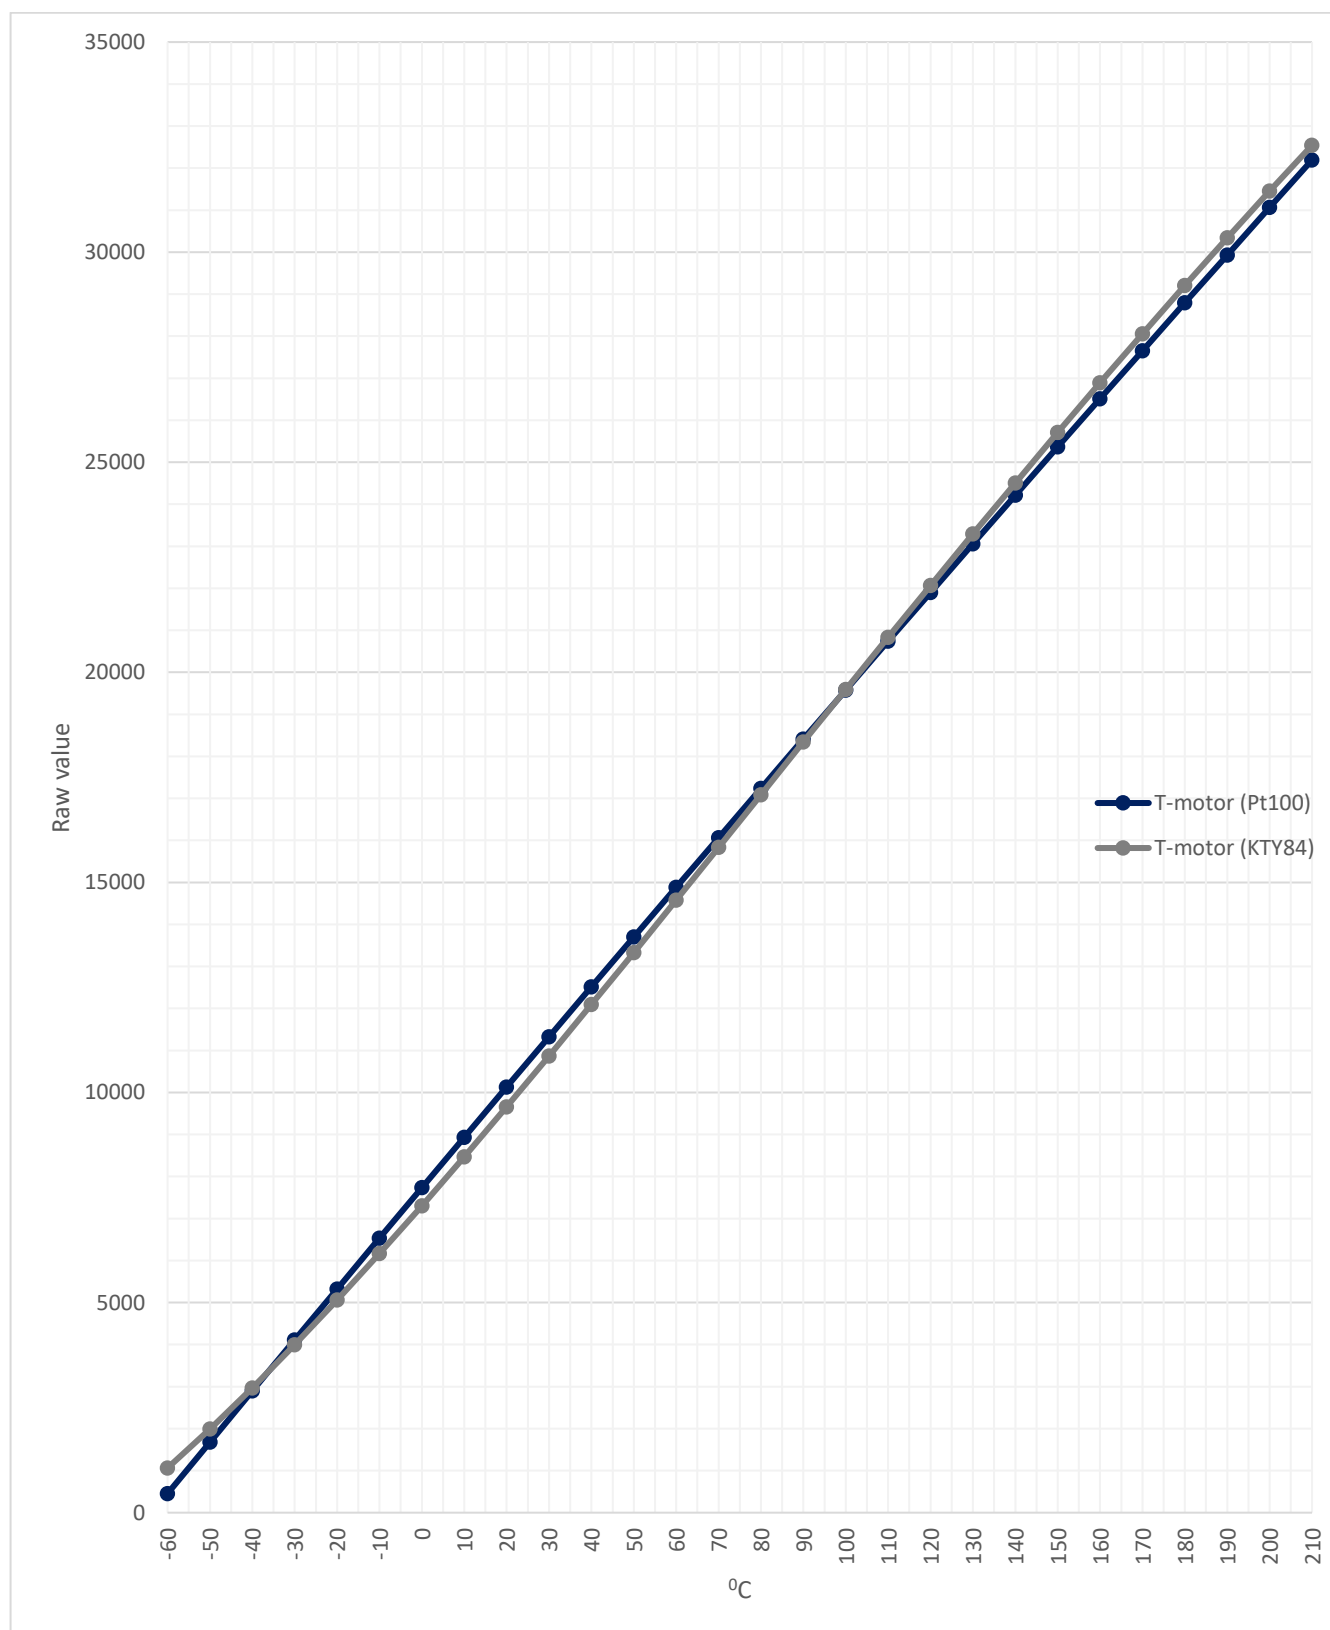

6.1.3 Temperature conversion chart T-air

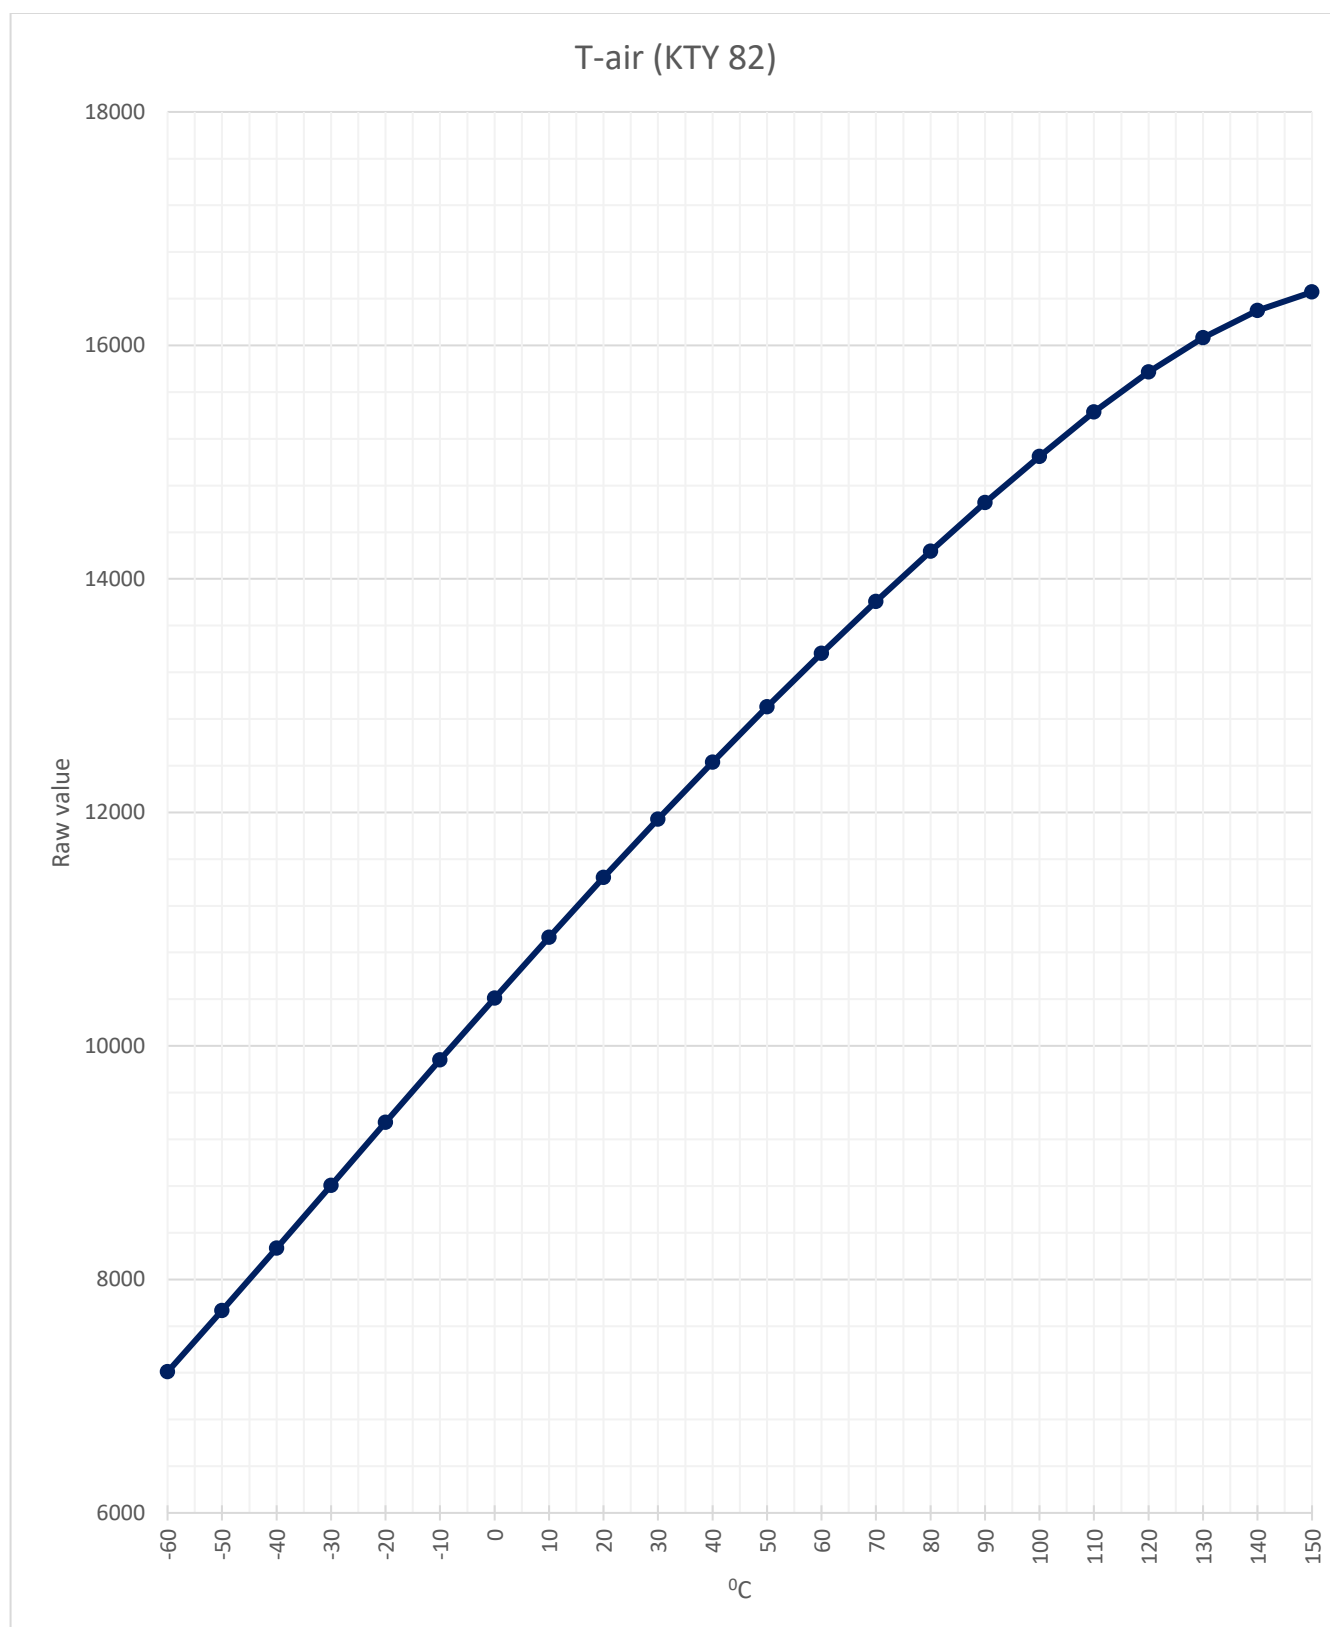

6.1.4 Temperature conversion chart T-igbt

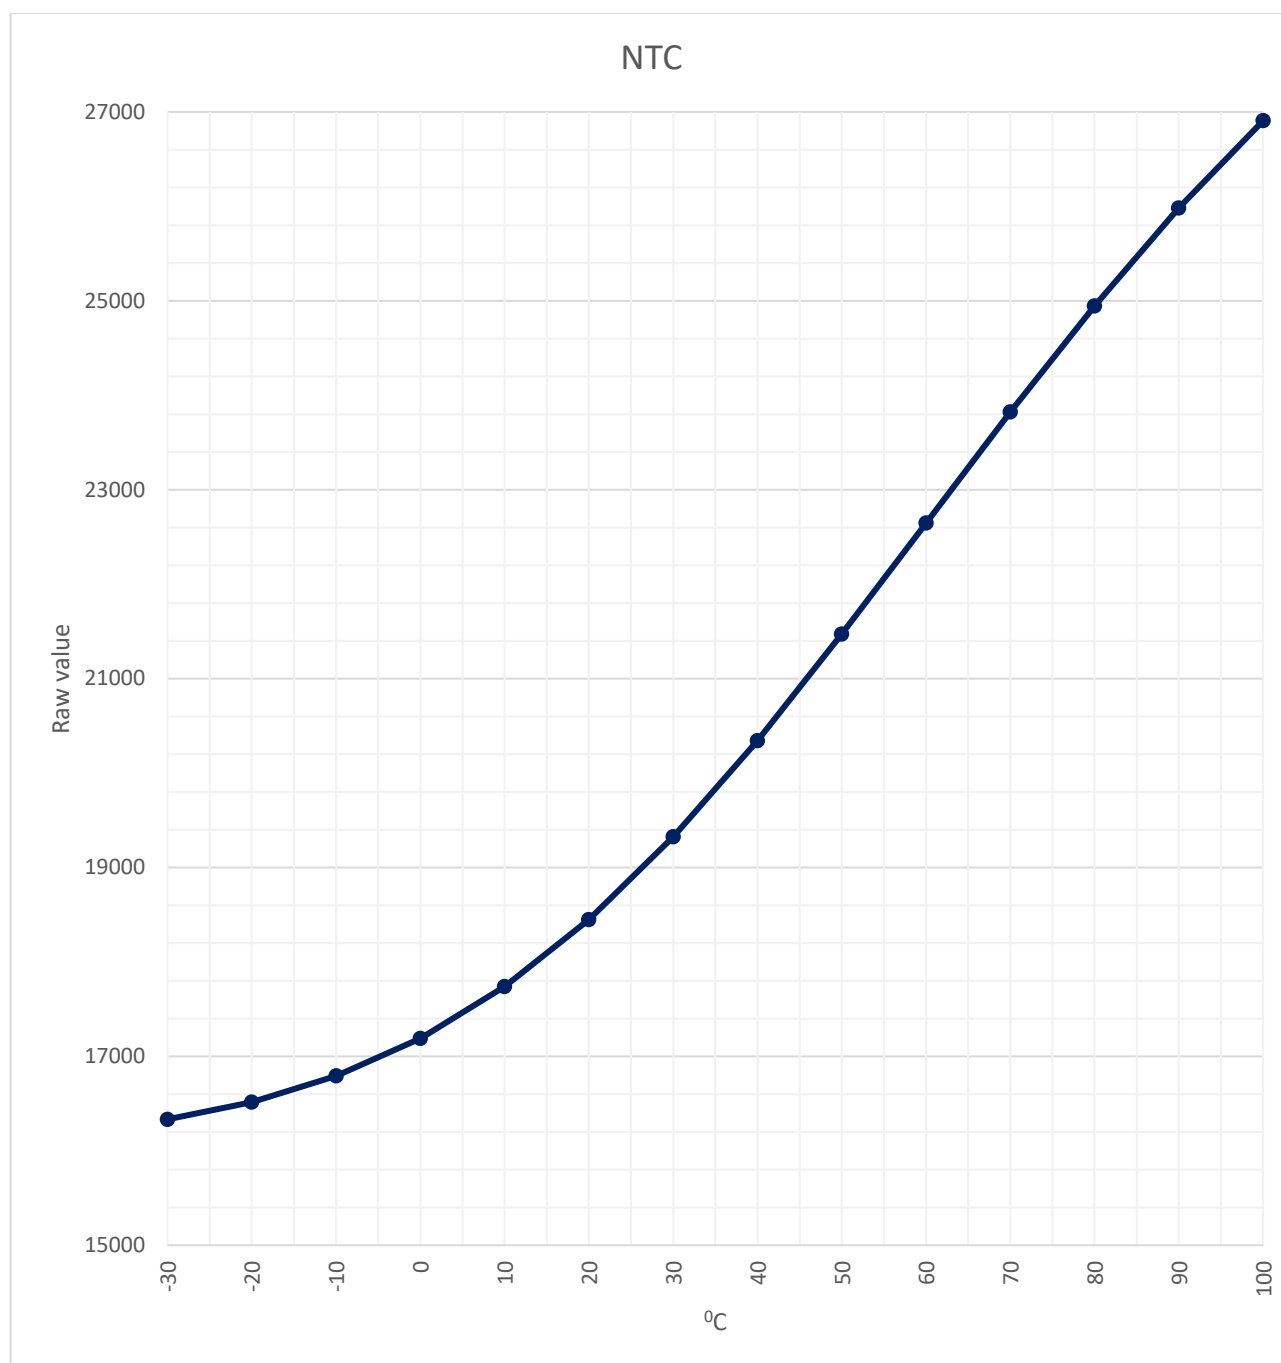

6.2 Configuration 1/3 tab

Due to the large number of configuration parameters, the configuration parameters are divided into three tabs: “Configuration 1/3”, “Configuration 2/3”, and “Configuration 3/3”.

“Configuration 1/3” and “Configuration 2/3” tabs contain most of the configuration parameters needed for configuring the IMD. A small number of parameters that are used by experts only are in “Configuration 3/3” tab.



Attention

Changing values in the IMD manager will immediately affect the IMD running configuration. However, the entered data will be lost in the next start up unless the configuration is saved to the EEPROM (see section [0](#) on page [36](#)).

The following figure shows the configuration 1/3 tab:

DEIF Monitor and control Configuration 1/3 Configuration 2/3 Configuration 3/3 Position Speed and current States Diagnostics Oscilloscope

Motor data

Type: Sync.Servo

I max: 10.0 A RMS

I nom: 2.5 A RMS

Num. of Poles: 10

T-sensor type: KTY 84 Pt100

Max. Temp: 23000 Num

Motor brake

Brake delay: 40 ms

Brake current: High Low

Motor feedback

Type: Resolver

Resol. poles: 2

Resol. offset: 83 Deg

General servo (IMD) data

Axis label: BL-1

Mains voltage: 400 V

DC-link Vmax: 789 V DC

DC-link Vlow: 137 V DC

DC-link Vmin: 271 V DC

SE Vlow: 206 V DC

Ballast

Rated res. power: 300 W

Resistor resistance: 20 Ohm

Energy divisor: /2

Motor PWM freq.: 12 kHz

I max extended: Disable Enable

SSI encoder type: Multi-t. Single-t.

Pt100 filter: Stand. Extend.

Safety run

Auto S-run @start: Disable Enable

S-run restart @LS1 off: Disable Enable

S-run @Mains return: Disable Enable

S-run speed profile: Disable Enable

Pre-heat

I pre-heat: 1/8 of I con ef

Current mode: Speed Torque

CAN-Bus

Protocol: CANopen

Baud rate: 500 kbps

CAN ID sw. pos: e

Base node ID: 1 hex

Time Out: 0 ms

Attention:
Always restart the IMD after changing CANopen settings.

Safe energy test

SE-test @ LS only: Enable Disable

SE-test single pulse: Short Long

Test PWM / time: 20% / 0.2s@1

Input-Output logic

Input logic

Logical input	Input function	Polarity
Limit S. 1	Ref. Plus	Active low Active high
Limit S. 2	Ref. Plus	Active low Active high
Logic-1 <= DI 1	-Off-	Active low Active high
Logic-2 <= DI 2	-Off-	Active low Active high

Output logic

Logical output	Operand 1	Operation	Operand 2
Logic-8 => DO 8	In Block	On	Var2
Logic-7 => DO 7	-Off-	=	1
Logic-6 => DO 6	Logic-1	=	1
Logic-5 => DO 5	Logic-2	=	1

Logical variables

	Input/Dec. represent.	Hex. represent.		Input/Dec. represent.	Hex. represent.
Var1	10000	0x00002710	Var2	3145728	0x00300000
Var3	10	0x0000000a	Var4	661654959	0x27700daf

Figure 6 Configuration 1/3 tab

The parameters in the configuration tab are grouped in groups. The following sub-sections describe each group. See IMD Integration manual and IMD 100 Function description for information about specific parameters and their function.

6.2.1 Motor data

The motor data group contains data about the specific motor used. In order to fill in the parameters the motor data sheet is needed. The values entered in this group are used for internal calculations in the motor control. Some of the data (I max for example) is also used as limits. If the I max in the application current definition is higher than the I max in the motor data, the I max value from the motor data will be used. Note that some of the parameters (brake delay and resolver details) are visible only if they are relevant. The following examples show different motor types with their relevant parameters.

The figure shows three examples of the 'Motor data' configuration window for different motor types:

- Sync.Servo:** Type: Sync.Servo. Parameters: I max: 10.0 A RMS, I nom: 2.5 A RMS, Num. of Poles: 10, T-sensor type: KTY 84, Pt100, Max. Temp: 23000 Num.
- Async.V/F:** Type: Async.V/F. Parameters: I max: 10.0 A RMS, I nom: 2.5 A RMS, Num. of Poles: 10, T-sensor type: KTY 84, Pt100, Max. Temp: 23000 Num, N nom: RPM, F nom: Hz, V nom: V, Cos Phi.
- Async.Servo:** Type: Async.Servo. Parameters: I max: 10.0 A RMS, I nom: 2.5 A RMS, Num. of Poles: 10, T-sensor type: KTY 84, Pt100, Max. Temp: 23000 Num, N nom: RPM, F nom: 200.0 Hz, V nom: 0 V, Cos Phi: 0.00.

Below the Motor data section, there are sections for 'Motor brake' and 'Motor feedback'.

- Motor brake:** Brake delay: 40 ms, Brake current: High/Low.
- Motor feedback:** Type: Resolver, Resol. poles: 2, Resol. offset: 83 Deg.

If the brake delay is configured with a value that is higher than 1000, the value will be presented in red (modulation will stop after approximately 1 s, even if the brake delay is configured higher).

This screenshot shows the 'Motor brake' section with the 'Brake delay' set to 1001 ms, which is displayed in red text to indicate it is above the 1000 ms threshold.

6.2.2 General servo (IMD) data

The general servo (IMD) data group contains information and parameters that are related to the general use and configuration of the IMD.

General servo (IMD) data

Axis label	BL-1	
Mains voltage	400	V
DC-link Vmax	789	V DC
DC-link Vlow	137	V DC
DC-link Vmin	271	V DC
SE Vlow	206	V DC

Ballast

Rated res. power	300	W
Resistor resistance	20	Ohm
Energy divisor	/ 2	

Motor PWM freq. 12 kHz

I max extended

SSI encoder type

Pt100 filter

6.2.3 Safety run

The safety run group contains parameter related to the safety run configuration.

Safety run

Auto S-run @start	<input type="button" value="Disable"/> <input type="button" value="Enable"/>
S-run restart @LS1 off	<input type="button" value="Disable"/> <input type="button" value="Enable"/>
S-run @Mains return	<input type="button" value="Disable"/> <input type="button" value="Enable"/>
S-run speed profile	<input type="button" value="Disable"/> <input type="button" value="Enable"/>

6.2.4 CAN bus

The CAN group contains configuration for the CAN/CANopen communication. It is only possible to select the communication type that the IMD Firmware allows (there is a different firmware for CAN and CANopen). It also shows the state (position) of the CAN ID switch on the front panel.

Setting the T-Out (bus timeout) to zero, disables the timeout function.

CAN-Bus

Protocol Prop.CAN (Tx 2/4)

Baud rate 250 kbps

Rx ID 200 hex

Tx ID 180 hex

T-Out 3000 ms

CAN ID sw. pos: 2

CAN-Bus

Protocol CANopen

Baud rate 250 kbps

Base node ID 20 hex

T-Out 2000 ms

CAN ID sw. pos: 2

Figure 7 The CAN group with CAN and CAN open firmware



Info

Always restart the IMD after changing any of the CAN settings.

6.2.5 Input logic

In general, digital inputs are passive, and their state can be read in a register. However, four of the inputs are programmable and have or can have special functions, which can be defined in the “Input logic” group.

Logical input	Input function	Polarity	
Limit S. 1	Ref. Plus	Active low	Active high
Limit S. 2	Ref. Plus	Active low	Active high
Logic-1 <= DI 1	Cancel Error(s)	Active low	Active high
Logic-2 <= DI 2	-Off-	Active low	Active high

Figure 8 Logical inputs

There are four inputs that can be defined: Limit S.1, Limit S.2, Logic-1, and Logic-2. For each of these inputs it is possible to define a function, and polarity (whether the action will be activated on high or low state of the input). At least one limit switch input is required, since without this function the IMD will consider them just digital inputs with no special action predefined.

In the example in [Figure 8](#) on page 29, Limit1 and Limit2 are defined as reference switches and Logic-1 is defined with “cancel error(s)” function. They are all active high.

Defining Limit1 and Limit2 as Ref. Plus, tells the IMD that these inputs are used as reference switches.

Defining Logic-1 as “Cancel error” function means that when the connection on Digital input 1 goes high, the IMD will cancel errors (the errors will be cancelled if the error causes are not valid anymore).



Attention

Safety run is turns the motor until a reference switch is reached. At least one of the limit switches (Limit S.1 or Limit S.2) must be configured to be a reference.

The following actions/definitions can be used for the inputs (some definitions are intentionally omitted, use only the described options):

Table 2 Input definitions and actions

Definition	Description
-Off-	The input does not have any definition attached. It is considered as any digital input.
Ref. & Limit Plus	The input is defined as both limit switch and reference switch. When this is configured, both “Lim+” and “Rsw” status bits are active when the input is active. When this switch is activated, it is only possible to continue in the opposite direction from which the switch was reached. That is, if the motor turned in the positive direction and the switch was activated, it is only possible to turn the motor in the negative direction to deactivate the switch. Safety run will stop if the input is configured as Ref. & Limit Plus.
Ref. & Limit Minus	The input is defined as both limit switch and reference switch. When this is configured, both “Lim-” and “Rsw” status bits are active when the input is active. When this switch is activated, it is only possible to continue in the opposite direction from which the switch was reached. That is, if the motor turned in the negative direction and the switch was activated, it is only possible to turn the motor in the positive direction to deactivate the switch. Safety run will stop if the input is configured as Ref. & Limit Minus.

Definition	Description
Ref. Plus	The input is defined as a reference switch. When this is configured, "Rsw" status bit is active when the input is active. It is possible to continue both in both negative and positive direction when this switch is activated. Safety run will stop if the input is configured as Ref. Plus.
Limit Plus	The input is defined as a positive limit switch. When this is configured, "Lim+" status bit is active when the input is active. When this switch is activated, it is only possible to continue in the opposite direction from which the switch was reached. That is, if the motor turned in the negative direction and the switch was activated, it is only possible to turn the motor in the positive direction to deactivate the switch. Safety run will NOT stop if the input is configured as Limit Plus.
Limit Minus	The input is defined as a negative limit switch. When this is configured, "Lim-" status bit is active when the input is active. When this switch is activated, it is only possible to continue in the opposite direction from which the switch was reached. That is, if the motor turned in the negative direction and the switch was activated, it is only possible to turn the motor in the positive direction to deactivate the switch. Safety run will NOT stop if the input is configured as Limit Minus.
Limit Plus Minus	The input is defined as a positive and negative limit switch. When this is configured, "Lim-" and "Lim+" status bit is active when the input is active. When this switch is activated, it is NOT possible to continue in any direction before the limit switch is deactivated or the input is reconfigured. Safety run will NOT stop if the input is configured as Limit Plus Minus.
Cancel Error(s)	When an input is configured to this, a function is invoked upon activation. This is the same function as the in the CAN/CANopen command (208E) or the cancel error (register 0x8E). This function is invoked every time the input becomes active. If the safety-chain relays are tripped (off) the cancel error will attempt to set them on. The input must be cycled to initiate the action again.
[Start] Ref. Drive	When an input is configured to this, a safety run is initiated upon input activation. The input must be cycled to initiate the action again.
Speed Ramp 0	If an input is configured as Speed Ramp 0, the motor will be stopped and held in position as soon as the input is active. When the input is not active anymore, the motion that was stopped by the input will be resumed.
[Start] Dest = Var1	When an input is configured to this, a motion to the destination saved in Var1 (see section 6.2.6.1 on page 32) is initiated upon input activation. The position control must be enable ($K_p > 0$) for this function to work.
[Start] Dest = Var2	When an input is configured to this, a motion to the destination saved in Var2 (see section 6.2.6.1 on page 32) is initiated upon input activation. The position control must be enable ($K_p > 0$) for this function to work.
N cmd Reverse	When an input is configured to this, the active speed value polarity (the motor direction) will be reversed as long as the input is active. This also applies to any speed set points that will be sent to the IMD while the input is active.
I limit (dig)	When an input is configured to this, the I-lim-dig will be imposed as long as the input is active.
N Clip (neg. & Pos.)	When an input is configured to this, speed limiting is activated as long as the input is active.

6.2.6 Output logic

The nine digital outputs (eight DOs and one Safety RO) can be set On and Off by bit mapping in register 0x98. However, four of these outputs (DO 5 to DO 8) can be programmed to do a different function which can be defined in the “Logic” tab in the IMD Manager.

Output logic	Logical output	Operand 1	Operation	Operand 2
	Logic-8 => DO 8	In Block	On	Var4
	Logic-7 => DO 7	–Off–	=	0
	Logic-6 => DO 6	–Off–	=	0
	Logic-5 => DO 5	–Off–	=	0

Figure 9 Logical outputs

The four outputs that can be defined in the Logical outputs group, are mapped to the following digital outputs:

- Logic-8 is mapped to DO 8 (It is recommended to use Logic 8 for fan control)
- Logic-7 is mapped to DO 7
- Logic-6 is mapped to DO 6
- Logic-5 is mapped to DO 5



Info

When configuring digital outputs, it is important to distinguish between the terms Logic-x and DO x. DO x is the actual physical output, while Logic-x is the logical mapping of a function to a specific output.

Programming the outputs is done as a Boolean function with two operands (1 and 2) and an operation. If the result of the function is true, the output will be set to High. If the result of the function is false, the output will be set to Low.

Examples:

Example1:

Output logic	Logical output	Operand 1	Operation	Operand 2
	Logic-8 => DO 8	In Block	On	Var4
	Logic-7 => DO 7	IMD state	=	1

In example 1 Logic-7 will be true when the IMD state is 1 (normal operation) and false in all other states. Output DO7 will be turned on when the IMD is in normal operation and off when not.

Example2:

Output logic	Operand 1	Operation	Operand 2
Logic-8 => DO 8	In Block	On	Var2
Logic-7 => DO 7	-Off-	=	0
Logic-6 => DO 6	-Off-	=	0
Logic-5 => DO 5	-Off-	=	0

	Input/Dec. represent.	Hex. represent.
Var2	3145728	0x00300000

In example 2 Logic-8 will be true when the In Block (reg. 9B) value ANDed with the value of Variable 2 (Var2 in this example 0x00300000) is different than zero and false if the result of the AND operation is zero. In this case, it checks bits 20 and 21 in Reg. 9B and if any of them is 1, the result will be true.

Output DO8 will be turned on when the Logic-8 state is true.

Example3:

Output logic	Operand 1	Operation	Operand 2
Logic-8 => DO 8	In Block	On	Var2
Logic-7 => DO 7	Pt100-2	=	Var4
Logic-6 => DO 6	-Off-	=	0
Logic-5 => DO 5	-Off-	=	0

	Input/Dec. represent.	Hex. represent.
Var2	3145728	0x00300000
Var4	1712	0x000006b0

In example 2 Logic-7 will be true when the PT100-2 value is greater than the value of Variable 4 (Var4 in this example 1712 ≈ 50°C).

Output DO7 will be turned on when the Logic-7 state is true (when the temperature is above 50 °C).

6.2.6.1 Operation

The following operations can be used (appears in the dropdown list):

Table 3 Possible operations in digital output programming

Operation	Description
On	This operation has two functions depending on operand 1: <ul style="list-style-type: none"> Boolean “AND” operation if one of the following is selected as operand 1: <ul style="list-style-type: none"> Logic freq. Warning-error map O-Block

Operation	Description
	<ul style="list-style-type: none"> ○ In block <p>The function result is true if the result of the AND operation is not zero, and false if it is zero.</p> <ul style="list-style-type: none"> • If any other (than the ones mentioned above) operand is selected as operand 1, the function result will always be true.
Off	<p>This operation has two functions depending on operand 1:</p> <ul style="list-style-type: none"> • Boolean “OR” operation if one of the following is selected as operand 1: <ul style="list-style-type: none"> ○ Logic freq. ○ Warning-error map ○ O-Block ○ In block <p>The function result is true if the result of the OR operation is zero, and false if it is not zero.</p> <ul style="list-style-type: none"> • If any other (than the ones mentioned above) operand is selected as operand 1, the function result will always be false.
1 Hz	A 1 Hz generator. When this operation is used it does not matter how operand 2 is defined. If “-Off-“ is selected as operand 1, only the state of Logic x (5 to 8) will be changed. Selecting anything else as operand 1 will map the 1 Hz generator to the actual output (DO x).
=	True if operand 1 is equal to operand 2
!=	True if operand 1 is not equal to operand 2
>	True if operand 1 is greater than operand 2
<	True if operand 1 is smaller than operand 2
abs>	True if absolute value of operand 1 is greater than absolute value of operand 2
abs<	True if absolute value of operand 1 is smaller than absolute value of operand 2
>=	True if operand 1 is greater or equal to operand 2
<=	True if operand 1 is smaller or equal to operand 2
hyst >=	Operation with Hysteresis (retains state until conditions for change are present). True if absolute value of Operand 1 is greater or equal to absolute value of operand 2. False if absolute value of Operand 1 is smaller than 93.75% of absolute value of operand 2.
hyst <=	Operation with Hysteresis (retains state until conditions for change are present). True if absolute value of Operand 1 is smaller or equal to absolute value of operand 2. False if absolute value of Operand 1 is greater than 106.25% of absolute value of operand 2.
window	True if absolute value of operand 1 is less than 1.25*absolute value of operand 2 AND greater than 0.75* absolute value of operand 2.

6.2.6.2 Operand 1

A large number of values can be used as operand 1 (see dropdown list in the IMD Manager). Most of these values are self-explanatory or can be found in the “Speed” and “Position” tabs in the IMD

Manager. The list is also almost identical to the dropdown list in the “Track” fields in the “Diagnostics” tab.



Info

Not all values can be used. If an illegal value is selected, the IMD manager will automatically change the value to the functionally closest value, and the user is notified.

When Operand 1 is set to “-Off-“, the mapping of Logic tx to the digital output is disabled. Note that even though the mapping is set to Off, the Logic x flag in the status might show on or off depending on the operation and operand 2. However, this state is not mapped to the actual digital output.

6.2.6.3 Operand 2

The following can be used as operand 2 (some definitions are intentionally omitted, use only the described options):

Table 4 Possible operand 2

Operand 2	Description
0	Always zero
1	Always one
Var1	Value defined for var1 (see section 6.2.6.1 on page 32)
Var2	Value defined for var2 (see section 6.2.6.1 on page 32)
Var3	Value defined for var3 (see section 6.2.6.1 on page 32)
Var4	Value defined for var4 (see section 6.2.6.1 on page 32)

6.2.7 Logic variables

Variables that can be used as operand 1 or operand 2 can be defined in the “Logic” tab.

Logical variables					
	Input/Dec. represent.	Hex. represent.		Input/Dec. represent.	Hex. represent.
Var1	0	0x00000000	Var2	0	0x00000000
Var3	0	0x00000000	Var4	3145728	0x00300000


Figure 10 Logical variables

Variables one to four can be define by entering a value in the input field for a variable. The value can be entered as a decimal value or as Hexadecimal value by adding “0x” in front of the value. Once you press the “Enter↵” key, the value will be configured and appear in the right side in Hexadecimal format and as decimal in the input field. For example, entering “0xa2” and pressing the “Enter↵” key will show 162 in the input field, and 0x000000a2 in the configured value field.

The defined variables are not used for anything else except for comparing them in the logical functions.

6.2.8 Safe energy test

The Safe energy test group defines the parameters related to the Safe energy test.

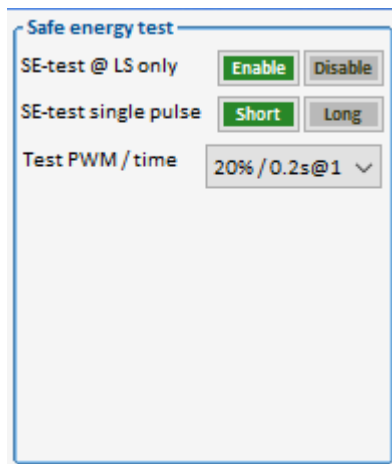


Safe energy test

SE-test @ LS only

SE-test single pulse

Test PWM / time 20% / 0.2s@1 ▾

If there is a risk of ballast resistor overload due to single pulse and timing configuration of the IMD, the following warning will be shown:

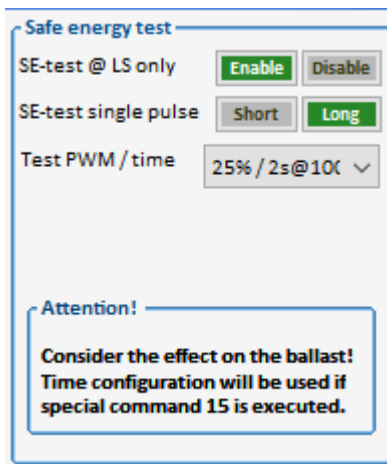

Safe energy test

SE-test @ LS only

SE-test single pulse


Test PWM / time 25% / 2s@10K ▾

Attention!

Consider the effect on the ballast!
Time configuration will be used if
special command 15 is executed.

6.2.9 Pre-heat

The Pre-heat group defines the parameters related to pre-heating the motor in very cold weather, prior to starting the turbine.

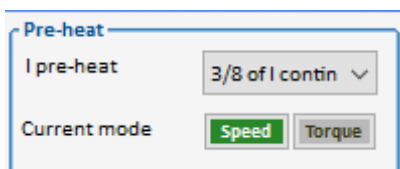

Pre-heat

I pre-heat 3/8 of I contin ▾

Current mode

6.3 Configuration 2/3 tab

Due to the large number of configuration parameters, the configuration parameters are divided into three tabs: “Configuration 1/3”, “Configuration 2/3”, and “Configuration 3/3”.

“Configuration 1/3” and “Configuration 2/3” tabs contain most of the configuration parameters needed for configuring the IMD. A small number of parameters that are used by experts only are in “Configuration 3/3” tab.



Attention

Changing values in the IMD manager will immediately affect the IMD running configuration. However, the entered data will be lost in the next start up unless the configuration is saved to the EEPROM (see section 0 on page 36).

The following figure shows the configuration 2/3 tab:

DEIF Monitor and control Configuration 1/3 Configuration 2/3 Configuration 3/3 Position Speed and current States Diagnostics Oscilloscope

Speed parameters

PID (speed)	
Kp	2
Ti	60 ms
TiM	90 %
Td	0 ms
Kacc	0 %
Filter	10 Num

Application speed definitions

N acc.time	300 ms
N dec.time	300 ms
M acc.time	300 ms
M dec.time	300 ms
Emerg.ramptime	150 ms

Speed limits

Nmax-100%	2400 RPM
Global N limit	100 % 2400 RPM
N limit +	50 % 1200 RPM
N limit -	-50 % -1200 RPM

Safety run

N S-run (step 0)	100 % 2400 RPM
T-out S-run	50 s
N blind S-run	20 % 480 RPM
T-out blind S-run	150 s

Safety run speed profile

Pos (Rev.)	N (%)	N (RPM)
Step 0	0	100% 2400
Step 1	30	80% 1920
Step 2	60	60% 1440
Step 3	80	40% 960
Step 4	100	20% 480

Current parameters

PID (current)	
Kp	1
Ti	600 μs
TiM	90 %
xKp2	100 %
Kf	0

Application current definitions

Ramp time	4500 μs
I max pk	10 % 12.7 A peak
T-peak	5 s
I con eff	4 % 2.4 A RMS

Current limits

I-lim-SE-Dig	100 % 12.7 A peak
I-red-N	0 % 0 RPM
I-red-TD	0 Num
I-red-TE	0 Num
I-red-TM	0 Num

Magnetic field weakening

Id nom	0 %
Id min	0 %
V red	0 %
V kp	1000
V-Ti	0 ms

Position parameters

PID (position)	
Kp	0
Ti	0 ms
Td	0 ms
TiM	0 %

Configuration management

PC to/from running configuration

Load Save Print Mail to

Load config. from EEPROM

Startup Back-up Factory def.

Save running config. to EEPROM

To startup To back-up

Figure 11 Configuration 2/3 tab

The parameters in the configuration tab are grouped in groups. The following sub-sections describe each group. See IMD Integration manual and IMD 100 Function description for information about specific parameters and their function.

6.3.1 Speed parameters

The speed parameters group contains all parameters related to speed control. The group is divided to four sub-groups:

- PID (speed): This sub group contains the PID control parameters for the speed control loop.
- Application speed definitions: This sub group contains definitions for acceleration and deceleration times
- Speed limits: This sub group contains definition of speed limits. Nmax-100% is defined in RPM and is the main speed definitions. All other speed definitions are made in percent related to this speed.
- Safety run: This sub group contains speed and timeout definitions for safety run and blind safety run (safety run with no sensors), as well as safety run speed profile definition.

Speed parameters			
PID (speed)			
Kp	2		
Ti	60	ms	
TiM	90	%	
Td	0	ms	
Kacc	0	%	
Filter	10	Num	
Application speed definitions			
N acc.time	300	ms	
N dec.time	300	ms	
M acc.time	300	ms	
M dec.time	300	ms	
Emerg.ramptime	150	ms	
Speed limits			
Nmax-100%	2400	RPM	
Global N limit	100	%	2400 RPM
N limit +	50	%	1200 RPM
N limit -	-50	%	-1200 RPM
Safety run			
N S-run (step 0)	100	%	2400 RPM
T-out S-run	50	s	
N blind S-run	20	%	480 RPM
T-out blind S-run	150	s	
Safety run speed profile			
	Pos (Rev.)	N (%)	N (RPM)
Step 0	0	100%	2400
Step 1	30	80% ▾	1920
Step 2	60	60% ▾	1440
Step 3	80	40% ▾	960
Step 4	100	20% ▾	480

Safety run speed profile:

If the Pos (Rev.) value in a step is equal or smaller than the previous step (1), or the resulting speed of a step is higher than $N_{max}-100\%$ (2) the wrong configuration will be shown in red.

Speed limits

Nmax-100%	2400	RPM
Global N limit	100	% 2400 RPM
N limit +	0	% 1200 RPM
N limit -	-50	% -1200 RPM

Safety run

N S-run (step 0)	80	% 1920 RPM
T-out S-run	50	s
N blind S-run	20	% 480 RPM
T-out blind S-run	150	s

Safety run speed profile

	Pos (Rev.)	N (%)	N (RPM)
Step 0	0	100%	1920
Step 1	200	140%	2688
Step 2	280	60%	1152
Step 3	280	40%	768
Step 4	350	20%	384

Annotation 1 points to the Pos (Rev.) value of 280 in Step 3, which is equal to the previous step (280). Annotation 2 points to the N (%) value of 140% in Step 1, which results in a speed (2688 RPM) higher than Nmax-100% (2400 RPM).

6.3.2 Current parameters

The current parameters group is divided to three groups: PID (current), Application current definitions and current limits.

- PID (current): This sub group contains the PID control parameters for the current control loop.
- Application current definitions: This sub group contains definitions for acceleration/deceleration (ramp) as well as current definitions.
- Current limits: This sub group contains definition of current limits. Various limits can be defined.

Current parameters

PID (current)

Kp	1
Ti	600 μs
TiM	90 %
xKp2	100 %
Kf	0

Application current definitions

Ramp time	4500 μs
I max pk	10 % 12.7 A peak
T-peak	5 s
I con eff	4 % 2.4 A RMS

Current limits

I-lim-SE-Dig	100 % 12.7 A peak
I-red-N	0 % 0 RPM
I-red-TD	0 Num
I-red-TE	0 Num
I-red-TM	0 Num

6.3.3 Magnetic field weakening

The parameters in this group are used to enable higher speed even when the voltage of the DC-link is lower than needed in order to maintain a specific speed. This is used for example, when a safety run is performed on safe energy and the voltage level decreases during the safety run.

Magnetic field weakening		
Id nom	0	%
Id min	0	%
V red	100	%
V kp	0	
V-Ti	0	ms

6.3.4 Position parameters

The position parameters group contains the PID control parameters for the position control. Setting the “Kp” parameter to 0 (zero), disables the position control in the IMD.

Position parameters		
PID (position)		
Kp	0	
Ti	0	ms
Td	0	ms
TiM	0	%

6.3.5 Configuration management - Loading and saving configurations

The IMD has multiple areas in its non-volatile memory (EEPROM) in which it is possible to store configurations. As illustrated in the following figure, all configuration management are performed through the IMD RAM memory, which holds the running configuration.

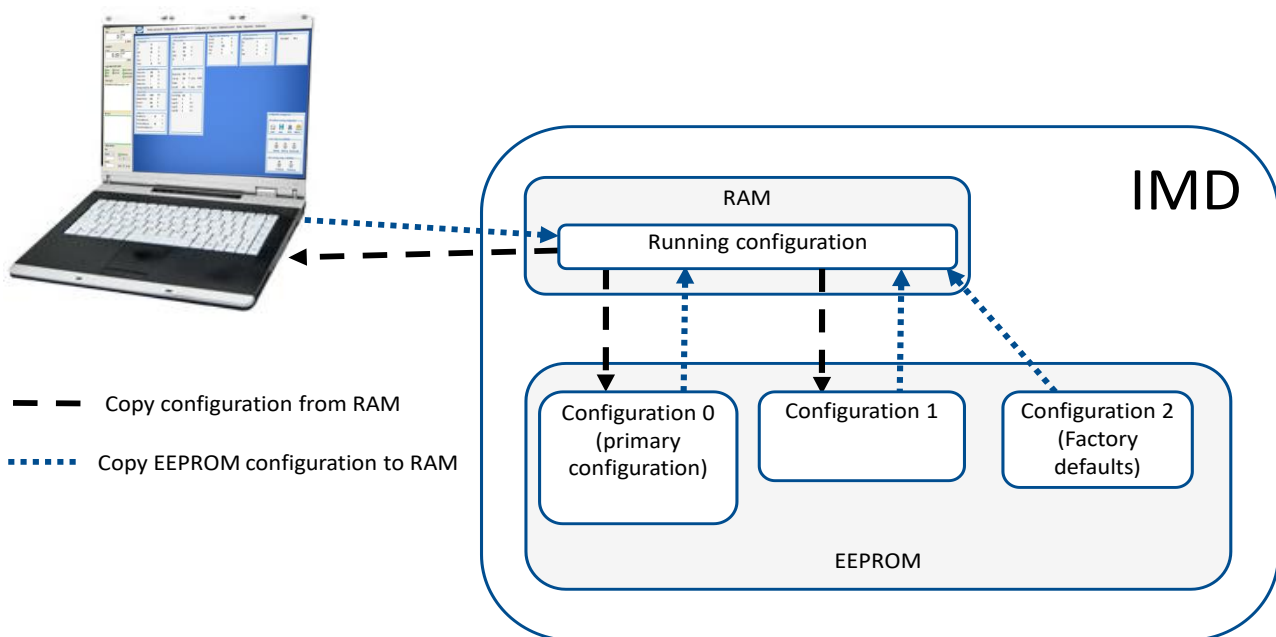


Figure 12 Configuration management


As illustrated there are three configurations that can be saved in the EEPROM:

- Configuration 0 is the default configuration that the IMD loads to the RAM upon start. This configuration is used as the running configuration
- configuration 1 can be used to save a “known good configuration” if you are trying changes in the IMD configuration. This way it is always easy to load a working configuration again if things go wrong.
- Configuration 2 is reserved for factory defaults configuration, which is the reason that it is not possible to save a configuration as configuration 2. Note that the factory defaults are contain the default values from the factory production, and not any customized default configuration that was used in the customer’s production.

It is possible to load another configuration using the IMD Manager. This configuration can be any of the configurations stored in the EEPROM of the IMD, or another configuration stored on the PC or anywhere else the PC can reach.

When parameters are changed (either from the IMD Manager or using the CAN interface), they are changed in the running configuration. The running configuration must be saved for the changes to be used the next time the IMD starts, or be retrievable from a saved configuration.

All configuration management actions are performed from the “Configuration management” group (see description in the following table):

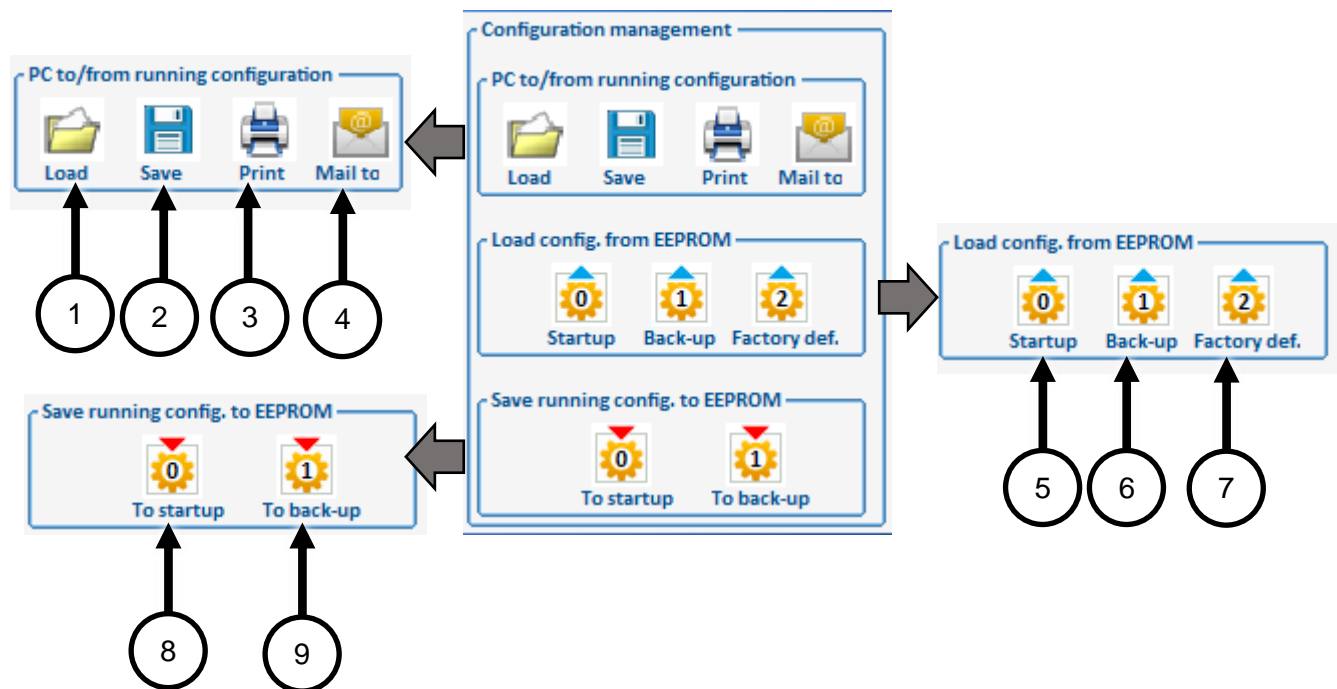


Position	Button description
1	Load a configuration file from the PC to the RAM
2	Save the running configuration from the RAM to a file
3	Print a selection of the running configuration (a printer is required). It is not possible to change the selection.
4	Send the running configuration as an attachment to an e-mail
5	Load configuration 0 from the EEPROM to the RAM
6	Load configuration 1 from the EEPROM to the RAM
7	Load configuration 2 from the EEPROM to the RAM

Position	Button description
8	Save the running configuration from the RAM in the EEPROM as configuration 0
9	Save the running configuration from the RAM in the EEPROM as configuration 1

**Info**

If the IMD is enabled (Dev. Enabled is green) only Save, Print, and Mail to are enabled. In order to use any of the other buttons the device must be disabled either by setting the RUN low or clicking on the “Enable dev.” button.

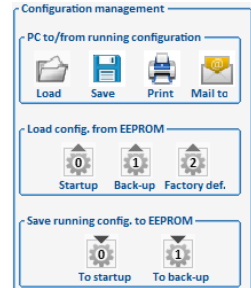

6.4 Configuration 3/3 tab

Due to the large number of configuration parameters, the configuration parameters are divided into three tabs: “Configuration 1/3”, “Configuration 2/3”, and “Configuration 3/3”.

Apart from resolver calibration and name plate calculation described in the IMD Integration manual, “Configuration 3/3” tab is intended for experts/DEIF use only.

DEIF Monitor and control Configuration 1/3 Configuration 2/3 Configuration 3/3 Position Speed and current States Diagnostics Oscilloscope

Special functions

idle

[Fn4] Resolver Offset cal.

[Fn8] Calc from motor nameplate

[Fn9] VDC-link zero compenstaion

[Fn10] VDC-link voltage compenstaion

Reg. 0x85 raw value: 0x0000

Idle

Volt/freq control configuration for async. motor

	Start	End
Tdc	0 ms	0 ms
Vdc	0.0 %	0.0 %
Vmin	0.0 %	0.0 %
Fmin	0.0 Hz	0.0 Hz
Vcorner	0.0 %	0.0 %
Fcorner	0.0 Hz	0.0 Hz

Additional motor parameter

L sigma-q	0.000	0.000	mH
L sigma-d	0.000	0.000	mH
R stator	123	123	mOhm
TC stator	0.0		ms
L magnet.	1.23	1.23	mH
R rotor	0	0	mOhm
TC rotor		200.0	ms

Analogue calibration

Look-up -1919.2

DC-link 15003

Safe energy 3990




Info

In the additional motor parameter group, the editing fields are not updated automatically. They are only updated when a field is edited and when the IMD manager is connected to the IMD (updated once). To update the editable fields, disconnect and reconnect the IMD manager to the IMD.


6.5 Position tab

The “Position” tab shows a flow chart of the position control loop with the related parameters and flags. This tab is intended for expert’s use.

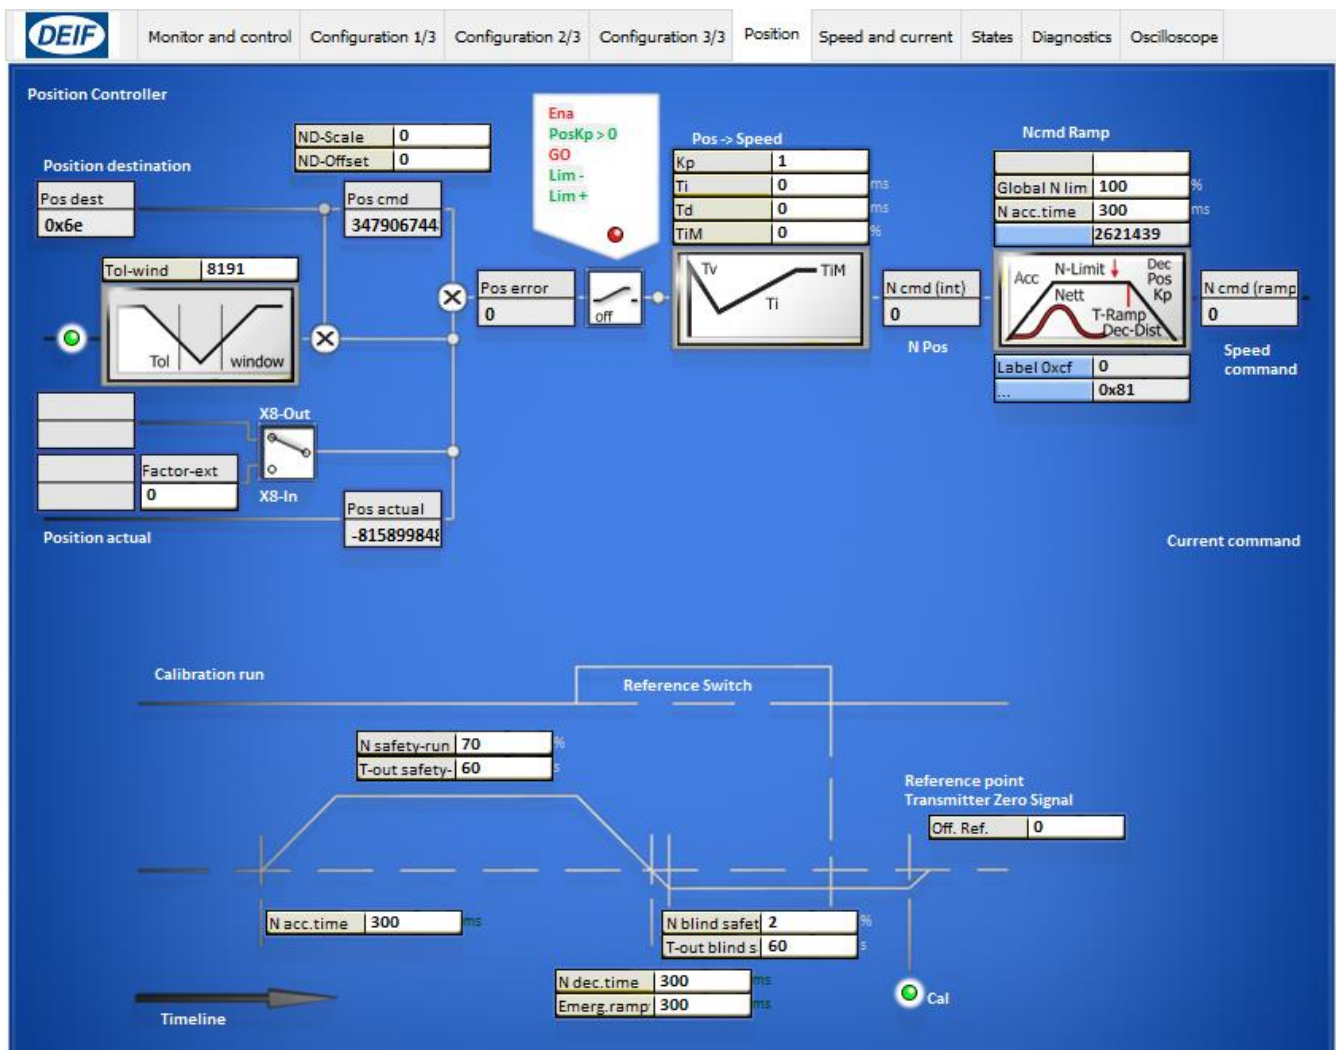


6.6 Speed and current tab

The “Speed and current” tab shows a flow chart of the speed and current control loops with the related parameters and flags. This tab is intended for expert’s use.

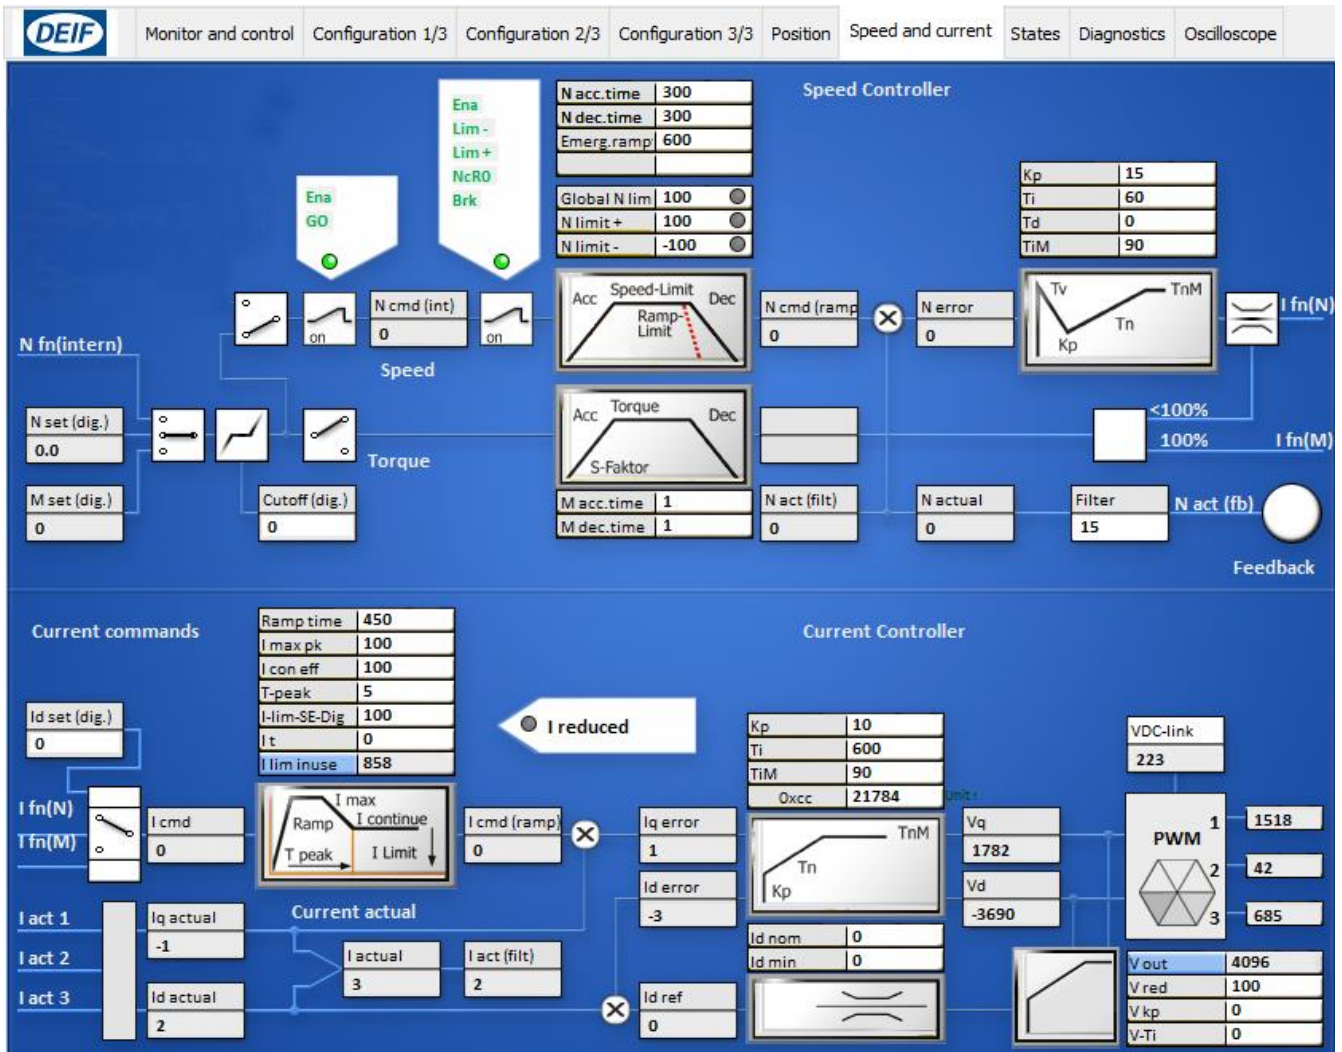

6.7 States tab

The “States” tab shows a flow chart of the IMD states. It does not contain all possible states. States that are only traverses without stopping and therefore will never be visible to the user are not depicted. A green LED indicates the present state of the IMD.

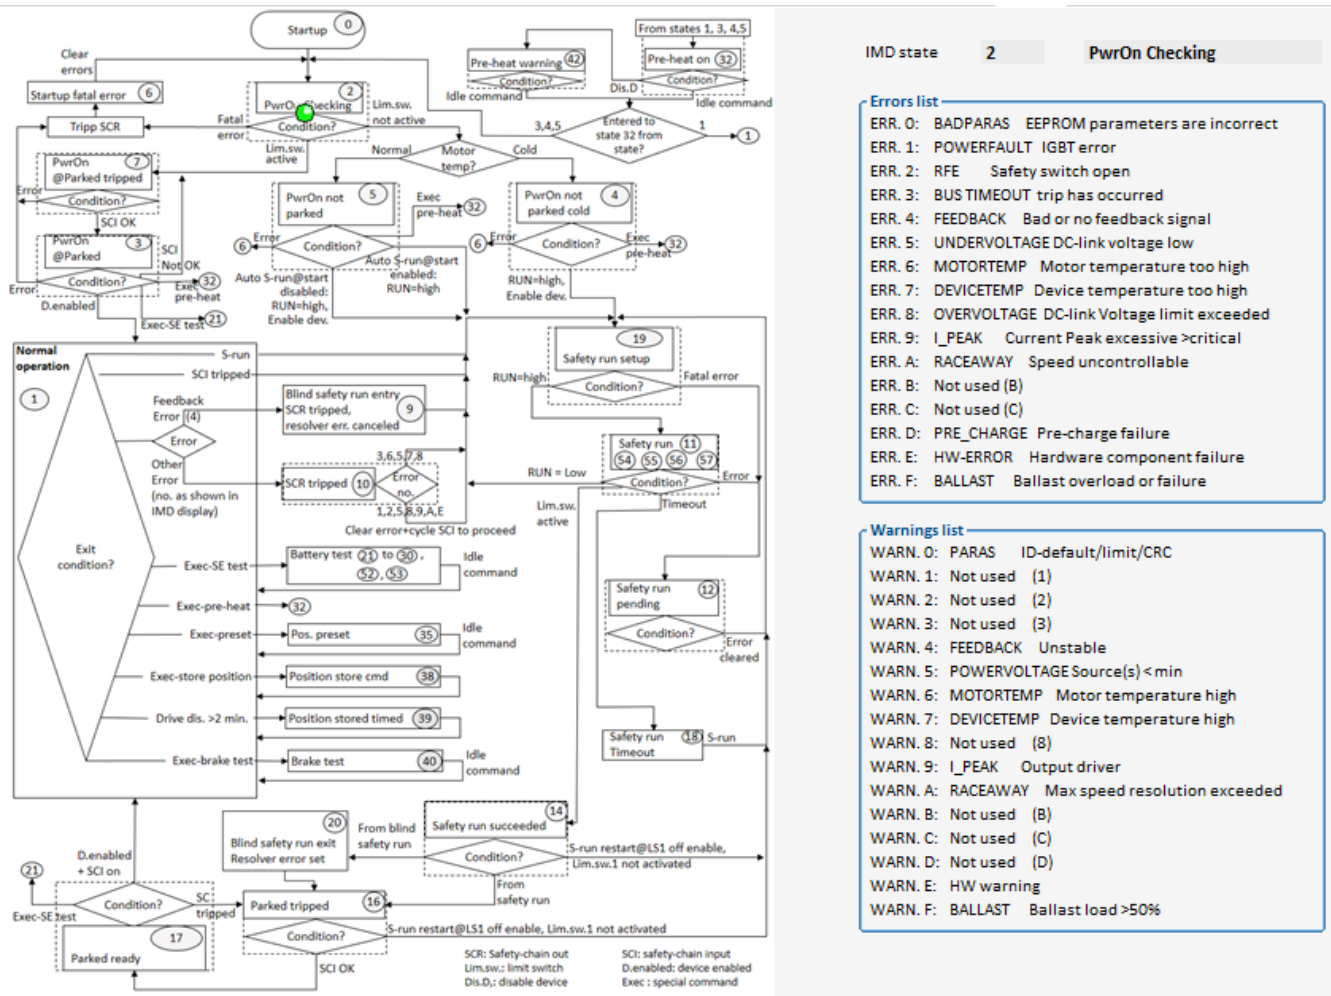

lists of errors and warnings are also shown.

6.8 Diagnostics tab

The “Diagnostics” tab in the IMD Manager is used for easily accessing some parameter values as well it enables direct read and write operations to registers. Clicking on the buttons on the left side, open the respective windows, that enables different operations.

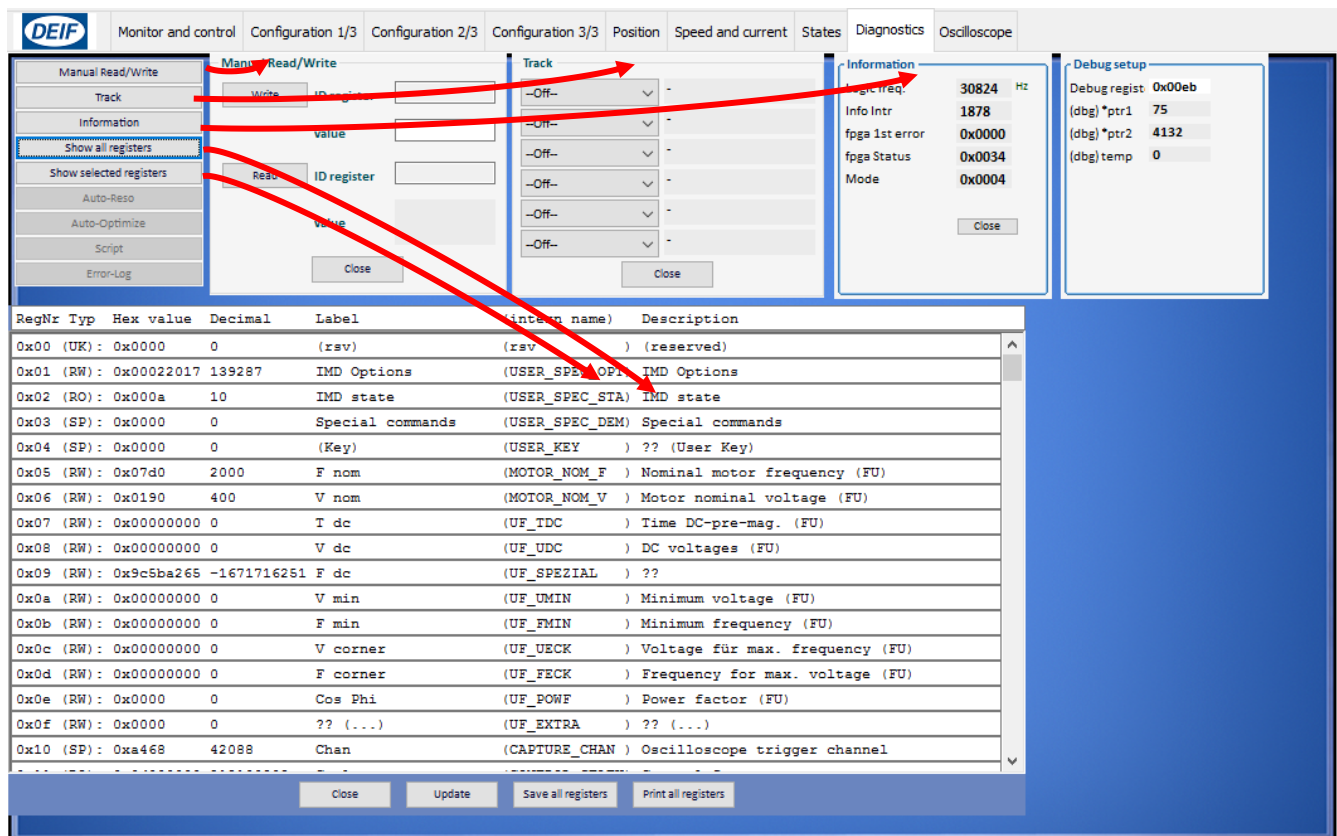


Figure 13 Diagnostics tab

6.8.1 Manual Read/write

The manual Read/Write enables direct read or write to a specific register. It is mainly used for writing to registers that are otherwise not available. The ID register is entered in either Hexadecimal by writing "0x" in front of the ID no. or decimal by omitting the "0x".

In the following example the motor temperature sensor is changed from KTY84 to Pt100. This is done in the User options register by changing bit 0 from zero to one (note that this is an alternative way to do it – there is a button in "Configuration 1/3" that has this function). In order not to change other settings in the User options, the present value is read first.

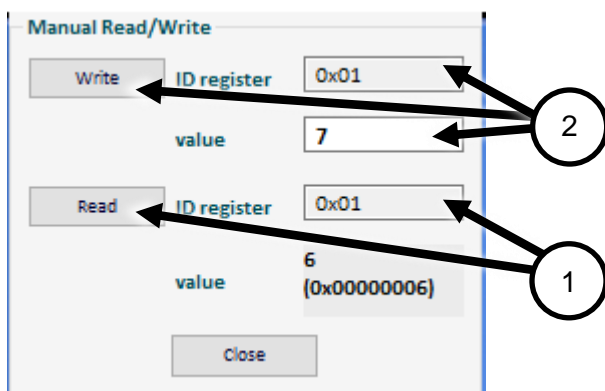


Figure 14 Manual Read/Write

In the example above register 0x01 (User options) is read for the present value by writing "0x01" in the bottom "ID register" field and clicking on the "Read" button (pos. 1).

The result "6" is shown in the "Value" field: Bit 1 (extended PT100 filter) and bit 2 (SSI type) are set. The new value needs to be "7" (bit 0, bit 1, and bit 2 are set). Enter "0x01" in the top "ID register"

field, enter “7” in the value field and click on the “Write” button (pos. 2). The value in the register is now changed.

6.8.2 Track

Track can be used for continuously monitoring specific parameters while the IMD Manager is connected to the IMD. Up to 6 parameters can be monitored simultaneously. Select the parameter from the dropdown list and the value will be shown in decimal and hexadecimal (in parentheses).


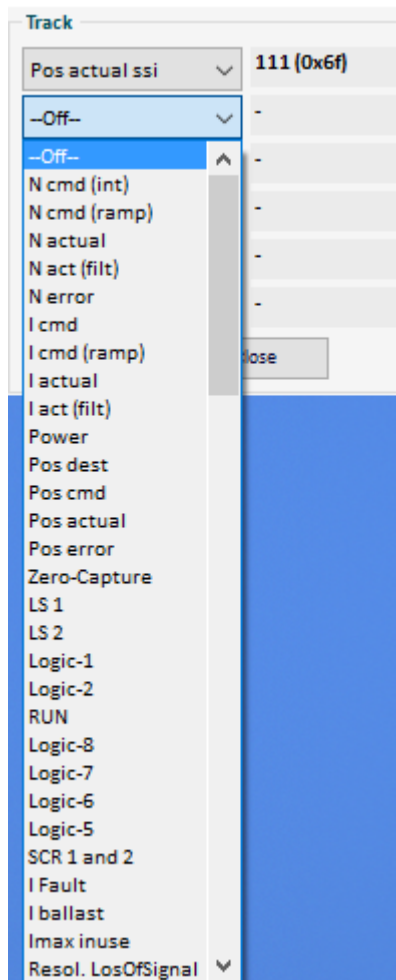


Figure 15 Track

6.8.3 Information

The information window shows internal error codes and status, and is used for factory debugging purposes.

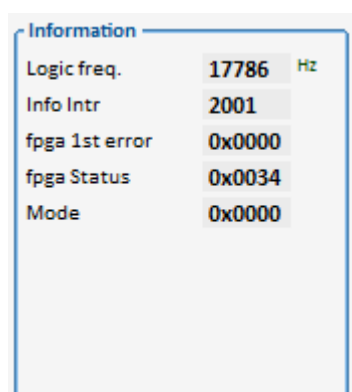

6.8.4 Debug setup

This group is intended for DEIF use only.

Debug setup

Debug regist: 0x00eb
 (dbg) *ptr1 75
 (dbg) *ptr2 4132
 (dbg) temp 0

6.8.5 Show all registers

The “show registers” shows either some of the registers or all of them. When clicking on the “show selected registers” it is not possible to modify which registers are shown. The list is not updated automatically. Click on the “Update” button to update the contents.

Monitor and control | Configuration 1/3 | Configuration 2/3 | Configuration 3/3 | Position | Speed and current | States | Diagnostics | Oscilloscope

Manual Read/Write
 Track
 Information
 Show all registers
 Show selected registers

RegNr	Type	Hex value	Decimal	Label	(intern name)	Description
0x00	(UK)	0x0000	0	(rsv)	(rsv)	(reserved)
0x01	(RW)	0x00000007	7	IMD Options	(USER_SPEC_OPT)	IMD Options
0x02	(RO)	0x0001	1	IMD state	(USER_SPEC_STA)	IMD state
0x03	(SP)	0x0000	0	Special commands	(USER_SPEC_DEM)	Special commands
0x04	(SP)	0x0000	0	(Key)	(USER_KEY)	?? (User Key)
0x05	(RW)	0x07d0	2000	F nom	(MOTOR_NOM_F)	Nominal motor frequency (FU)
0x06	(RW)	0x0000	0	V nom	(MOTOR_NOM_V)	Motor nominal voltage (FU)
0x07	(RW)	0x00000000	0	T dc	(UF_TDC)	Time DC-pre-mag. (FU)
0x08	(RW)	0x00000000	0	V dc	(UF_UDC)	DC voltages (FU)
0x09	(RW)	0x9c5ba265	-1671716251	F dc	(UF_SPEZIAL)	??
0x0a	(RW)	0x00000000	0	V min	(UF_UMIN)	Minimum voltage (FU)
0x0b	(RW)	0x00000000	0	F min	(UF_FMIN)	Minimum frequency (FU)
0x0c	(RW)	0x00000000	0	V corner	(UF_UECK)	Voltage für max. frequency (FU)
0x0d	(RW)	0x00000000	0	F corner	(UF_FECK)	Frequency for max. voltage (FU)
0x0e	(RW)	0x0000	0	Cos Phi	(UF_POWF)	Power factor (FU)
0x0f	(RW)	0x0000	0	?? (...)	(UF_EXTRA)	?? (...)
0x10	(SP)	0x2068	8296	Chan	(CAPTURE_CHAN)	Oscilloscope trigger channel

Close | Update | Save all registers | Print all registers

Be aware that many of the registers are used for intermediate results in calculations. Some of the registers and descriptions will not make sense to normal users.

6.9 Oscilloscope

The built-in oscilloscope enable direct measurements on the IMD.







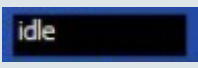


Figure 16 The built-in oscilloscope

6.9.1 Screen functions

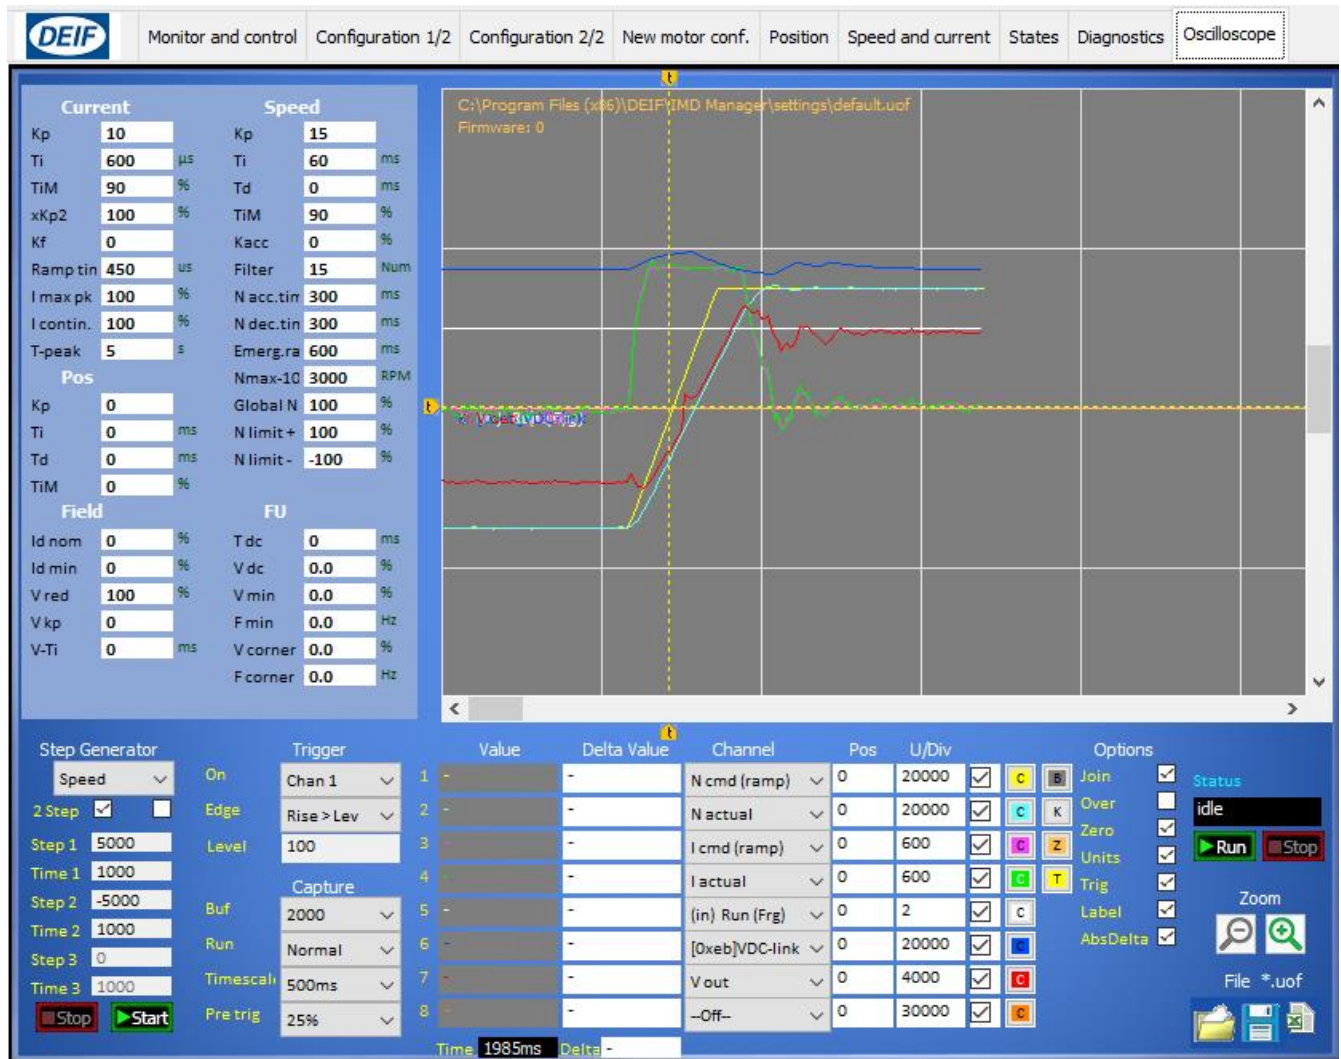


Option			
Join	Pixels connected		
Over	The display remains and is over-written		
Zero	Zero line visible		
Units	Display as "num" or real values		
Trig	Trigger line visible		
Label	Channel designation visible		
AbsDe			
Screen colours			
B	Oscilloscope background		
K	Oscilloscope grid		
Z	Oscilloscope zero line		
T	Oscilloscope trigger line		
Zoom			
 (Zoom +)	The screen content is enlarged		
 (Zoom -)	The screen content is reduced		
File			
	Load an oscilloscope file from the pc		
	Save the oscilloscope content as *.uof file on the pc		
	Save the oscilloscope content as excel file		
Status			
	State	Colour	Description
	Waiting (0)	Red	Display of the last recording and waiting for a new triggering
	Waiting (xx)	Green	Triggered, data are saved
	Reading	Blue	Reading of the data from the drive to the pc
	Drawing		Display of the data on the oscilloscope screen
	Idle	White	Frozen data after 'Stop capture'

Run/Stop

The oscilloscope recording is focused via the key field 'run capture'. The recording is started at the next triggering signal.



The recording is cancelled through 'stop capture' and the display is frozen

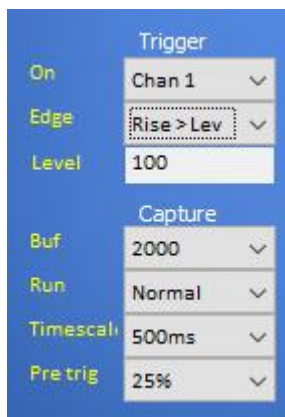6.9.2 Trigger and capture functions

On	Selection of the channel for the trigger function
Edge	Selection of the trigger function with regards to the level (such as rise, fall, equal)
level	Trigger level (numerical value)
Buf	Resolution, horizontal pixels for all switched-on channels
Run	Selection trigger switching function
Timescale	Time unit per gridline
Pre trig	Horizontal shifting of the trigger line. Measured value display before the trigger line

6.9.3 Channel selection

In the channel selection, it is possible to select what the different channels measure.

	Value	Delta Value	Channel	Pos	U/Div		
1	-1307 RPM	1286 RPM	N cmd (ramp) ▾	0	20000	☑	
2	-1364 RPM	834 RPM	N actual ▾	0	20000	☑	
3	12.79 A	57.10 A	I cmd (ramp) ▾	0	600	☑	
4	10.55 A	60.26 A	I actual ▾	0	600	☑	
5	1	0	(in) Run (Frg) ▾	0	2	☑	
6	17409	1873	[0xeb]VDC-link ▾	0	20000	☑	
7	-1656	672	V out ▾	0	4000	☑	
8	-	-	-Off- ▾	0	30000	☑	


Field	Function
Value	Value at the first cursor line (numerical or real)



Time	Time from the trigger line to the first cursor line
Delta Value	Difference values from the first to the second cursor
Delta (Time)	Difference time from the first to the second cursor
Channel	All measured values from the selection table can be displayed on the oscilloscope. The drop-down menu opens by clicking the arrow key. The required measured value is selected and assigned to the channel no. The channel is switched off at 'off'. Channels which are not used must always be switched off! (Off)
Pos	The value of 100 corresponds to a horizontal grid line. For example: At value 50 the zero line of the selected channel is shifted upwards by half a square.
U/Div	Units for a horizontal grid line. For example: U/Div = 32768 at N cmd Ramp. (N max parameter = 3000 rpm) The numerical value (32768) of the speed command value corresponds to a horizontal line at 3000 rpm. At cursor request a horizontal line equals 100. Thus, the cursor value 100 corresponds to a speed of 3000.
Channel checkbox	The display of the channel is switched on and off. The switched-off channel remains in the background and is also saved.
Channel colour	A colour selection window is opened by clicking the colour key C. Select the new channel colour and accept it by clicking 'ok'.

6.9.4 Step generator

The oscilloscope has a built-in command executer (step generator) that can execute two or three steps in a loop. It is possible to set a parameter value for either speed, current, torque or position, as well as the duration (time) for each step. Enter a value for a step and select the control for the step (speed, current, torque or position). Except for the parameters configured in the steps of the step generator, all other configured parameters will be used (such as limits, ramp time and so on).

Once the step generator is started with the start button, it will loop through the steps until the stop button is pressed.

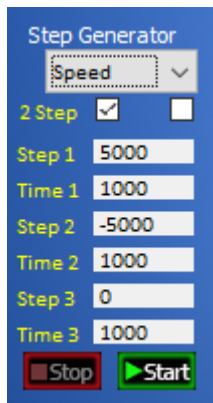

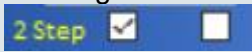

Step generator selection	Select what the value in a step will be executed as: speed, current, torque or position
2 step check boxes	Select sequence length: Two steps:  Three steps: 
Step 1	Value for step 1. Value type depends on the selected function in the Step generator selection (speed, current, torque or position)
Time 1	Time duration for step 1 in ms. Range: 0 – 32767.
Step 2	Value for step 2. Value type depends on the selected function in the Step generator selection (speed, current, torque or position)
Time 2	Time duration for step 2 in ms, If the sequence is two steps, it will stop after time 2 elapsed. Range: 0 – 32767.
Step 3	Value for step 3 (disabled if two step is selected). Value type depends on the selected function in the Step generator selection (speed, current, torque or position)
Time 3	Time duration for step 3 in ms (disabled if two step is selected). The sequence will stop after time 3 elapsed. Range: 0 – 32767.

Value ranges according to type:

Current	± 330
Torque	± 32767
Speed	± 32767
Position	± 2147483647

Using the step generator:

1. Configure the steps in the step generator
2. Enable the drive (the Dev.Enabled LED must be on)
3. Start the step sequence by clicking on the start button () of the step generator:
4. The steps will now be executed in a continuous loop
5. The execution can be stopped by clicking on the stop button () of the step generator.



Attention

When using “current”, “torque” or “position”, the motor might rotate at max speed if no other limit is set. Consider any travel limits before starting the step execution.

6.9.5 Display of measurements


The recording of the measured values is displayed with the selected colours.

The first vertical trigger line is tagged with an arrow symbol at the upper and lower edge of the screen. The second vertical line is the first cursor line.

The active second cursor is displayed as horizontal and vertical crossline.

The measured values at the first vertical cursor line are displayed at value and saved. The measured values at the second cursor (crossline) are displayed in the fields "Delta value" as delta values from the values at the first cursor. The time from trigger line to the first cursor line is displayed in the "Time" field. The time between the first cursor line and the second cursor line is displayed the "Delta" field.

If the "Units" box in the "Options" is ticked the displayed values are transformed from numerical to real values.

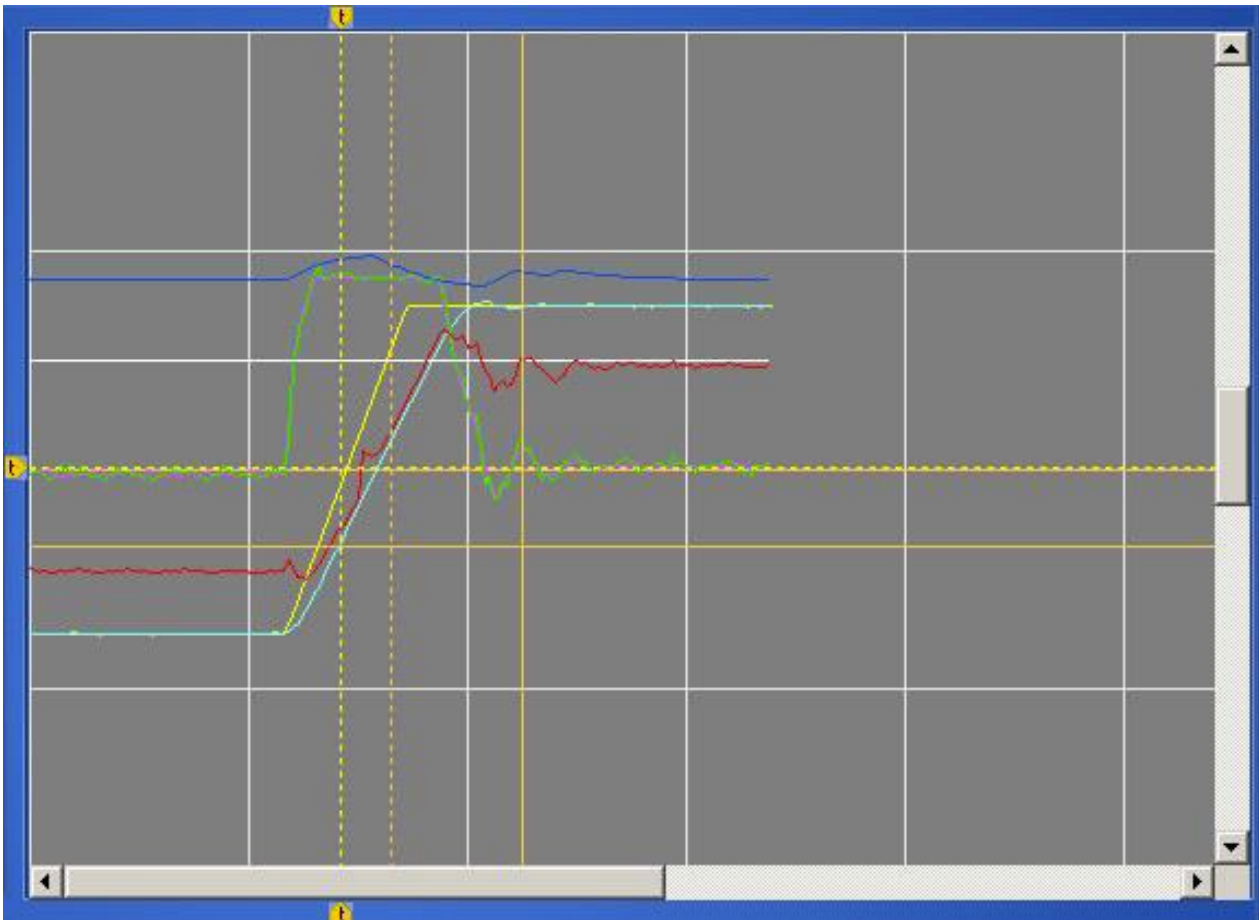

6.9.6 Parameters in the oscilloscope tab

The parameters of the Oscilloscope tab can be changed during the test function. The modifications are transferred immediately to the running parameter set (tabs Configuration 2/3, and 3/3). The volt/freq. control are the same as the “Start” column in the “Volt/freq control configuration for async. Motor” group in tab “Configuration 3/3”.

The result is immediately displayed on the oscilloscope screen after the next triggering.

Current		Speed	
Kp	0x1c	Kp	0x2c
Ti	0x1d μ s	Ti	0x2d ms
TiM	0x2b %	Td	0x2e ms
xKp2	0xc9 %	TiM	0x3b %
Kf	0xcb	Kacc	0x5b %
Ramp tin	0x25 μ s	Filter	0x5e Num
I max pk	0xc4 %	N acc.tin	0x35 L ms
I contin.	0xc5 %	N dec.tin	0xed L ms
T-peak	0xf0 s	Emerg.ra	0xc7 ms
Pos		Nmax-10	0xc8 RPM
Kp	0x6a	Global N	0x34 %
Ti	0x6b ms	N limit +	0x3f %
Td	0x6c ms	N limit -	0x3e %
TiM	0x71 %	Volt/freq control	
Field		T dc	0x07 L ms
Id nom	0xb2 %	V dc	0x08 L %
Id min	0xb5 %	V min	0x0a L %
V red	0x8b %	F min	0x0b L Hz
V kp	0x8c	V corner	0x0c L %
V-Ti	0x8d ms	F corner	0x0d L Hz

7. Revision history

This section describes the revision history of document no. 4189360019.

Apart from editorial changes the following changes have been made in this revision:

Date	Revision	Changes
2018-07-04	E	Updated to reflect changes in the IMD Manager: <ul style="list-style-type: none"> • “Monitor” tab screen dump and description updated • “Configuration 1/3” motor data and General servo (IMD) data groups updated • “States” screen dump updated
2018-02-15	D	Updated to reflect changes in the IMD Manager: <ul style="list-style-type: none"> • Introduction to the IMD manager and entering data updated • “Monitor” tab screen dump and description updated • “Configuration 1/3” tab screen dump and description updated (general, motor data, general servo, safety run, CAN bus, safe energy test). • “Configuration 2/3” tab screen dump and description updated (speed parameters, current parameters) • “States” tab screen dump updated • Revision history moved to the end of the document
2017-10-18	C	Updated to reflect changes in the IMD Manager: <ul style="list-style-type: none"> • “Monitor” tab screen dump and description updated • “CAN bus” group in “Configuration 1/3” completely updated • New screen dump of “States” tab (states chart updated, WAR. Changed to WARN. in list) • Screen dump for “Configuration 1/3” updated • “Battery test” and “General servo...” group in “Configuration 1/3” updated • Quick access area updated with NcR0
2017-02-28	B	Updated to reflect changes in the IMD Manager: <ul style="list-style-type: none"> • Resolver and SSI encoder readings added to “Monitor” tab • State flow chart updated • Description of Operating values in the “Monitor” tab updated • Description of output logic improved • Errors and warnings lists added to screen in the States tab
2016-12-21	A	This is the first version of the document.

8. Glossary

8.1 Terms and abbreviations

Baudrate	Transmission speed
IMD	Integrated Motor Drive
N/A	Not applicable
PID	Proportional Integral Derivative (controller)
PMC	Pitch Motor Controller
RMS	Root mean square
RPM	Rounds per minute
SCI	Safety-Chain Input
SCR	Safety-Chain Relay
SE	Safe Energy

8.2 Units

Unit	Unit Name	Quantity name	US unit	US name	Conversion	Alternative units
A	ampere	Current				
°C	degrees Celsius	Temperature	°F	Fahrenheit	$T[^{\circ}C] = \frac{(T[^{\circ}F] - 32^{\circ}) \times 5}{9}$	
Hz	hertz	Frequency (cycles per second)				
bps	Bits per second	Data transmission speed				
m	metre	length	ft	foot (or feet)	1 m = 3.28 ft	
mA	milliampere	Current				
ms	millisecond	Time				
Nm	Newton metre	Torque	Lb-in	pound-force inch	1 Nm = 8.85 lb-in	
RPM	revolutions per minute	Frequency of rotation (rotational speed)				
s	second	Time				
V	volt	Voltage				
V AC	volt (alternating current)	Voltage (alternating current)				

Unit	Unit Name	Quantity name	US unit	US name	Conversion	Alternative units
V DC	volt (direct current)	Voltage (direct current)				
W	watt	Power				
Ω	ohm	Resistance				