


Description of options



Option M15, Configurable I/O extension cards Four 4...20mA inputs PPU Power Management (PPM)

4189340421A
SW version 2.5X.X

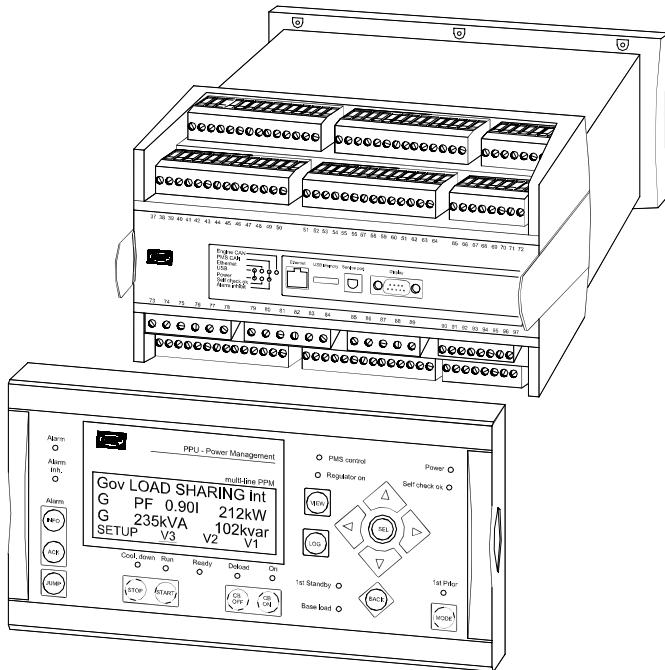

- Description of option
- Functional description
- Parameter list



Table of contents

1. WARNINGS AND LEGAL INFORMATION	3
LEGAL INFORMATION AND RESPONSIBILITY	3
ELECTROSTATIC DISCHARGE AWARENESS	3
SAFETY ISSUES.....	3
DEFINITIONS	3
2. DESCRIPTION OF OPTION.....	4
M15 OPTION	4
TERMINAL DESCRIPTION	4
3. FUNCTIONAL DESCRIPTION	5
PC UTILITY SOFTWARE CONFIGURATION	5
4. PARAMETER LIST	7

1. Warnings and legal information

Legal information and responsibility

DEIF takes no responsibility for installation or operation of the generator set. If there is any doubt about how to install or operate the generator set controlled by the unit, the company responsible for the installation or the operation of the set must be contacted.

The units are not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

Electrostatic discharge awareness

Sufficient care must be taken to protect the terminals against static discharges during the installation. Once the unit is installed and connected, these precautions are no longer necessary.

Safety issues

Installing the unit implies work with dangerous currents and voltages. Therefore, the installation should only be carried out by authorised personnel who understand the risks involved in working with live electrical equipment.



Be aware of the hazardous live currents and voltages. Do not touch any AC measurement inputs as this could lead to injury or death.

Definitions

Throughout this document a number of notes and warnings will be presented. To ensure that these are noticed, they will be highlighted in order to separate them from the general text.

Notes



The notes provide general information which will be helpful for the reader to bear in mind.

Warning



The warnings indicate a potentially dangerous situation which could result in death, personal injury or damaged equipment, if certain guidelines are not followed.

2. Description of option

M15 option

Option M15 is a hardware option, and therefore a separate PCB is installed in slot #6 in addition to the standard-installed hardware.

Option M15 covers the following ANSI code:

Function	ANSI no.
4 x configurable 4...20mA inputs	-

Terminal description

Term.	Function	Technical data	Description
90	Analogue input 91	Common	4...20mA input, configurable
91	Analogue input 91	4...20mA in	
92	Analogue input 93	Common	4...20mA input, configurable
93	Analogue input 93	4...20mA in	
94	Analogue input 95	Common	4...20mA input, configurable
95	Analogue input 95	4...20mA in	
96	Analogue input 97	Common	4...20mA input, configurable
97	Analogue input 97	4...20mA in	



Please refer to the Application Notes for the connection of active and passive sensors.


3. Functional description

PC utility software configuration

The PC utility software is a Windows® based software, which can be downloaded from our website www.deif.com. To adjust the inputs via the PC utility software, a computer must be connected to the controller unit. Furthermore, the unit parameters must be uploaded to the computer.

Alarm input configuration

The alarm input is configured by selecting the correct input in the parameter file (in this example analogue input 91.1):

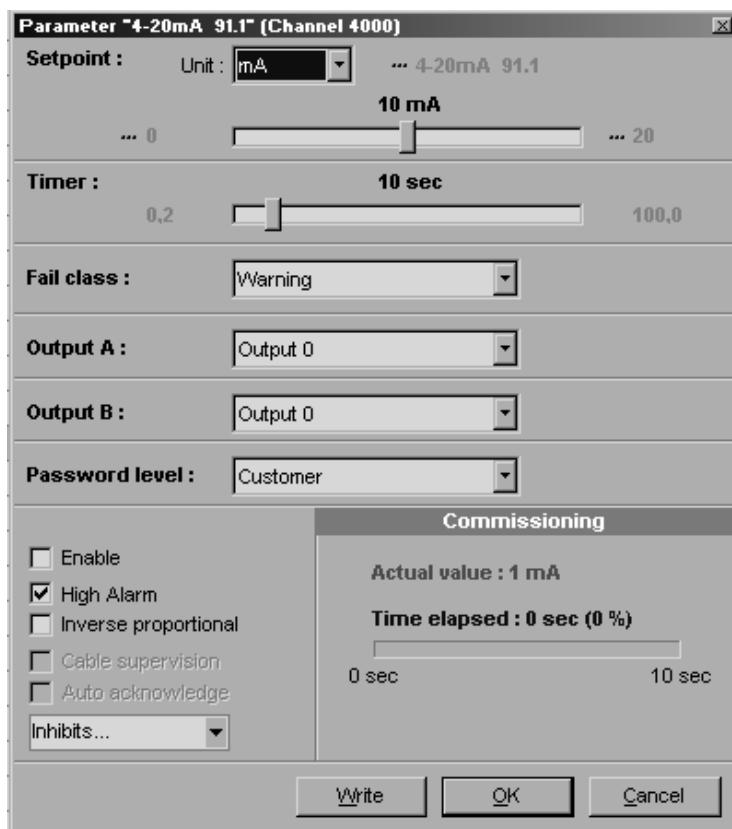

Configuration dialogue box

Set point

The set point can be adjusted by moving the glider left or right or by clicking the present set point. (Above click '10mA').

Timer

The timer can be adjusted by moving the glider left or right or by clicking the present set point. (Above click '15 sec').

Fail class

Select the appropriate fail class.

Output A/output B

Select which relay to activate in connection with an alarm.

Password level

3 password levels are available. This specific alarm menu can only be entered, if the correct level of password is entered. If the current password level is not sufficient, a notification will be displayed.

Enable

Mark this check box to enable the alarm function.

High alarm

Mark this check box to receive an alarm, when the input is above the set point. Unmark this check box to receive an alarm, when the input is below the set point.

4. Parameter list



For further information about the structure of the parameter descriptions, please see the Designer's Reference Handbook.

4000 Configurable (4...20mA input 91 - set point 1)

No.	Setting		Min. setting	Max. setting	Factory setting
4000	4...20mA input 91.1	Selection display	-	-	-
4001	4...20mA input 91.1	Set point	0mA	20mA	10mA
4002	4...20mA input 91.1	Timer	0.2 s	100.0 s	10.0 s
4003	4...20mA input 91.1	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4004	4...20mA input 91.1	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4005	4...20mA input 91.1	Enable	OFF	ON	OFF
4006	4...20mA input 91.1	Fail class	Warning	Sys. alarm	Warning

4010 Configurable (4...20mA input 91 - set point 2)

No.	Setting		Min. setting	Max. setting	Factory setting
4010	4...20mA input 91.2	Selection display	-	-	-
4011	4...20mA input 91.2	Set point	0mA	20mA	10mA
4012	4...20mA input 91.2	Timer	0.2 s	100.0 s	10.0 s
4013	4...20mA input 91.2	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4014	4...20mA input 91.2	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4015	4...20mA input 91.2	Enable	OFF	ON	OFF
4016	4...20mA input 91.2	Fail class	Warning	Sys. alarm	Warning

4020 Wire break failure supervision for analogue input 91

No.	Setting		Min. setting	Max. setting	Factory setting
4020	Wire f. no. 91	Selection display	-	-	-
4021	Wire f. no. 91	Timer	0.2 s	100.0 s	1.0 s
4022	Wire f. no. 91	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4023	Wire f. no. 91	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4024	Wire f. no. 91	Enable	OFF	ON	OFF
4025	Wire f. no. 91	Fail class	Warning	Sys. alarm	Warning

4030 Configurable (4...20mA input 93 - set point 1)

No.	Setting		Min. setting	Max. setting	Factory setting
4030	4...20mA input 93.1	Selection display	-	-	-
4031	4...20mA input 93.1	Set point	0mA	20mA	10mA
4032	4...20mA input 93.1	Timer	0.2 s	100.0 s	10.0 s
4033	4...20mA input 93.1	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4034	4...20mA input 93.1	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4035	4...20mA input 93.1	Enable	OFF	ON	OFF
4036	4...20mA input 93.1	Fail class	Warning	Sys. alarm	Warning

4040 Configurable (4...20mA input 93 - set point 2)

No.	Setting		Min. setting	Max. setting	Factory setting
4040	4...20mA input 93.2	Selection display	-	-	-
4041	4...20mA input 93.2	Set point	0mA	20mA	10mA
4042	4...20mA input 93.2	Timer	0.2 s	100.0 s	10.0 s
4043	4...20mA input 93.2	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4044	4...20mA input 93.2	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4045	4...20mA input 93.2	Enable	OFF	ON	OFF
4046	4...20mA input 93.2	Fail class	Warning	Sys. alarm	Warning

4050 Wire break failure supervision for analogue input 93

No.	Setting		Min. setting	Max. setting	Factory setting
4050	Wire f. no. 93	Selection display	-	-	-
4051	Wire f. no. 93	Timer	0.2 s	100.0 s	1.0 s
4052	Wire f. no. 93	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4053	Wire f. no. 93	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4054	Wire f. no. 93	Enable	OFF	ON	OFF
4055	Wire f. no. 93	Fail class	Warning	Sys. alarm	Warning

4060 Configurable (4...20mA input 95 - set point 1)

No.	Setting		Min. setting	Max. setting	Factory setting
4060	4...20mA input 95.1	Selection display	-	-	-
4061	4...20mA input 95.1	Set point	0mA	20mA	10mA
4062	4...20mA input 95.1	Timer	0.2 s	100.0 s	10.0 s
4063	4...20mA input 95.1	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4064	4...20mA input 95.1	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4065	4...20mA input 95.1	Enable	OFF	ON	OFF
4066	4...20mA input 95.1	Fail class	Warning	Sys. alarm	Warning

4070 Configurable (4...20mA input 95 - set point 2)

No.	Setting		Min. setting	Max. setting	Factory setting
4070	4...20mA input 95.2	Selection display	-	-	-
4071	4...20mA input 95.2	Set point	0mA	20mA	10mA
4072	4...20mA input 95.2	Timer	0.2 s	100.0 s	10.0 s
4073	4...20mA input 95.2	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4074	4...20mA input 95.2	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4075	4...20mA input 95.2	Enable	OFF	ON	OFF
4076	4...20mA input 95.2	Fail class	Warning	Sys. alarm	Warning

4080 Wire break failure supervision for analogue input 95

No.	Setting		Min. setting	Max. setting	Factory setting
4080	Wire f. no. 95	Selection display	-	-	-
4081	Wire f. no. 95	Timer	0.2 s	100.0 s	1.0 s
4082	Wire f. no. 95	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4083	Wire f. no. 95	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4084	Wire f. no. 95	Enable	OFF	ON	OFF
4085	Wire f. no. 95	Fail class	Warning	Sys. alarm	Warning

4090 Configurable (4...20mA input 97 - set point 1)

No.	Setting		Min. setting	Max. setting	Factory setting
4090	4...20mA input 97.1	Selection display	-	-	-
4091	4...20mA input 97.1	Set point	0mA	20mA	10mA
4092	4...20mA input 97.1	Timer	0.2 s	100.0 s	10.0 s
4093	4...20mA input 97.1	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4094	4...20mA input 97.1	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4095	4...20mA input 97.1	Enable	OFF	ON	OFF
4096	4...20mA input 97.1	Fail class	Warning	Sys. alarm	Warning

4100 Configurable (4...20mA input 97 - set point 2)

No.	Setting		Min. setting	Max. setting	Factory setting
4100	4...20mA input 97.2	Selection display	-	-	-
4101	4...20mA input 97.2	Set point	0mA	20mA	10mA
4102	4...20mA input 97.2	Timer	0.2 s	100.0 s	10.0 s
4103	4...20mA input 97.2	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4104	4...20mA input 97.2	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4105	4...20mA input 97.2	Enable	OFF	ON	OFF
4106	4...20mA input 97.2	Fail class	Warning	Sys. alarm	Warning

4110 Wire break failure supervision for analogue input 97

No.	Setting		Min. setting	Max. setting	Factory setting
4110	Wire f. no. 97	Selection display	-	-	-
4111	Wire f. no. 97	Timer	0.2 s	100.0 s	1.0 s
4112	Wire f. no. 97	Relay output A	R0 (none)	RX (relay X) *	R0 (none) *
4113	Wire f. no. 97	Relay output B	R0 (none)	RX (relay X) *	R0 (none)
4114	Wire f. no. 97	Enable	OFF	ON	OFF
4115	Wire f. no. 97	Fail class	Warning	Sys. alarm	Warning



*: The number of relays available is dependent on the options chosen.

DEIF A/S reserves the right to change any of the above